

GETTING STARTED


1

Insert CD, then choose Install NI-488.2 Software for Windows.




2

Restart computer.

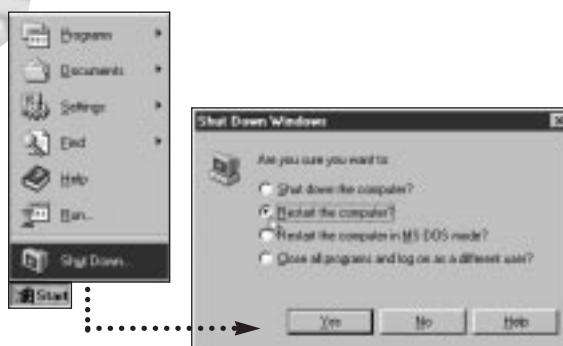

3

Connect cable*.

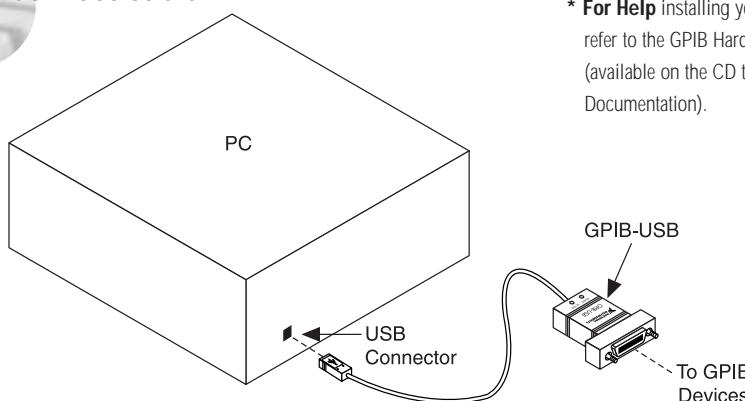

* For Help installing your hardware, refer to the GPIB Hardware Guide (available on the CD through View Documentation).

(Continued)

4

Run NI-488.2 Getting Started Wizard.



www.natinst.com/support/

support@natinst.com

Tel: (512) 795-8248 • Fax: (512) 683-5678

Fax-on demand: (512) 418-1111 • ftp.natinst.com



020899

322264A-01