

Power Supply

NI PS-14 Power Supply User Manual



Worldwide Technical Support and Product Information

ni.com

Worldwide Offices

Visit ni.com/niglobal to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

National Instruments Corporate Headquarters

11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 683 0100

For further support information, refer to the *NI Services* appendix. To comment on NI documentation, refer to the NI website at ni.com/info and enter the Info Code `feedback`.

© 2013–2023 National Instruments Corporation. All rights reserved.

Legal Information

Limited Warranty

This document is provided 'as is' and is subject to being changed, without notice, in future editions. For the latest version, refer to ni.com/manuals. NI reviews this document carefully for technical accuracy; however, NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS.

NI warrants that its hardware products will be free of defects in materials and workmanship that cause the product to fail to substantially conform to the applicable NI published specifications for one (1) year from the date of invoice.

For a period of ninety (90) days from the date of invoice, NI warrants that (i) its software products will perform substantially in accordance with the applicable documentation provided with the software and (ii) the software media will be free from defects in materials and workmanship.

If NI receives notice of a defect or non-conformance during the applicable warranty period, NI will, in its discretion: (i) repair or replace the affected product, or (ii) refund the fees paid for the affected product. Repaired or replaced Hardware will be warranted for the remainder of the original warranty period or ninety (90) days, whichever is longer. If NI elects to repair or replace the product, NI may use new or refurbished parts or products that are equivalent to new in performance and reliability and are at least functionally equivalent to the original part or product.

You must obtain an RMA number from NI before returning any product to NI. NI reserves the right to charge a fee for examining and testing Hardware not covered by the Limited Warranty.

This Limited Warranty does not apply if the defect of the product resulted from improper or inadequate maintenance, installation, repair, or calibration (performed by a party other than NI); unauthorized modification; improper environment; use of an improper hardware or software key; improper use or operation outside of the specification for the product; improper voltages; accident, abuse, or neglect; or a hazard such as lightning, flood, or other act of nature.

THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND THE CUSTOMER'S SOLE REMEDIES, AND SHALL APPLY EVEN IF SUCH REMEDIES FAIL OF THEIR ESSENTIAL PURPOSE.

EXCEPT AS EXPRESSLY SET FORTH HEREIN, PRODUCTS ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND AND NI DISCLAIMS ALL WARRANTIES, EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE OR NON-INFRINGEMENT, AND ANY WARRANTIES THAT MAY ARISE FROM USAGE OF TRADE OR COURSE OF DEALING. NI DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF OR THE RESULTS OF THE USE OF THE PRODUCTS IN TERMS OF CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE. NI DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCTS WILL BE UNINTERRUPTED OR ERROR FREE.

In the event that you and NI have a separate signed written agreement with warranty terms covering the products, then the warranty terms in the separate agreement shall control.

Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

National Instruments respects the intellectual property of others, and we ask our users to do the same. NI software is protected by copyright and other intellectual property laws. Where NI software may be used to reproduce software or other materials belonging to others, you may use NI software only to reproduce materials that you may reproduce in accordance with the terms of any applicable license or other legal restriction.

End-User License Agreements and Third-Party Legal Notices

You can find end-user license agreements (EULAs) and third-party legal notices in the following locations:

- Notices are located in the <National Instruments>_Legal Information and <National Instruments> directories.
- EULAs are located in the <National Instruments>\Shared\MDF\Legal\license directory.
- Review <National Instruments>_Legal Information.txt for information on including legal information in installers built with NI products.

U.S. Government Restricted Rights

If you are an agency, department, or other entity of the United States Government ("Government"), the use, duplication, reproduction, release, modification, disclosure or transfer of the technical data included in this manual is governed by the Restricted Rights provisions under Federal Acquisition Regulation 52.227-14 for civilian agencies and Defense Federal Acquisition Regulation Supplement Section 252.227-7014 and 252.227-7015 for military agencies.

Trademarks

Refer to the *NI Trademarks and Logo Guidelines* at ni.com/trademarks for more information on NI trademarks.

ARM, Keil, and μ Vision are trademarks or registered of ARM Ltd or its subsidiaries.

LEGO, the LEGO logo, WEDO, and MINDSTORMS are trademarks of the LEGO Group.

TETRIX by Pitsco is a trademark of Pitsco, Inc.

FIELDBUS FOUNDATION™ and FOUNDATION™ are trademarks of the Fieldbus Foundation.

EtherCAT® is a registered trademark of and licensed by Beckhoff Automation GmbH.

CANopen® is a registered Community Trademark of CAN in Automation e.V.

DeviceNet™ and EtherNet/IP™ are trademarks of ODVA.

Go!, SensorDAQ, and Vernier are registered trademarks of Vernier Software & Technology. Vernier Software & Technology and vernier.com are trademarks or trade dress.

Xilinx is the registered trademark of Xilinx, Inc.

Taptite and Trilobular are registered trademarks of Research Engineering & Manufacturing Inc.

FireWire® is the registered trademark of Apple Inc.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Handle Graphics®, MATLAB®, Simulink®, Stateflow®, and xPC TargetBox® are registered trademarks, and Simulink Coder™, TargetBox™, and Target Language Compiler™ are trademarks of The MathWorks, Inc.

Tektronix®, Tek, and Tektronix, Enabling Technology are registered trademarks of Tektronix, Inc.

The Bluetooth® word mark is a registered trademark owned by the Bluetooth SIG, Inc.

The ExpressCard™ word mark and logos are owned by PCMCIA and any use of such marks by National Instruments is under license.

The mark LabWindows is used under a license from Microsoft Corporation. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Other product and company names mentioned herein are trademarks or trade names of their respective companies.

Members of the National Instruments Alliance Partner Program are business entities independent from NI and have no agency, partnership, or joint-venture relationship with NI.

Patents

For patents covering NI products/technology, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patent Notice* at ni.com/patents.

Export Compliance Information

Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data.

WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

YOU ARE ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY AND RELIABILITY OF THE PRODUCTS WHENEVER THE PRODUCTS ARE INCORPORATED IN YOUR SYSTEM OR APPLICATION, INCLUDING THE APPROPRIATE DESIGN, PROCESS, AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

PRODUCTS ARE NOT DESIGNED, MANUFACTURED, OR TESTED FOR USE IN LIFE OR SAFETY CRITICAL SYSTEMS, HAZARDOUS ENVIRONMENTS OR ANY OTHER ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, INCLUDING IN THE OPERATION OF NUCLEAR FACILITIES; AIRCRAFT NAVIGATION; AIR TRAFFIC CONTROL SYSTEMS; LIFE SAVING OR LIFE SUSTAINING SYSTEMS OR SUCH OTHER MEDICAL DEVICES; OR ANY OTHER APPLICATION IN WHICH THE FAILURE OF THE PRODUCT OR SERVICE COULD LEAD TO DEATH, PERSONAL INJURY, SEVERE PROPERTY DAMAGE OR ENVIRONMENTAL HARM (COLLECTIVELY, "HIGH-RISK USES"). FURTHER, PRUDENT STEPS MUST BE TAKEN TO PROTECT AGAINST FAILURES, INCLUDING PROVIDING BACK-UP AND SHUT-DOWN MECHANISMS. NI EXPRESSLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS OF THE PRODUCTS OR SERVICES FOR HIGH-RISK USES.

Compliance

Electromagnetic Compatibility Information

This hardware has been tested and found to comply with the applicable regulatory requirements and limits for electromagnetic compatibility (EMC) as indicated in the hardware's Declaration of Conformity (DoC)¹. These requirements and limits are designed to provide reasonable protection against harmful interference when the hardware is operated in the intended electromagnetic environment. In special cases, for example when either highly sensitive or noisy hardware is being used in close proximity, additional mitigation measures may have to be employed to minimize the potential for electromagnetic interference.

While this hardware is compliant with the applicable regulatory EMC requirements, there is no guarantee that interference will not occur in a particular installation. To minimize the potential for the hardware to cause interference to radio and television reception or to experience unacceptable performance degradation, install and use this hardware in strict accordance with the instructions in the hardware documentation and the DoC¹.

If this hardware does cause interference with licensed radio communications services or other nearby electronics, which can be determined by turning the hardware off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient the antenna of the receiver (the device suffering interference).
- Relocate the transmitter (the device generating interference) with respect to the receiver.
- Plug the transmitter into a different outlet so that the transmitter and the receiver are on different branch circuits.

Some hardware may require the use of a metal, shielded enclosure (windowless version) to meet the EMC requirements for special EMC environments such as, for marine use or in heavy industrial areas. Refer to the hardware's user documentation and the DoC¹ for product installation requirements.

When the hardware is connected to a test object or to test leads, the system may become more sensitive to disturbances or may cause interference in the local electromagnetic environment.

Operation of this hardware in a residential area is likely to cause harmful interference. Users are required to correct the interference at their own expense or cease operation of the hardware.

Changes or modifications not expressly approved by National Instruments could void the user's right to operate the hardware under the local regulatory rules.

¹ The Declaration of Conformity (DoC) contains important EMC compliance information and instructions for the user or installer. To obtain the DoC for this product, visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Contents

About This Manual

| | |
|-----------------------------|----|
| Related Documentation | ix |
|-----------------------------|----|

Chapter 1

Getting Started

| | |
|------------------------------------|-----|
| Unpacking..... | 1-1 |
| What You Need to Get Started | 1-1 |
| Key Features | 1-1 |
| Power Supply Description | 1-2 |
| Output Terminals..... | 1-3 |
| Output Voltage Potentiometer | 1-3 |
| DC On LED | 1-4 |
| Input Terminals..... | 1-4 |
| Mounting Equipment..... | 1-4 |
| Side Mounting Kit | 1-4 |
| Panel Mounting Kit | 1-4 |

Chapter 2

Installation and Configuration

| | |
|---|------|
| Mounting Orientation and Installation | 2-1 |
| Wiring The Terminals | 2-3 |
| Operating the NI PS-14 | 2-4 |
| Serial Operation..... | 2-4 |
| Parallel Operation | 2-4 |
| Two-Phase Power Operation | 2-5 |
| External Input Protection..... | 2-5 |
| Operation in a Sealed Enclosure..... | 2-6 |
| Cooling | 2-6 |
| Hazardous Risks | 2-6 |
| Service Parts | 2-7 |
| Peak Current Capability..... | 2-7 |
| Charging Batteries | 2-8 |
| Back Feeding Loads | 2-8 |
| Output Circuit Breakers..... | 2-8 |
| Inductive and Capacitive Loads | 2-10 |

Appendix A

Specifications

| | |
|----------------------------|-----|
| Dimensions and Weight..... | A-1 |
| AC Input | A-2 |
| DC Input | A-4 |

Contents

| | |
|-----------------------------------|------|
| Input Current Inrush Surge | A-5 |
| Hold-up Time..... | A-6 |
| Output | A-7 |
| Peak Current Capability..... | A-8 |
| Efficiency and Power Losses | A-8 |
| Reliability..... | A-9 |
| Dielectric Strength | A-10 |
| Used Substances | A-11 |
| Environment..... | A-12 |
| Protection Features | A-13 |

Appendix B NI Services

Index

About This Manual

The *NI PS-14 Power Supply User Manual* describes the features and specifications of the NI PS-14 power supply and contains information about installing the power supply.

Related Documentation

The following documents contain information you might find helpful as you read this manual:

- *NI PS-14/15/16/17/25/26 Side Mount Brackets Installation Guide*
- *NI PS-14/15/16/17 Panel Mount Brackets Installation Guide*
- *NI PS-14/15/16/17 Instruction Manual*

Getting Started

This chapter describes the key features of the NI PS-14 power supply and lists the kit contents and mounting equipment you can order from NI.

Unpacking

Carefully inspect the shipping container and the power supply for damage. Check for visible damage to the metal work. If damage appears to have been caused during shipment, file a claim with the carrier. Retain the packing material for possible inspection and/or reshipment.

What You Need to Get Started

The NI PS-14 kit contains the following items:

- NI PS-14 power supply
- Printed *NI PS-14 Power Supply User Manual*

Key Features

The NI PS-14 has a short-term power capability of 150% and built-in large sized output capacitors to help start motors, charge capacitors, and absorb reverse energy. A wide range input voltage design and a negligible low input inrush current make installation and use simple.

The NI PS-14 includes the following key features:

- Wide-range 100 to 240 V input
- Small size—power supply width of only 32 mm
- High efficiency—efficiency up to 89.8%
- 150% peak load capability
- DC input from 110 to 300 V_{DC}
- Active power factor correction (PFC)



Caution Must be mounted in an enclosure by qualified personnel.

This power supply is designed for installation in an enclosure and is intended for general use, such as in industrial control, office, communication, and instrumentation equipment. Do not use this device in aircraft, trains, and nuclear equipment, where malfunctioning of the power supply may cause severe personal injury or threaten human life. For more information, refer to Appendix A, *Specifications*.

Power Supply Description

Figures 1-1 and 1-2 show the functional description and front panel features of the NI PS-14.

Figure 1-1 shows the functional diagram for the NI PS-14.

Figure 1-1. NI PS-14 Functional Diagram


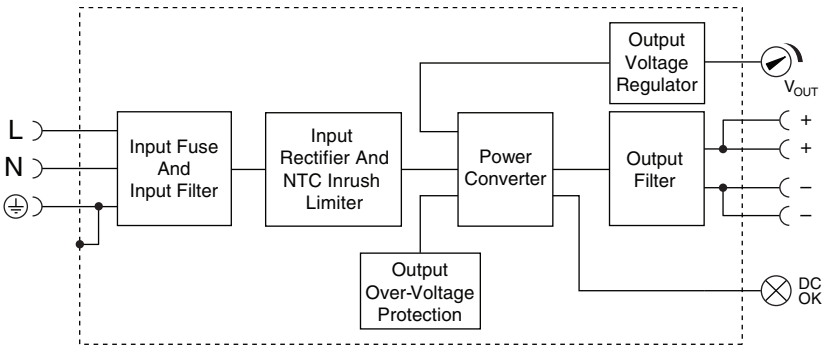


Figure 1-2 shows the NI PS-14 front panel features.

Figure 1-2. NI PS-14 Front View

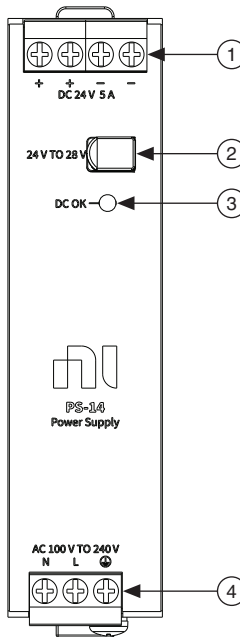

- | | |
|--------------------------------------|-------------------------------------|
| 1 Output Terminals (Screw Terminals) | 3 DC On LED |
| 2 Output Voltage Potentiometer | 4 Input Terminals (Screw Terminals) |

Output Terminals

The NI PS-14 has four output terminals, two positive (+) and two negative (-). The positive terminals are wired together internally, and the negative terminals are wired together internally, as shown in Figure 1-1. The output terminals provide 24 V_{DC} with 3.3 A of current.

Output Voltage Potentiometer



Note You must open the protective flap to turn the potentiometer.

The output voltage potentiometer, shown in Figure 1-2, sets the output voltage from the NI PS-14. The factory setting output voltage is 24.1 V \pm 0.2% (at full load when the power supply is cold), and the potentiometer allows adjusting the output voltage from 24-28 V on any unit. (The potentiometer allows adjusting output voltage above 28 V, but voltages beyond 28 V are *not* guaranteed.)



Note Output voltages greater than 28 V are not supported on an NI PS-14 unit.

DC On LED

This green LED indicates the status of available DC power through the output terminals. If the LED is lit, DC output of greater than 21 V is available for use through the output terminals. If the LED is not lit, DC is not currently available. The DC On LED is wired internally to the power conversion circuitry prior to the output filtering stage, as shown in Figure 1-1.

If the DC On LED does not light when power is provided through the input terminals, it may indicate a problem with the power supply. Contact NI for more details.

Input Terminals



Caution NI recommends that you wire all three input terminals for proper operation of the NI PS-14.

The NI PS-14 derives power through the input terminals on the front panel, shown in Figure 1-2. There are three terminals corresponding to the Neutral input, the Line (or hot) input, and the Protective Earth (PE) input. The NI PS-14 rectifies both single-phase and two-phase AC input. The Neutral input terminal provides a MAINS return path for the input circuitry. The Line input is the primary power input for the supply. The PE input corresponds to an earth ground. As shown in Figure 1-1, the power supply case itself is grounded to the PE input.

Mounting Equipment

Contact NI to order the following mounting options for the NI PS-14. Refer to Table 1-1 for part numbers.

Table 1-1. Mounting Equipment

| Part Number | Mounting Kit |
|-------------|--|
| 199429-01 | SIDE MOUNTING KIT FOR NI PS-14/15/25 |
| 199432-01 | PANEL MOUNTING KIT FOR NI PS-14/15/16/17 |

Side Mounting Kit

The Side Mounting Kit (199429-01) allows you to mount the NI PS-14 on its side to a wall, panel surface, or a DIN-Rail for reduced installation depth. Refer to the *NI PS-14/15/16/17/25/26 Side Mount Brackets Installation Guide* at ni.com for more information.

Panel Mounting Kit

The Panel Mounting Kit (199432-01) allows you to mount the NI PS-14 to a wall or panel surface without using a DIN-Rail. Refer to the *NI PS-14/15/16/17 Panel Mount Brackets Installation Guide* at ni.com for more information.

Installation and Configuration

This chapter describes how to prepare and operate the NI PS-14 power supply.

Mounting Orientation and Installation

This section describes the different mounting orientations and the effect that mounting orientation has on power supply performance.

Mounting orientations other than input terminals on the bottom and output on the top require a reduction in continuous output power or a limitation in the maximum allowed ambient temperature. The amount of reduction influences the lifetime expectancy of the power supply. Therefore, two different derating curves for continuous operation are referenced in Figure 2-1:



- **Curve A1**—Recommended output current.
- **Curve A2**—Maximum allowed output current (which results in approximately half the lifetime expectancy for the power supply when following curve A1).





Note NI recommends orienting the power supply such that the output terminals are on top and the input terminals on bottom. Figure 2-1 refers to this as the *standard orientation*.

Figure 2-1. NI PS-14 Mounting Orientations



Mounting Orientation A (Standard Orientation)

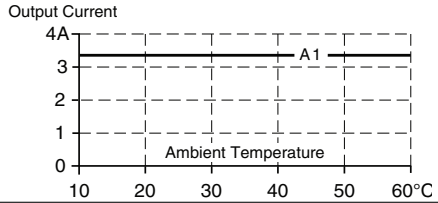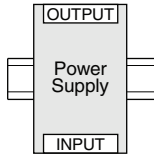



Mounting Orientation B (Upside Down)

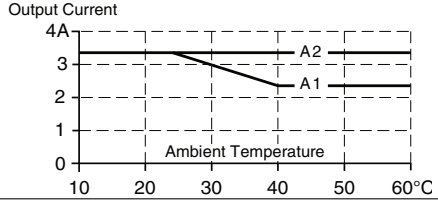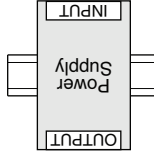



Mounting Orientation C (Table-top Mounting)

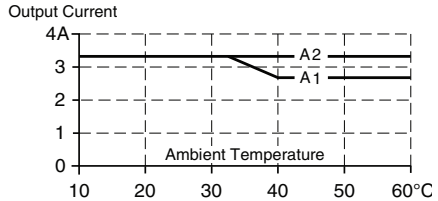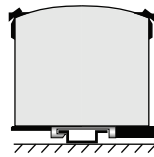

Mounting Orientation D (Horizontal ccw)

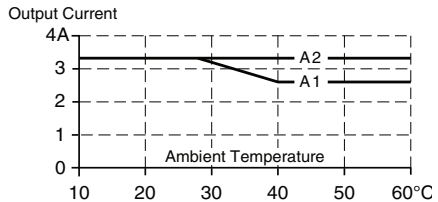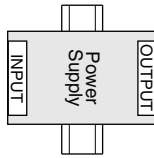

Mounting Orientation E (Horizontal cw)

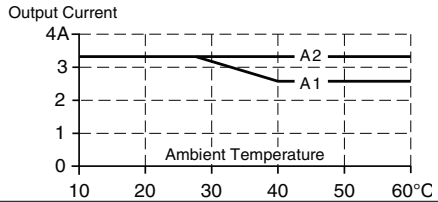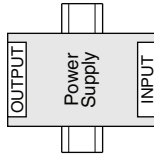

Mount the NI PS-14 according to the installation instructions included with your mounting kit. For details on the mounting options available, refer to the [Mounting Equipment](#) section of Chapter 1, [Getting Started](#).

Wiring The Terminals

This section describes wiring for the NI PS-14. Table 2-1 provides a list of basic requirements for wiring.

Table 2-1. Wiring Requirements

| Type | Screw Terminals |
|-------------------------------|-----------------------------------|
| Solid wire | 0.5 to 6 mm |
| Stranded wire | 0.5 to 4 mm |
| American wire gauge | 20 to 10 AWG |
| Ferrules | Allowed, but not required |
| Wire stripping length | 7 mm (0.275 in.) |
| Screwdriver | 3.5 mm slotted or Pozidrive No. 2 |
| Recommended tightening torque | 1 Nm, 8.85 lb. in. |

Consider the following when wiring the NI PS-14.

- Use appropriate copper cables that are designed for an operating temperature of:
 - 60 °C for ambient up to 45 °C.
 - 75 °C for ambient up to 60 °C minimum.
- Follow national installation codes and installation regulations.
- Ensure all strands of a stranded wire cutter enter the terminal connection.
- Up to two stranded wires with the same cross section are permitted in one connection point (except PE wire).
- Do not use the unit without the PE connection being wired.
- To fulfill GL requirements, unused terminals spaces must be closed.

Complete the following steps to connect wires to the input and output terminals.

1. Ensure that none of the wires are connected to live power.
2. Strip the ends of the wires according to the recommendations in Table 2-1.
3. Loosen the screw terminal you want to connect.
4. Insert the end of the wire into the terminal until the exposed portion of the wire is completely inside of the terminal connection. If you are using stranded wire, ensure that all strands of the wire enter the terminal connection.
5. Refasten the screw terminal.
6. Repeat steps 3 to 5 for each of the other terminals.
7. Ensure that all wires are properly seated and not loose.

8. Ensure that the rest of your equipment is ready to be powered without creating a hazard.
9. Apply MAINS voltage to the NI PS-14.


Operating the NI PS-14

This section provides general information on operating the NI PS-14.

Serial Operation

The NI PS-14 can operate in series to increase the output voltage. Figure 2-2 shows the NI PS-14 in a serial configuration.

Figure 2-2. NI PS-14 in Serial Operation

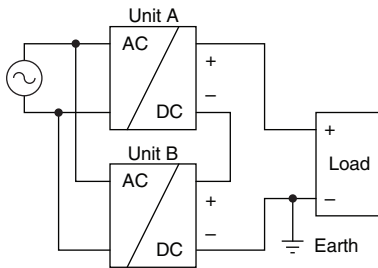

Before operating the NI PS-14 in a serial configuration, consider the following:

- It is possible to connect as many units in series as needed, providing the sum of the output voltage does not exceed $150 V_{DC}$.
- Voltages with a potential above $60 V_{DC}$ are not SELV-compliant any more and can be dangerous. Such voltages must be installed with a protection against touching.
- Use power supplies of the same type for serial operation.
- Earthing of the output is required when the sum of the output voltage is above $60 V_{DC}$.
- Keep an installation clearance of 15 mm (left/right) between two power supplies and avoid installing the power supplies on top of each other.



Caution Avoid return voltage (for example, from a decelerating motor or battery) which is applied to the output terminals.

Parallel Operation



Caution The power supply must *not* be used in parallel for the purpose of increasing the output power.

Power supplies can be paralleled for 1+1 redundancy to gain a higher system availability. Redundant systems require a certain amount of extra power to support the load in case one power supply unit fails. The simplest way is to place two NI PS-14 power supplies in parallel. If one

power supply unit fails, the other one is automatically able to support the load current without any interruption. When using this method of building a redundant system, consider the following:

- The faulty power supply cannot be recognized. The green LED will still be on because it is reverse-powered from the other power supply.
- It does not cover failures such as an internal short circuit in the secondary side of the power supply. In such a case (nearly impossible), the defective unit becomes a load for the other power supplies and the output voltage cannot be maintained.


Recommendations for building redundant power systems:

- Use separate input fuses for each power supply.
- Monitor the individual power supply units.
- When possible, connect each power supply to different phases or circuits.

Two-Phase Power Operation

The NI PS-14 can operate with two-phase power, as shown in Figure 2-3.

Figure 2-3. NI PS-14 in Two-Phase Operation

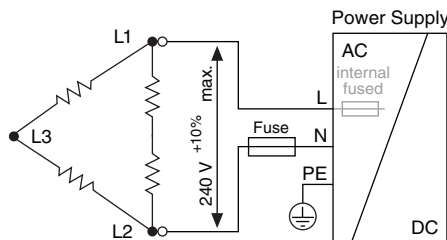

Before operating the NI PS-14 in this configuration, consider the following:

- A phase-to-phase connection is allowed as long as the supplying voltage is below 240 V +10%.
- Use a fuse or a circuit breaker to protect the N (Neutral) input. The N input is not protected internally, and in two-phase configuration would be connected to a hot wire.

Appropriate fuses and circuit breakers are specified in the [External Input Protection](#) section.

External Input Protection

The NI PS-14 is tested and approved for branch circuits up to 20 A. External protection is required only if the supplying branch has an ampacity greater than 20 A. In some countries local regulations might apply, so check local codes and local requirements.

If an external fuse is used, a minimum value is required to avoid undesired tripping of the fuse, shown in Table 2-2.

Table 2-2. Maximum and Minimum Ampacities for External Fuses

| Ampacity | B-Characteristic | C-Characteristic |
|----------|------------------|------------------|
| Minimum | 10 A | 6 A |
| Maximum | 20 A | 20 A |

Operation in a Sealed Enclosure

When the power supply is installed in a tightly sealed enclosure, the temperature inside the enclosure will be higher than outside. The inside temperature defines the ambient temperature for the power supply.

The following is the result of such an installation, where the NI PS-14 was placed in the middle of a sealed enclosure, and no other heat producer was present:

| | |
|-----------------------------------|--|
| Enclosure | Rittal Type IP66 Box PK 9516 100, plastic, 110 mm × 180 mm × 165 mm |
| Input | 230 V _{AC} |
| Load | 24 V, 3.3 A; load is placed outside the box |
| Temperature inside the box | 45.7 °C (in the middle of the right side of the power supply with a distance of 1 cm) |
| Temperature outside the box | 27.3 °C |
| Temperature rise..... | 18.4 K |
| Load | 24 V, 2.64 A; 80% load is placed outside the box |
| Temperature inside the box | 41.8 °C (in the middle of the right side of the power supply with a distance of 1 cm) |
| Temperature outside the box | 26.5 °C |
| Temperature rise..... | 15.3 K |

Cooling

The NI PS-14 is convection cooled, and direct cooling is not required. However, you must not cover the ventilation grid (for example, with cable conduits) by more than 30%.

Proper installation clearance for the NI PS-14 is 40 mm on top, 20 mm on the bottom, and 5 mm on the left and right side when loaded permanently with full power. If the adjacent device is a heat source, 15 mm clearance is recommended between the NI PS-14 and the adjacent device.

Hazardous Risks



Caution Do not use the unit without the proper earth connection (Protective Earth). Use the PE pin on the front panel terminal block for earth connection instead of one of the screws on the housing.

Turn the power off before working on the power supply. Protect against inadvertent re-powering.

Make sure the wiring is correct by following all local and national codes.

Do not open, modify, or repair the unit.

Use caution to prevent any foreign objects from entering into the housing.

Do not use in wet locations or in areas where moisture or condensation can be expected.

Service Parts

The NI PS-14 does not contain any serviceable parts. If an internal fuse trips, it is caused by an internal defect. If damage or malfunction occurs during operation, immediately turn the power off and send the NI PS-14 to NI for inspection.



Note Attempting to repair or modify the NI PS-14 will void your warranty.


Peak Current Capability

Solenoids, contactors and pneumatic modules often have a steady state coil and a pick-up coil. The inrush current demand of the pick-up coil is several times higher than the steady state current and usually exceeds the nominal output current (including the PowerBoost). The same situation applies when starting a capacitive load.


Branch circuits are often protected with circuit breakers or fuses. In case of a short or an overload in the branch circuit, the fuse needs a certain amount of over-current to trip or to blow. The peak current capability ensures the safe operation of subsequent circuit breakers.

Assuming the input voltage is turned on before such an event, the built-in large sized output capacitors inside the power supply can deliver extra current. Discharging this capacitor causes a voltage dip on the output. Figure 2-4 illustrates two typical voltage dips.

Figure 2-4. Peak Current Capacity Output Voltage Dips

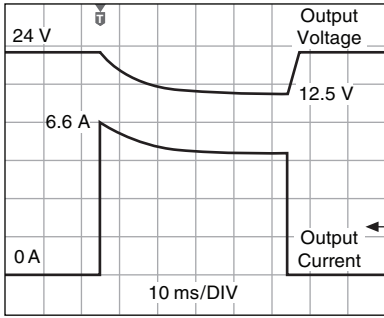

Peak Load 6.6 A (Resistive) for 50 ms
Output Voltage Dips From 24 V to 12.5 V.

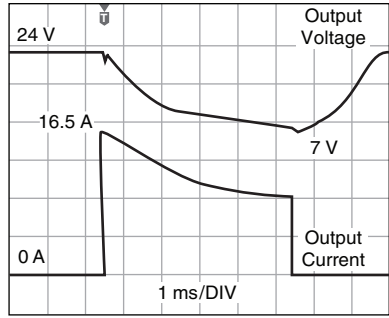

Peak Load 16.5 A (Resistive) for 5 ms
Output Voltage Dips From 24 V to 7 V.

Charging Batteries

The NI PS-14 should *not* be used to charge batteries.

Back Feeding Loads

Loads such as decelerating motors and inductors can feed voltage back to the power supply. This feature is also called return voltage immunity or resistance against back-EMF (Electro Magnetic Force). The NI PS-14 is resistant to this and does not malfunction when a load feeds back voltage to the power supply, regardless of whether the power supply itself is on or off.

The maximum allowed feed back voltage is $35 V_{DC}$. The absorbing energy can be calculated according to the built-in large sized output capacitor, which is specified in the [Output](#) section of Appendix A, [Specifications](#).

Output Circuit Breakers


Standard miniature circuit breakers (MCBs) can be used for branch protection. Ensure that the MCB is also rated for DC voltage. The following two tests show which circuit breakers the power supply typically trips.



Note Circuit breakers have large tolerances in their tripping behavior. Therefore, use these typical tests only as a recommendation or for comparing two different power supplies. Furthermore, the loop impedance has a major influence on whether a breaker trips or not.

Test 1: Short circuit with S1 on the power supply end of the cable (loop impedance approximately 20 mΩ). The input voltage was 230 V_{AC} and the load current was 0 A.

Figure 2-5. Breaker Trip Test 1

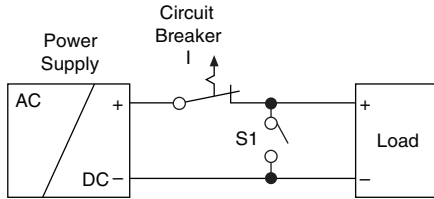


The following circuit breaker tripped during the test:

- A or Z-Characteristic ≤6 A
- B-Characteristic No tripping ≥6 A
No breaker available <6 A
- C-Characteristic ≤1 A

Test 2: Short circuit with S1 on the load end (additional impedance is included in the form of longer load wire length). The input voltage was 230 V_{AC} and the load current was 0 A.

Figure 2-6. Breaker Trip Test 2

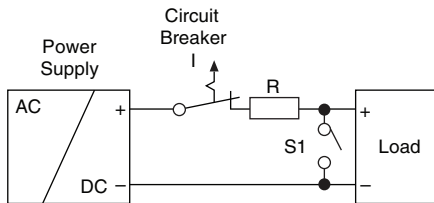

The following circuit breaker tripped during the test:

- A or Z-Characteristic ≤4 A and R = 220 mΩ
- B-Characteristic No tripping ≥6 A
No breaker available <6 A
- C-Characteristic ≤1 A and R = 390 mΩ

Table 2-3 provides a comparison of resistances in terms of wire gauge and length.

Table 2-3. Resistances for Wire Gauges and Lengths

| Resistance | 0.5 mm ² | 0.7 mm ² | 1.0 mm ² | 1.5 mm ² | 2.5 mm ² | 4.0 mm ² |
|------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|
| 220 mΩ | 6.1 m | 8.6 m | 12.3 m | 18.4 m | 30.6 m | 49 m |
| 390 mΩ | 10.9 m | 15.2 m | 21.7 m | 32.6 m | 54.3 m | 86.9 m |

For example: Which wire gauge must be used to trip a C-Characteristic circuit breaker with a rating of 1 A? The load wire length is 25 m.

Answer: A 1 A C-Characteristic circuit breaker requires a loop impedance of less than 390 m Ω (test results). Table 2-3 shows that up to 32.6 m of wire with a cross section of 1.5 mm² is below 390 m Ω . You should not use a wire smaller than 1.5 mm².

Inductive and Capacitive Loads

The NI PS-14 is designed to supply any kind of load, including unlimited capacitive and inductive loads.

Specifications

This appendix includes specifications for the NI PS-14 power supply.



Note Specifications are subject to change without notice.



Caution Must be mounted in an enclosure by qualified personnel. Refer to Figure A-1 for more information.

This power supply is designed for installation in an enclosure and is intended for general use, such as in industrial control, office, communication, and instrumentation equipment. Do not use this device in aircraft, trains and nuclear equipment, where malfunctioning of the power supply may cause severe personal injury or threaten human life.

Dimensions and Weight

Dimensions


Width 32 mm

Height 124 mm

Depth 102 mm

Weight 430 g (0.95 lb)


Figure A-1. NI PS-14 Power Supply

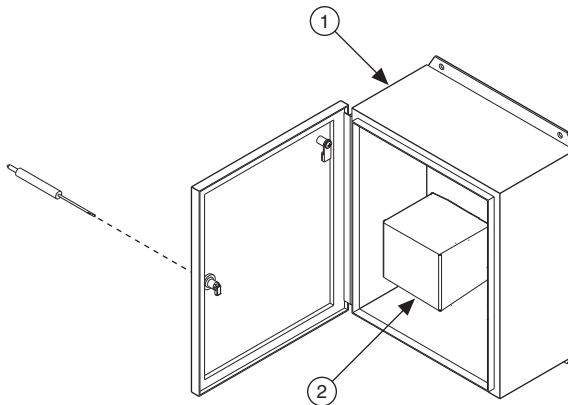

1 Suitably rated NEMA or IP enclosure that requires tool access

2 NI PS-14 power supply

Figure A-2. NI PS-14 Dimensions

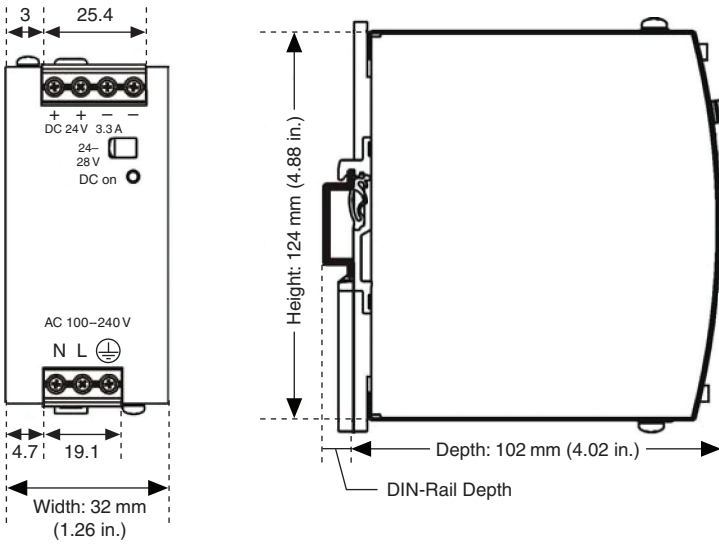

AC Input

| | | |
|-------------------|----------------------------|---|
| AC input | Nominal AC 100 to 240 V | Wide-range input, TN-, TT-, and IT-Mains, refer to Figure A-3 |
| AC input range | 90 to 264 V _{AC} | 100 to 120 V range, continuous operation |
| | 85 to 90 V _{AC} | Short term or with output derating |
| | 264 to 300 V _{AC} | <0.5 s |
| Input frequency | Nominal 50 to 60 Hz | ±6% |
| Turn-on voltage | Typical 75 V _{AC} | Steady-state value, refer to Figure A-3 |
| Shut-down voltage | Typical 58 V _{AC} | Steady-state value, refer to Figure A-3 |

| | Typical/ Maximum | AC 100 V | AC 120 V | AC 230 V | |
|-------------------|---------------------|--------------------|--------------------|--------------------|--|
| Input current | Typical | 1.5 A | 1.24 A | 0.68 A | At 24 V, 3.3 A, refer to Figure A-5 |
| Power factor* | Typical | 0.62 | 0.61 | 0.56 | At 24 V, 3.3 A, refer to Figure A-3 |
| Crest factor† | Typical | 3.1 | 3.2 | 4.0 | At 24 V, 3.3 A |
| Start-up delay | Typical | 95 ms | 95 ms | 95 ms | Refer to Figure A-4 |
| Rise time | Typical | 18 ms | 29 ms | 56 ms | 0 mF, 24 V, 3.3 A, refer to Figure A-4 |
| | Typical | 35 ms | 52 ms | 92 ms | 3.3 mF, 24 V, 3.3 A, refer to Figure A-4 |
| Turn-on overshoot | Maximum | 400 mV | 400 mV | 400 mV | Refer to Figure A-4 |
| Turn-on voltage | Typical | 75 V _{AC} | 75 V _{AC} | 75 V _{AC} | Steady-state value, refer to Figure A-3 |
| Shut-down voltage | Typical | 58 V _{AC} | 58 V _{AC} | 58 V _{AC} | Steady-state value, refer to Figure A-3 |

* The power factor is the ratio of the true (or real) power to the apparent power in an AC circuit.
 † The crest factor is the mathematical ratio of the peak value to the RMS value of the input current waveform.

Figure A-3. Input Voltage Range

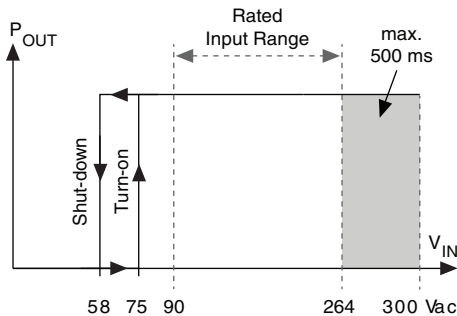


Figure A-4. Turn On Behavior, Definitions

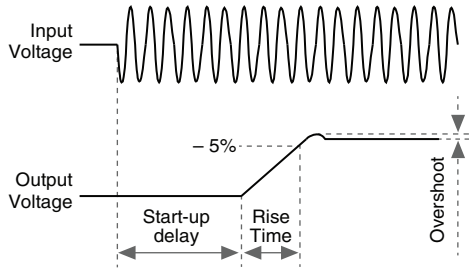


Figure A-5. Input Current Vs. Output Load


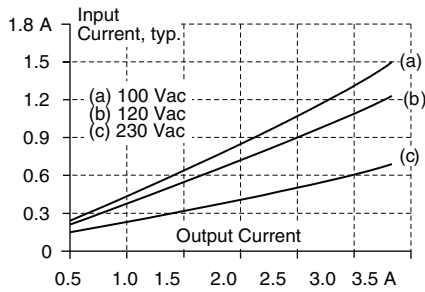


Figure A-6. Power Factor Vs. Output Load

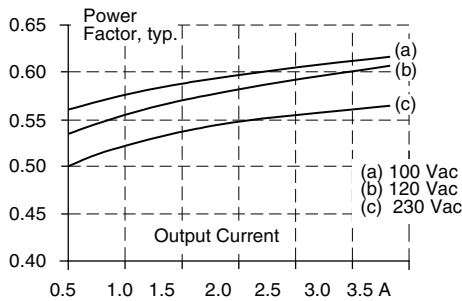


DC Input

| | | | |
|------------------|---------|----------------------------|--|
| DC input | Nominal | 110 to 300 V _{DC} | — |
| DC input range | Minimum | 88 to 375 V _{DC} | Continuous operation |
| DC input current | Typical | 0.81 A/0.29 A | 110 V _{DC} /300 V _{DC} , 24 V, 3.3 A |

| | | | |
|-------------------|---------|---------------------|---|
| Output current | Maximum | 2.5 A | At 24 V and an input voltage between 88 to 110 V _{DC} refer to Figure A-7 |
| | Maximum | 3.3 A | At 24 V and an input voltage between 110 to 375 V _{DC} refer to Figure A-7 |
| Turn-on voltage | Typical | 103 V _{DC} | Steady state value at 2.5 A output load |
| Shut-down voltage | Typical | 50 V _{DC} | Steady state value at 2.5 A output load |

Figure A-7. Output Current Vs. Input Voltage

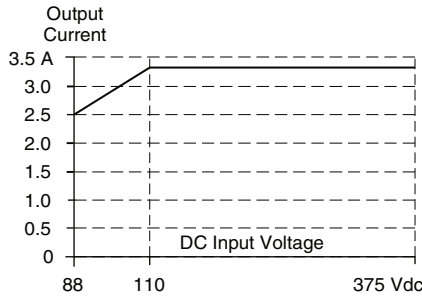


Input Current Inrush Surge

An active inrush limitation circuit limits the input inrush current after input voltage is applied. The charging current into EMI suppression capacitors is disregarded in the first milliseconds after power up.

| | Typical/ Maximum | AC 100 V | AC 120 V | AC 230 V | |
|----------------|---------------------|----------------------|----------------------|----------------------|---------------------|
| Inrush current | Maximum | 24 A _{peak} | 28 A _{peak} | 54 A _{peak} | At 40 °C cold-start |
| | Typical | 20 A _{peak} | 23 A _{peak} | 45 A _{peak} | |
| Inrush energy | Typical | 0.4 A ² s | 0.5 A ² s | 1.7 A ² s | At 40 °C cold-start |

Figure A-8. Input Inrush Current, Typical Behavior

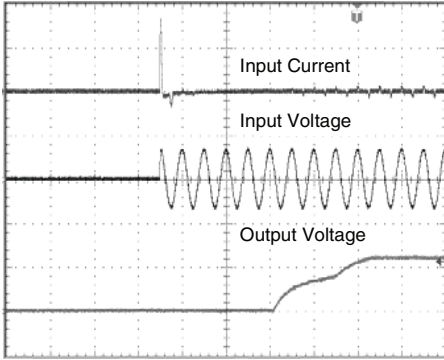

A: Start-up delay = Inrush delay
 Input: 230 Vac
 Output: 24 V, 3.3 A
 Ambient: 25 °C
 Upper curve: Input current 20 A / DIV
 Medium curve: Input voltage 500 V / DIV
 Lower curve: Output voltage 20 V / DIV
 Time scale: 40 ms / DIV

Hold-up Time

| | Typical/ Maximum | AC 100 V | AC 120 V | AC 230 V | |
|-----------------|---------------------|-------------|-------------|-------------|--------------------------------------|
| Hold-up Time | Typical | 38 ms | 60 ms | 244 ms | 1.65 A, 24 V, refer to Figure A-9 |
| | Typical | 19 ms | 29 ms | 120 ms | 3.3 A, 24 V, refer to Figure A-9 |

Figure A-9. Hold-Up Time Vs. Input Voltage


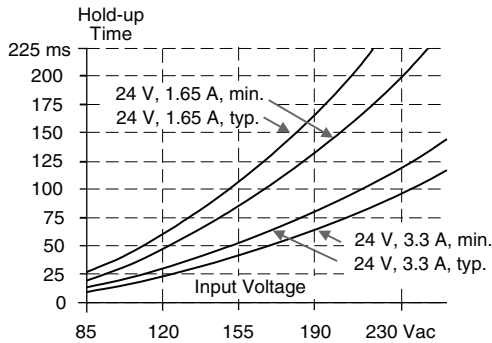


Figure A-10. Shutdown Behavior, Definitions

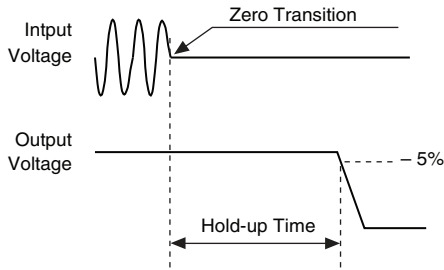


Note At no load, the hold-up time can be up to several seconds. The green DC OK LED is lit during this time.

Output

| | | | |
|--------------------------|--------------------|--------------------|---|
| Output voltage | Nominal | 24 V | — |
| Adjustment range | Minimum Maximum | 24 to 28 V 30 V | Guaranteed At clockwise end position of potentiometer |
| Factory setting | — | 24.1 V | ±0.2%, at full load, cold unit |
| Line regulation | Maximum | 50 mV | 90 V _{AC} to 264 V _{AC} |
| Load regulation | Maximum | 100 mV | Static value, 0 A → 3.3 A → 0 A |
| Ripple and noise voltage | Maximum | 50 mVpp | 20 Hz to 20 MHz, 50 Ω |
| Output capacitance | Typical | 1,450 μF | — |
| Output current | Nominal | 3.3 A | At 24 V, refer to Figure A-11 |
| | Nominal | 2.7 A | At 28 V, refer to Figure A-11 |
| Output power | Nominal | 80 W | — |
| Short-circuit current | Minimum | 4 A | Load impedance 250 mΩ, refer to Figure A-11 |
| | Maximum | 8 A | |

Figure A-11. Output Voltage Vs. Output Current, Typical

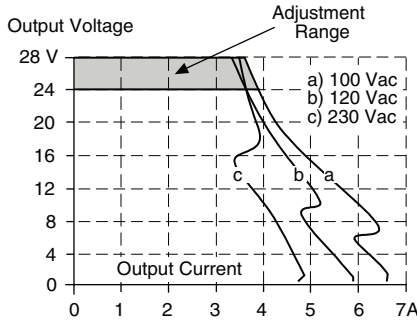

Peak Current Capability

The power supply can deliver a peak current which is higher than the specified short term current. This helps to start current-demanding loads or to safely operate subsequent circuit breakers.


The extra current is supplied by the output capacitors inside the power supply. During this event, the capacitors will be discharged and cause a voltage dip on the output. Detailed curves can be found in the *Peak Current Capability* section of Chapter 2, *Installation and Configuration*.

| | | | |
|---------------------------|---------|---------------------|------------------------------------|
| Peak current voltage dips | Typical | From 24 V to 12.5 V | At 6.6 A for 50 ms, resistive load |
| | Typical | From 24 V to 12.5 V | At 16.5 A for 2 ms, resistive load |
| | Typical | From 24 V to 17 V | At 16.5 A for 5 ms, resistive load |

Efficiency and Power Losses

| | | AC 100 V | AC 120 V | AC 230 V | |
|--------------|---------|----------|----------|----------|--------------|
| Efficiency | Typical | 86.4% | 88.0% | 89.8% | 3.3 A, 24 V |
| Power losses | Typical | 1 W | 1.1 W | 1.8 W | 0 A |
| | Typical | 5.4 W | 4.9 W | 5.9 W | 1.65 A, 24 V |
| | Typical | 12.5 W | 11.1 W | 9.1 W | 3.3 A, 24 V |

Figure A-12. NI PS-14 Efficiency and Losses

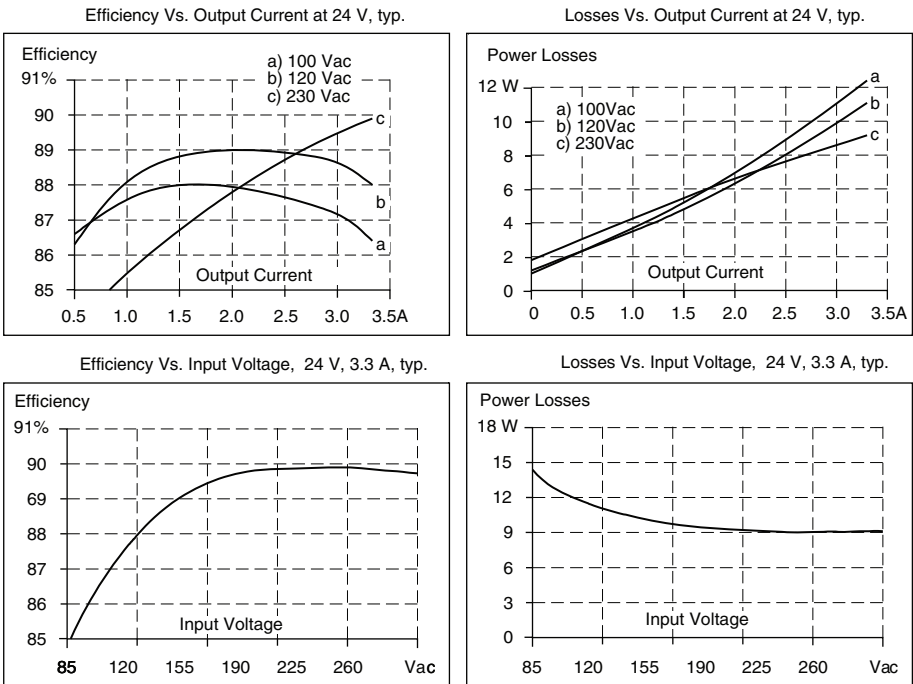

Reliability

The lifetime expectancy shown in Table A-1 indicates the service life of the NI PS-14 and is determined by the lifetime expectancy of the built-in electrolytic capacitors. Lifetime expectancy is specified in operational hours. Lifetime expectancy is calculated according to the capacitor’s manufacturer specification. The prediction model allows a calculation of up to 15 years from the date of shipment.

MTBF (Mean Time Between Failure) is calculated according to statistical device failures and indicates reliability of a device. It is the statistical representation of the likelihood of a unit to fail and does not necessarily represent the life of a product.

Table A-1. Reliability Specifications

| | Minimum/ Maximum | AC 100 V | AC 120 V | AC 230 V | |
|--------------------------|-----------------------------|-----------------|-----------------|-----------------|--|
| Lifetime expectancy | Minimum | 57,000 hours | 64,000 hours | 77,000 hours | 40 °C, 24 V, 3.3 A |
| | Minimum | 160,000 hours | > 15 years | > 15 years | 25 °C, 24 V, 3.3 A |
| MTBF SN 29500, IEC 61709 | — | 1,788,007 hours | 1,901,430 hours | 2,242,997 hours | 40 °C, 24 V, 3.3 A |
| | — | 3,131,282 hours | 3,286,512 hours | 3,796,377 hours | 25 °C, 24 V, 3.3 A |
| MTBF MIL HDBK 217F | — | 848,860 hours | 854,142 hours | 885,842 hours | 40 °C, 24 V, 3.3 A, Ground Benign GB40 |
| | — | 1,088,361 hours | 1,094,559 hours | 1,152,637 hours | 25 °C, 24 V, 3.3 A, Ground Benign GB25 |

Dielectric Strength



Note The output voltage is floating and has no ohmic connection to ground.

To fulfill the PELV requirements according to EN60204-1 § 6.4.1, we recommend that either the + pole, the - pole, or any other part of the output circuit should be connected to the protective earth system. This helps to avoid situations in which a load starts unexpectedly or can not be switched off when unnoticed earth faults occur.

Figure A-13. Dielectric Strength

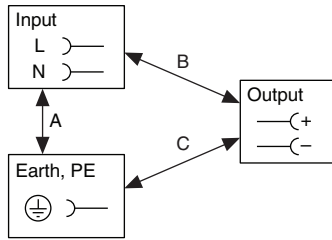


Table A-2 lists the tests that have been run to determine the NI PS-14 dielectric strength, and the results of each test.

Table A-2. Dielectric Strength Test Results

| Test | Duration | A | B | C |
|--------------|----------|----------------------|----------------------|---------------------|
| Type test | 60 s | 2500 V _{AC} | 3000 V _{AC} | 500 V _{AC} |
| Factory test | 5 s | 2500 V _{AC} | 2500 V _{AC} | 500 V _{AC} |
| Field test | 5 s | 2000 V _{AC} | 2000 V _{AC} | 500 V _{AC} |

Type tests and factory tests

Conducted by the manufacturer. Do *not* repeat test in field.

Rules for field test

Use appropriate test equipment which applies the voltage with a slow ramp. Connect L and N together as well as all output poles.


Used Substances

- This unit does not release any silicone and is suitable for use in paint shops.
- Electrolytic capacitors included in this unit do not use electrolytes such as Quaternary Ammonium Salt Systems.
- Plastic housings and other molded plastic materials are free of halogens, and wires and cables are not PVC insulated.
- The production material within our production does not include following toxic chemicals: Polychlorized Biphenyl (PCB), Polychlorized Terphenyl (PCT), Pentachlorophenol (PCP), Polychlorinated naphthalene (PCN), Polybrom Biphenyl (PBB), Polybrom Bipheny-oxyd (PBO), Polybrominated Diphenylether (PBDE), Polychlorinated Diphenylether (PCDE), Polydibromphenyl Oxyd (PBDO), Cadmium, Asbest, Mercury, Silicia.

Environment


| | | |
|------------------------------------|---|---|
| Operational temperature | -25 °C to +70 °C (-13 °F to 158 °F) | Resistive load Reduce output power according to Figure A-14 |
| Output de-rating | 1.8 W/°C | 60 to 70 °C (140 °F to 158 °F) |
| Storage temperature | -40 to +85 °C (-40 °F to 185 °F) | Storage and transportation |
| Humidity | 5 to 95% r.H. | IEC 60068-2-30 Do not energize while condensation is present |
| Vibration sinusoidal | 2 to 17.8 Hz: ±1.6 mm; 17.8 to 500 Hz: 2 g 2 hours / axis | IEC 60068-2-6 |
| Shock | 30 g 6 ms, 20 g 11 ms 3 bumps/direction, 18 bumps total | IEC 60068-2-27 |
| Altitude | 0 to 6000 m (0 to 20,000 ft) | Reduce output power or ambient temperature above 2000 m sea level |
| Output de-rating (for altitude) | 5 W/1000 m or 5 °C/1000 m | Above 2000 m (6500 ft), refer to Figure A-15 |
| Over-voltage category | III | EN 50178, altitudes up to 2000 m |
| | II | Altitudes from 2000 m to 6000 m |
| Degree of pollution | 2 | EN 50178, IEC 62103 not conductive |

Figure A-14. Output Current Vs. Ambient Temperature

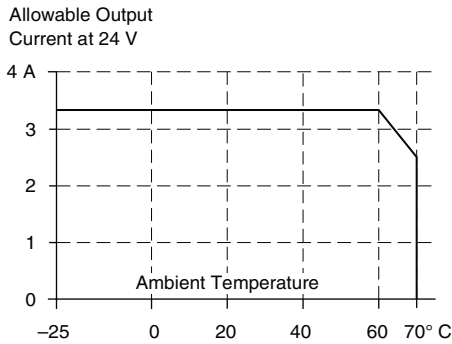

Note The ambient temperature is defined as the temperature 2 cm below the NI PS-14.

Figure A-15. Output Current Vs. Altitude

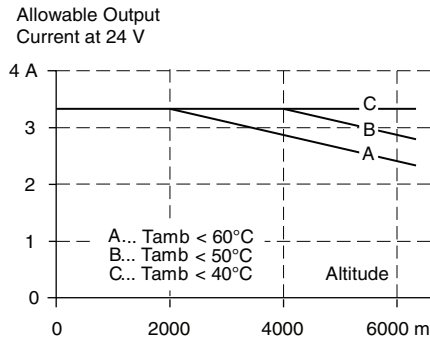

Protection Features

| | | |
|--------------------------------|---|---|
| Output protection | Electronically protected against overload, no-load and short-circuits | |
| Output over-voltage protection | Typical 34 V _{DC} Maximum 39 V _{DC} | In case of an internal power supply defect, a redundant circuitry limits the maximum output voltage. The output shuts down and automatically attempts to restart. |
| Output over-current protection | Electronically limited | Refer to Figure A-11. |
| Degree of protection | IP 20 | EN/IEC 60529 |

| | | |
|-----------------------------|--------------|-------------------------------------|
| Penetration protection | >3.5 mm | From screws, small parts, and so on |
| Over-temperature protection | No | — |
| Input transient protection | MOV | Metal Oxide Varistor |
| Internal input fuse | T6.3A H.B.C. | Not user replaceable |



Note In case of a protection event, audible noise may occur.

Safety

This product is designed to meet the requirements of the following standards of safety for industrial control and information technology equipment:

- IEC/EN 60950-1, UL 508



Note For UL and other safety certifications, refer to the product label or the [Product Certifications and Declarations](#) section.

Electromagnetic Compatibility

This product is designed to meet the requirements of the following standards of EMC for industrial control and information technology equipment:

| | | | | |
|--------------------------|------------------------------|------------------------------------|----------------|----------------------------|
| EMC Immunity | EN 61000-6-2 EN 61000-6-1 | Generic standards | | |
| Electrostatic discharge | EN 61000-4-2 | Contact discharge Air discharge | 8 kV 15 kV | Criterion A Criterion A |
| Electromagnetic RF field | EN 61000-4-3 | 80 MHz to 2.7 GHz | 10 V/m | Criterion A |
| Fast transients (Burst) | EN 61000-4-4 | Input lines Output lines | 4 kV 2 kV | Criterion A Criterion A |
| Surge voltage on input | EN 61000-4-5 | L → N N/L → PE | 2 kV 4 kV | Criterion A Criterion A |
| Surge voltage on output | EN 61000-4-5 | + → - +/- → PE | 500 V 500 V | Criterion A Criterion A |

| | | | | |
|---|---------------|----------------------------|---------------------------------|--------------|
| Conducted disturbance | EN 61000-4-6 | 0.15 to 80 MHz | 10 V | Criterion A |
| Mains voltage dips | EN 61000-4-11 | 0% of 100 V _{AC} | 0 V _{AC} , 20 ms | Criterion B* |
| | | 40% of 100 V _{AC} | 40 V _{AC} , 200 ms | Criterion C |
| | | 70% of 100 V _{AC} | 70 V _{AC} , 500 ms | Criterion A |
| | | 0% of 200 V _{AC} | 0 V _{AC} , 20 ms | Criterion A |
| | | 40% of 200 V _{AC} | 80 V _{AC} , 200 ms | Criterion A |
| | | 70% of 200 V _{AC} | 140 V _{AC} , 500 ms | Criterion A |
| Voltage interruptions | EN 61000-4-11 | — | 0 V _{AC} , 5000 ms | Criterion C |
| Powerful transients | VDE 0160 | Over entire load range | 750 V, 1.3 ms | Criterion A |
| <p>Criteria:</p> <p>A: Power supply shows normal operation behavior within the defined limits.</p> <p>B: The power supply continuous to operate as intended after the test. No degradation of performance or loss of function occur, when the power supply is used as intended. During the test, degradation of performance is however possible.</p> <p>C: Temporary loss of function is possible. Power supply might shut-down and restarts by itself. No damages or hazards for the power supply occur.</p> <p>* Below 2.8 A criterion A is fulfilled.</p> | | | | |

Switching Frequency

50 kHz to 450 kHz..... Input voltage and load dependent

| | | |
|--------------------|---|-----------------------|
| EMC Emission | EN 61000-6-3, EN 61000-6-4 | Generic standards |
| Conducted emission | EN 55011, EN 55022, FCC Part 15, CISPR 11, CISPR 22 | Class B, input lines |
| | EN 55022 | Class A, output lines |

| | | |
|-------------------------------|--------------------|---------------------|
| Radiated emission | EN 55011, EN 55022 | Class B |
| Harmonic input current | EN 61000-3-2 | Fulfilled (Class A) |
| Voltage fluctuations, flicker | EN 61000-3-3 | Fulfilled |



Note This device complies with FCC Part 15 rules.

Operation is subjected to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

A power supply has to comply with EN 61000-3-2 (Standard for harmonic input current) when:

- The end-device is used within the European Union and
- The end-device is connected to a public mains supply with a nominal voltage greater than or equal to $220 V_{AC}$ and
- The power supply is:
 - Fitted in an end-device with an average input power in excess of 75 W
 - or
 - Fitted in an end-device with a continuous input power in excess of 75 W
 - or
 - Part of a lighting system.

Exceptions

End-devices for professional applications with an input power >1000 W do not need to fulfill EN 61000-3-2.

Comments

- The average input power must be determined in accordance with EN 61000-3-2.
- Industrial MAINS supplies with their own transformer are considered to be *non-public*.
- Where individual self-contained items of equipment are installed in a rack or case (for example, devices connected in parallel), they are regarded as being individually connected to the MAINS supply. The rack or case need not be tested as a whole. Alternatively, it is also permitted to assess the whole rack or case. This is recommended for devices used in professional applications with an input power greater than 1000 W.



Note For the standards applied to assess the EMC of this product, refer to the *Product Certifications and Declarations* section.

For EMC compliance, operate this device with shielded cabling.

Certifications

| | | |
|---|--------------------------|---|
|  | LISTED IND. CONT. EQ. | LISTED as Industrial Control Equipment (UL 508) |
|  | | RECOGNIZED as Information Technology Equipment (UL 60950-1) |
|  | | Class I Div. 2, Certificate. For Hazardous Locations. |

Product Certifications and Declarations

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for NI products, visit ni.com/product-certifications, search by model number, and click the appropriate link.

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *Engineering a Healthy Planet* web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of the product life cycle, all NI products must be disposed of according to local laws and regulations. For more information about how to recycle NI products in your region, visit ni.com/environment/weee.

电子信息产品污染控制管理办法（中国 RoHS）



中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息, 请登录 ni.com/environment/rohs_china。(For information about China RoHS compliance, go to ni.com/environment/rohs_china.)

NI Services

NI provides global services and support as part of our commitment to your success. Take advantage of product services in addition to training and certification programs that meet your needs during each phase of the application life cycle; from planning and development through deployment and ongoing maintenance.

To get started, register your product at ni.com/myproducts.

As a registered NI product user, you are entitled to the following benefits:

- Access to applicable product services.
- Easier product management with an online account.
- Receive critical part notifications, software updates, and service expirations.

Log in to your MyNI user profile to get personalized access to your services.

Services and Resources

- **Maintenance and Hardware Services**—NI helps you identify your systems' accuracy and reliability requirements and provides warranty, sparing, and calibration services to help you maintain accuracy and minimize downtime over the life of your system. Visit ni.com/services for more information.
 - **Warranty and Repair**—All NI hardware features a one-year standard warranty that is extendable up to five years. NI offers repair services performed in a timely manner by highly trained factory technicians using only original parts at an NI service center.
 - **Calibration**—Through regular calibration, you can quantify and improve the measurement performance of an instrument. NI provides state-of-the-art calibration services. If your product supports calibration, you can obtain the calibration certificate for your product at ni.com/calibration.
- **System Integration**—If you have time constraints, limited in-house technical resources, or other project challenges, NI Alliance Partner members can help. To learn more, call your local NI office or visit ni.com/alliance.

- **Training and Certification**—The NI training and certification program is the most effective way to increase application development proficiency and productivity. Visit ni.com/training for more information.
 - The Skills Guide assists you in identifying the proficiency requirements of your current application and gives you options for obtaining those skills consistent with your time and budget constraints and personal learning preferences. Visit ni.com/skills-guide to see these custom paths.
 - NI offers courses in several languages and formats including instructor-led classes at facilities worldwide, courses on-site at your facility, and online courses to serve your individual needs.
- **Technical Support**—Support at ni.com/support includes the following resources:
 - **Self-Help Technical Resources**—Visit ni.com/support for software drivers and updates, a searchable KnowledgeBase, product manuals, step-by-step troubleshooting wizards, thousands of example programs, tutorials, application notes, instrument drivers, and so on. Registered users also receive access to the NI Discussion Forums at ni.com/forums. NI Applications Engineers make sure every question submitted online receives an answer.
 - **Software Support Service Membership**—The Standard Service Program (SSP) is a renewable one-year subscription included with almost every NI software product, including NI Developer Suite. This program entitles members to direct access to NI Applications Engineers through phone and email for one-to-one technical support, as well as exclusive access to online training modules at ni.com/self-paced-training. NI also offers flexible extended contract options that guarantee your SSP benefits are available without interruption for as long as you need them. Visit ni.com/ssp for more information.
- **Declaration of Conformity (DoC)**—A DoC is our claim of compliance with the Council of the European Communities using the manufacturer’s declaration of conformity. This system affords the user protection for electromagnetic compatibility (EMC) and product safety. You can obtain the DoC for your product by visiting ni.com/certification.

For information about other technical support options in your area, visit ni.com/services, or contact your local office at ni.com/contact.

You also can visit the Worldwide Offices section of ni.com/niglobal to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Index

A

AC input specifications, A-2

B

back feeding loads, 2-8

C

capacitive loads, 2-10
certification specifications, A-17
charging batteries, use, 2-8
circuit breakers, output, 2-8
cooling the NI PS-14, 2-6
current capability, peak, 2-7
 figure, 2-8

D

DC input
 specifications, A-4
dielectric strength specifications, A-10
dimension specifications, A-1
documentation
 related documentation, *ix*

E

efficiency specifications, A-8
electromagnetic compatibility, A-14
enclosure, sealed operation, 2-6
environment specifications, A-12
environmental management, specifications,
 A-17
external input protection, 2-5

H

hazardous risks, 2-6
hold-up time specifications, A-6

I

inductive loads, 2-10
input current inrush surge, A-5
input protection, 2-5
installation, configuration, and operation

mounting the NI PS-14, 2-1
unpacking the NI PS-14, 1-1
wiring the NI PS-14, 2-3

K

kit contents, 1-1

L

loads
 back feeding, 2-8
 inductive, capacitive, 2-10

M

mounting equipment, 1-4
 panel kit, 1-4
 side brackets, 1-4
mounting orientation, 2-1

N

NI PS-14
 cooling, 2-6
 external input protection, 2-5
 hazardous risks, 2-6
 mounting equipment, 1-4
 panel brackets, 1-4
 side brackets, 1-4
 operation, 2-4
 parallel, 2-4
 serial, 2-4
 figure, 2-4
 two-phase, 2-5
 orientation, 2-1
 figure, 2-2
 peak current capability, 2-7
 service parts, 2-7
 specifications, A-1
 unpacking, 1-1
 wiring terminals, 2-3

O

operating in a sealed enclosure, 2-6

operation

parallel, 2-4

serial, 2-4

figure, 2-4

two phase, 2-5

figure, 2-5

output circuit breakers, 2-8

output specifications, A-7

P

panel mounting kit, 1-4

parallel operation, 2-4

parts, service, 2-7

peak current capability, 2-7

figure, 2-8

specifications, A-8

power loss specifications, A-8

protection features specifications, A-13

R

related documentation, *ix*

reliability specifications, A-9

risks, 2-6

S

safety, specifications, A-14

sealed enclosure, operation, 2-6

serial operation, 2-4

service parts, 2-7

side mounting kit, 1-4

specifications

AC input, A-2

certifications, A-17

current inrush surge, A-5

DC input, A-4

dielectric strength, A-10

dimensions, A-1

efficiency, A-8

electromagnetic compatibility, A-14

environment, A-12

environmental management, A-17

hold-up time, A-6

online product certification, A-17

output, A-7

peak current capability, A-8

power loss, A-8

protection features, A-13

reliability, A-9

safety, A-14

substances used, A-11

weight, A-1

surge, input current inrush, A-5

T

terminal wiring, 2-3

requirements (table), 2-3

two-phase operation, 2-5

figure, 2-5

U

unpacking the NI PS-14 power supply, 1-1

use for charging batteries, 2-8

used substances specifications, A-11

W

weight specifications, A-1

wiring the terminals, 2-3

requirements (table), 2-3