日本語版は裏面をご覧ください

Getting

St

Hardw

1

Insert CD, then choose Install Software.

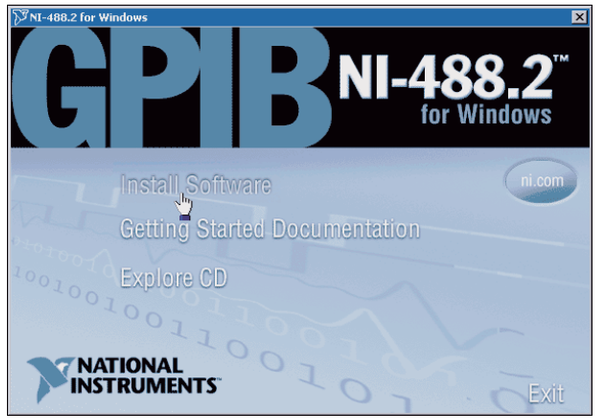

2

Select your PCI interface.

3

Shut down, then power off computer.

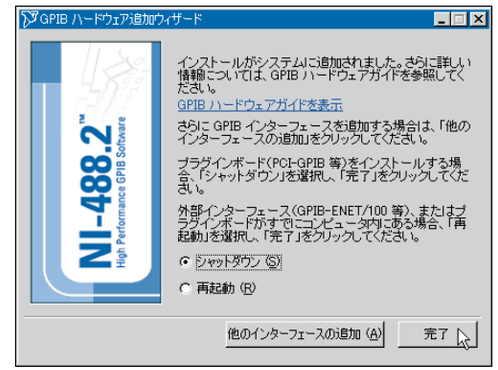

4

Install hardware, then power on computer.

For Help installing your hardware, refer to the *GPIB* (available on the CD through *Get*).

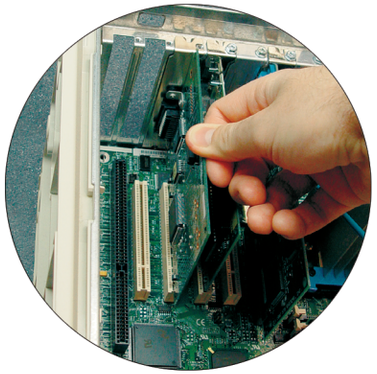

5

Run NI-488.2 Getting Started Wizard.

NATIONAL INSTRUMENTS™

ni.com/support Tel: (512) 683-8248 • Fax: (512) 683-5678
ni.com/ask

© 2002 National Instruments Corporation. All rights reserved.

National Instruments™ and NI-488.2™ are trademarks of National Instruments Corporation. Product and company names listed are trademarks or trade names of their respective companies.

For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the `patents.txt` file on your CD, or `ni.com/patents`.

322271B-01 0202

はじめにお読みください

NI-488.2™

1 CDを挿入して、「ソフトウェアをインストール」を選択します。

2 PCI インタフェースを選択します。

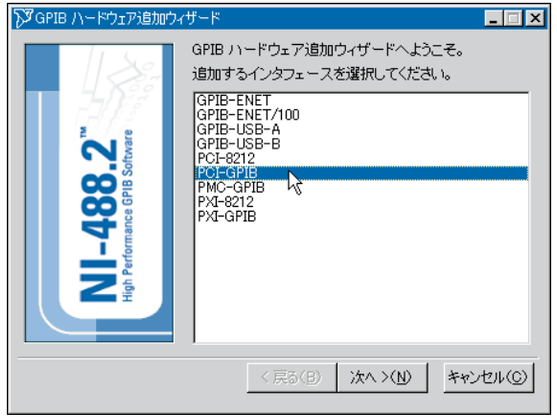

3 コンピュータを終了して電源を切ります。

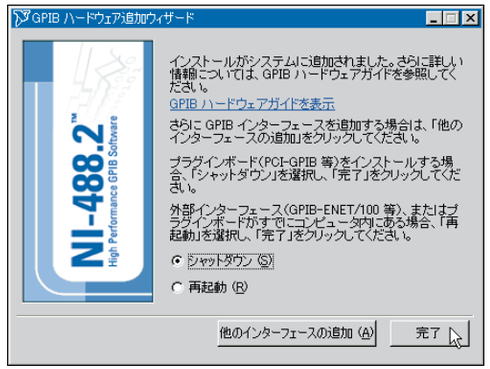

4 ハードウェアを取り付けてコンピュータの電源を入れます。

ハードウェアのインストール方法については、『GPIB ハードウェアガイド』（CDの「ドキュメントを表示」からアクセス可能）を参照してください。

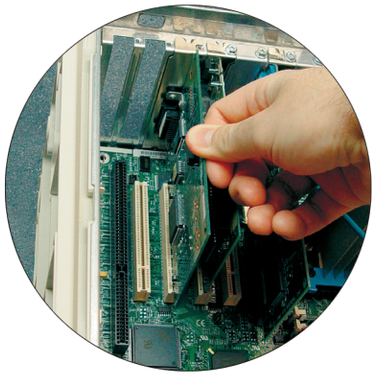

5 「NI-488.2クイックスタートウィザード」を実行します。

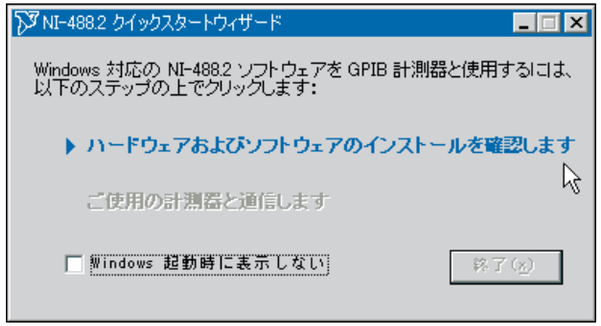

NATIONAL INSTRUMENTS™
ni.com/support/ja
ni.com/ask
Tel: 03-5472-2981 • Fax: 03-5472-2977

© 2002 National Instruments Corporation. All rights reserved.

National Instruments™、NI-488.2™ は、National Instruments Corporation の商標です。記載されている製品名および会社名は、該当各社の商標または商号です。

National Instrumentsの製品を保護する特許については、「ヘルプ」→「特許」を選択すると表示される製品情報（該当する場合）、このCDにある patents.txt ファイル（該当する場合）および/または ni.com/patents を参照してください。