

MATRIX_x[®]

7.0

GETTING STARTED GUIDE

UNIX VERSION



Copyright © 2000 Wind River Systems, Inc.

ALL RIGHTS RESERVED. No part of this publication may be copied in any form, by photocopy, microfilm, retrieval system, or by any other means now known or hereafter invented without the prior written permission of Wind River Systems, Inc.

AutoCode, Embedded Internet, ES_p, FastJ, IxWorks, MATRIX_x, pRISM, pRISM+, pSOS, RouterWare, Tornado, VxWorks, *wind*, WindNavigator, Wind River Systems, WinRouter, and Xmath are registered trademarks or service marks of Wind River Systems, Inc.

BetterState, Doctor Design, Embedded Desktop, Envoy, How Smart Things Think, HTMLWorks, MotorWorks, OSEKWorks, PersonalJWorks, pSOS+, pSOSim, pSOSystem, SingleStep, SNiFF+, VxDCOM, VxFusion, VxMP, VxSim, VxVMI, Wind Foundation Classes, WindC++, WindNet, Wind River, WindSurf, and WindView are trademarks or service marks of Wind River Systems, Inc. This is a partial list. For a complete list of Wind River trademarks and service marks, see the following URL:

<http://www.windriver.com/corporate/html/trademark.html>

Use of the above marks without the express written permission of Wind River Systems, Inc. is prohibited. All other trademarks mentioned herein are the property of their respective owners.

Corporate Headquarters

Wind River Systems, Inc.
500 Wind River Way
Alameda, CA 94501-1153
U.S.A.

toll free (U.S.): 800/545-WIND
telephone: 510/748-4100
facsimile: 510/749-2010

For additional contact information, please visit the Wind River URL:

<http://www.windriver.com>

For information on how to contact Customer Support, please visit the following URL:

<http://www.windriver.com/support>

Contents

1	Introduction: The MATRIX_x Product Family	1
1.1	Xmath	3
1.2	SystemBuild	3
1.3	AutoCode	4
1.4	DocumentIt	4
1.5	RealSim	4
1.6	Using This Manual	5
2	MATRIX_x Publications, Online Help, and Customer Support	7
2.1	Online and Printed Book Conventions	8
2.1.1	Font Conventions	8
2.1.2	Format Conventions	9
2.1.3	Symbol Conventions	10
2.1.4	Mouse Conventions	11
2.1.5	Note, Caution, and Warning Conventions	11
2.2	Using Online Books	12

2.2.1	Viewing, Printing, and Searching PDF Files	12
	Using Acrobat Reader	12
	Pasting Text Into Other Applications	13
	ATTENTION: Copy and Paste Known Problem	13
	Printing Documents	14
	Printing a Large Document on UNIX	14
	Find and Search in PDF	14
	ATTENTION: Known Search Index Problem	15
2.3	MATRIX _x Installation Guides	16
2.4	MATRIX _x Getting Started Guide and Master Index	16
2.5	Xmath Books	16
2.6	SystemBuild Books	18
2.7	AutoCode and DocumentIt Books	19
2.8	Using Online Help	20
2.8.1	Starting the Online Help	20
	Multiple Navigators	21
	Common Startup Questions	21
2.8.2	Using the MATRIX _x Help Window	22
	Help Window Layout	22
2.8.3	Navigating Between Topics	23
	Topic Groupings	24
2.8.4	Finding Specific Help Topics	24
2.8.5	Using Help Examples	25
2.8.6	Using Context-Sensitive Help	25
2.8.7	Using MATRIX _x Help with Different Versions of Navigator	26
	4.X Navigator Commands	26
	Navigator 3.X Commands	27
2.9	MATRIX _x Release Information	28

2.10	MATRIX _X Customer Support	28
3	Xmath	29
3.1	Introduction to Xmath	29
3.1.1	Data Handling	29
3.1.2	Numerical Analysis	30
3.1.3	MathScript	30
3.2	Getting Started in Xmath	31
3.2.1	Directories Defined by Environment Variables	31
3.2.2	Starting Xmath	31
3.2.3	The Xmath Commands Window	32
	Menu Choices	33
	Command Window Execution	33
3.2.4	Running Demos	34
3.2.5	Accessing Online Help	34
3.2.6	Stopping Xmath	34
3.3	Performing Sample Xmath Tasks	35
3.3.1	Creating Data	35
3.3.2	Getting to Know Objects	36
3.3.3	Saving, Loading, and Printing Data	37
	Graphics	38
	Printing Graphs	38
3.4	MathScript	39
3.5	The Xmath Debugger	40
3.5.1	Starting the Debugger	40
3.5.2	Using the Debugger	42
3.5.3	Exiting the Debugger	42
3.5.4	Correcting Errors During Debugging	43

3.6	Xmath Plotting	43
3.7	Exploring Additional Topics	43
4	SystemBuild	45
4.1	Introduction to SystemBuild	46
4.1.1	Catalog Browser	47
4.1.2	SuperBlock Editor	48
4.1.3	SystemBuild Palette Browser	49
4.1.4	SystemBuild Simulator	50
4.1.5	Specifying an ASCII Text Editor	50
4.1.6	SystemBuild Optional Modules	50
	Fuzzy Logic Block	50
	Neural Network Module	51
	State Transition Diagram Block	51
4.2	Starting and Exiting SystemBuild	51
	Starting SystemBuild	51
	Exiting SystemBuild	52
4.3	Basic SystemBuild Tasks	52
4.3.1	Creating a New SuperBlock	52
4.3.2	Creating a New Block in a SuperBlock	54
4.3.3	Loading a Model File	55
4.3.4	Opening a SuperBlock in the Editor	56
4.3.5	Simulating the Model from the Xmath Commands Window	58
4.3.6	Deleting a SuperBlock	60
4.3.7	Navigating a SuperBlock Hierarchy	61
	Navigating with the Catalog Browser	61
	Navigating from the Editor Window	63
4.3.8	Printing from the Editor Window	64

4.4	SystemBuild Tutorial	65
4.4.1	Designing a Block Diagram	65
	The Spring-Mass Damper Model	66
	SystemBuild Block Basics	66
	Getting Started on a Design	68
4.4.2	Creating and Editing a Block Diagram	69
	Creating a SuperBlock	69
	Adding Blocks to the Block Diagram	71
	Editing Block Properties	72
	Connecting Blocks	78
	Connecting SuperBlock Inputs and Outputs	80
	Saving a SuperBlock	82
4.4.3	Simulating a SuperBlock	84
4.4.4	Encapsulating a SuperBlock	86
	Exercise	92
4.4.5	Using a BetterStateChart Block to Model Events	92
	Resettable Integrator	94
	Signal Switch	96
	Event Controller	98
	BetterStateChart Block	99
	Return to SystemBuild for Final Connections	110
	Final Exercise	113
5	AutoCode	115
5.1	Generating Non-Customized Code	115
5.2	Generating Customized Code	117
6	DocumentIt	119
6.1	Generating Non-Customized Documentation	119
6.2	Generating Customized Documentation	123

1

Introduction: The MATRIX_x Product Family

This chapter contains an overview of the MATRIX_x Product Family. It concludes with a section on the organization and use of this document.

MATRIX_x Product Family

The MATRIX_x Product Family includes the following:

Xmath — The mathematics and system analysis environment of the MATRIX_x Product Family. See [1.1 Xmath](#), p.3.

SystemBuild — A graphical programming environment that uses a hierarchically structured block diagramming paradigm for modeling and simulation of linear and nonlinear dynamic systems. See [1.2 SystemBuild](#), p.3.


AutoCode — Template technology used to process SystemBuild model files to produce C or Ada code. See [1.3 AutoCode](#), p.4.

DocumentIt — TPL template technology (similar to AutoCode) used to capture information from SystemBuild model files and then format it to create documentation. See [1.4 DocumentIt](#), p.4.

RealSim — Real-time software and hardware combination that enables you to do real-time simulations of feedback control system models designed in SystemBuild. See [1.5 RealSim](#), p.4.

[Figure 1-1](#) shows product dependencies of the MATRIX_x Product Family.

Figure 1-1 MATRIX_x Product Family Overview with Dependencies

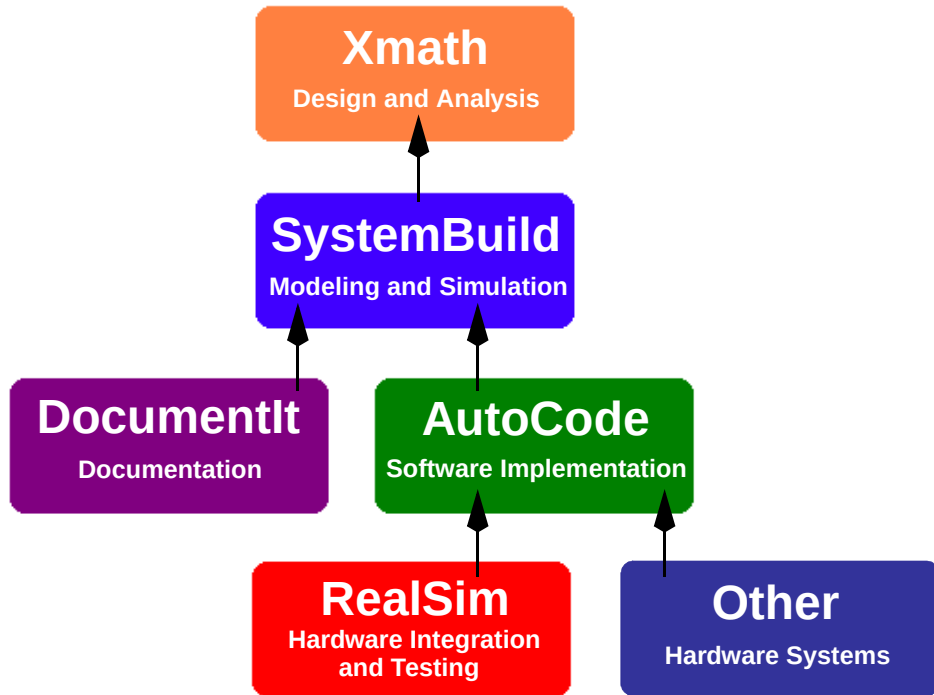

The MATRIX_x Product Family core software must be installed according to the *MATRIX_x System Administrator's Guide, UNIX Version*.

- SystemBuild users must have Xmath.
- AutoCode and DocumentIt users need SystemBuild and Xmath.
- RealSim users must have AutoCode, SystemBuild, and Xmath.

1.1 Xmath

The Xmath software environment facilitates system analysis and visualization. Xmath contains over 700 predefined functions and commands, interactive color graphics, and a programmable graphical user interface (PGUI). The MathScript scripting language simplifies command and function programming. Object-oriented design provides convenient data management and speeds program execution. The structure and capabilities of Xmath are discussed in the *Xmath User's Guide*, while the Xmath online Help provides easy access to Xmath commands and functions.

- Xmath commands support basic operations such as creating, plotting, saving, and loading data, and accessing online Help. [3.1 Introduction to Xmath](#), p.29 describes the capabilities of Xmath and its modules.
- Xmath commands provide access to SystemBuild and its related products. Xmath handles data for SystemBuild and all other products in the MATRIX_x Product Family.

1.2 SystemBuild

SystemBuild visual modeling and simulation software lets you model many kinds of systems, from control loops to complex vehicle applications. You can use SystemBuild to prepare models that can be simulated with the SystemBuild simulator. Built-in simulation tools let you interactively verify, test, and modify system models.

To create a model, you can use all of the SystemBuild standard and optional features. BetterState blocks facilitate the integration of hierarchical state transition models. The optional Interactive Animation (IA) module or the Altia Design module adds the ability to control your model interactively during simulation. With IA, the icons are put in one or more picture files (.pic) while Altia images are stored in design files (.dsn).

For additional information, see [4. SystemBuild](#).

1.3 AutoCode

AutoCode is an automatic code generator for SystemBuild models. The AutoCode software processes SystemBuild model files you create and outputs compilable ANSI C or Ada code.

The output code can be compiled to produce a stand-alone real-time executable program suitable for running in a test-bed environment or for use in an embedded real-time system. Advanced template programming language (TPL) template technology provides a powerful programming capability to tailor nearly any part of the generated code to specialized needs. For additional information, see [5. AutoCode](#).

1.4 DocumentIt

DocumentIt is an automated documentation generator for SystemBuild models. This module integrates documentation with SystemBuild design activity for easier and more accurate manuals and reports. Templates are included for FrameMaker, Microsoft Word (PC only), and WordPerfect markup formats. Using TPL, you can capture and tailor any part of the generated document for special documentation standards or other needs.

For additional information, see [6. DocumentIt](#).

1.5 RealSim

The RealSim controller lets you do real-time simulations of feedback control system models designed in SystemBuild. In this way, you can see how a prototype will perform in the “real” world before actually building the prototype.

The RealSim environment lets you run models developed in SystemBuild in real time, connecting to real hardware for real-time simulation, rapid prototyping, and hardware-in-the-loop modeling. Run-time graphical user interfaces can be built to

let you monitor values and change setpoints in the application running on a real-time computer, These are done in the same manner as interactive simulations in SystemBuild. In addition to the software tools, real-time computers with analog and digital I/O are available to complete the RealSim environment.

Real-time simulation is not described in this manual. For additional information, see the *RealSim User's Guide*. RealSim is available on the Windows platform..

1.6 Using This Manual

This manual acquaints you with the MATRIX_X Product Family software. It provides an introduction to each software product and includes tutorials to assist you in learning key tasks.

Organization

This manual is organized as follows:

- [1. Introduction: The MATRIX_X Product Family](#) introduces each software product in the MATRIX_X Product Family.
- [2. MATRIX_X Publications, Online Help, and Customer Support](#) lists the MATRIX_X Product Family publications available, describes how to use online help, explains the conventions used in MATRIX_X online and printed books, and provides contact information for MATRIX_X customer support.
- [3. Xmath](#) provides an overview of Xmath and the Xmath modules, and contains a tutorial.
- [4. SystemBuild](#) provides an overview of SystemBuild and the SystemBuild modules, and gives a tutorial that includes use of a BetterState statechart.
- [5. AutoCode](#) provides an overview of the AutoCode code generator.
- [6. DocumentIt](#) provides an overview of the DocumentIt document generator.

Conventions

This publication makes use of the following types of conventions: font, format, symbol, mouse, and note. These conventions are detailed in [2. MATRIX_x Publications, Online Help, and Customer Support](#).

2

MATRIX_x Publications, Online Help, and Customer Support

This chapter provides publication conventions and instructions for using MATRIX_x online books and Help. It also contains an annotated list of the online books, and concludes with directions for obtaining release information and customer support.

- *Online and Printed Book Conventions*
- *Using Online Books*
- *MATRIX_x Installation Guides*
- *MATRIX_x Getting Started Guide and Master Index*
- *Xmath Books*
- *SystemBuild Books*
- *AutoCode and DocumentIt Books*
- *Using Online Help*
- *MATRIX_x Release Information*
- *MATRIX_x Customer Support*

2.1 Online and Printed Book Conventions

The MATRIX_X online and printed books use several types of conventions: font, format, symbols, mouse, and levels of notes. These conventions are discussed in the sections that follow.

2.1.1 Font Conventions

This sentence is set in the default text font, Palatino, which is used for general text. Use of fonts and styles other than the standard text default is summarized in [Table 2-1](#):

Table 2-1 **Font Conventions**

Fonts and Styles	Use
Palatino	General text. Palatino is the default text font.
bold Palatino	Bold Palatino is used for command and function names, filenames, directory paths, and environment variables. Xmath commands (for example, SAVE , LOAD , SET) are shown in uppercase, while Xmath functions are set in lowercase (for example, random , plot , kroncker)
<i>italic Palatino</i>	<i>Italic Palatino</i> is used for emphasis, first instances of terms defined in the glossary, publication titles, and chapter, section, and topic headings.
Courier	Courier is used for system output, code examples, prompt responses, and syntax examples.
bold Courier	Bold Courier is used for user input (anything you are expected to type and enter).
<i>italic Courier</i> <i>italic bold Courier</i>	Italic is also used in conjunction with <i>Courier</i> or <i>bold Courier</i> to denote placeholders in syntax examples or generic examples.
Helvetica	Helvetica is used for window and dialog names, menu selections, and named items in a window or dialog. Dialog messages and keyboard keys are also set in this font.

2.1.2 Format Conventions

Xmath output appears in *Courier* directly below the **bold Courier** input (see [Example 2-1](#)). If the output is extremely large, continuation marks (... or :) are used to indicate continuation, or replace missing parts.

Example 2-1 **Xmath Sample Input and Output**

```
x=random(2,6)
x (a rectangular matrix) =
    0.827908    0.926234    0.566721    0.571164 ...
    0.559594    0.124934    0.727922    0.267777 ...

x'
ans (a rectangular matrix) =
    0.827908    0.559594
        :         :
        :         :
    0.0568928    0.988541
```

If the input is long, continuing lines of input are indented as shown in [Example 2-2](#).

Example 2-2 **Sample Convention for Handling Longer Lines of Code**

```
Sys=system(makepoly([1, -1.63, 5.5], "s"),
            makepoly([1, 2.7, 5.6, 13.5, 8.1], "s"))

Sys (a transfer function) =

      2
      s - 1.63s + 5.5
-----
      4      3      2
      s + 2.7s + 5.6s + 13.5s + 8.1

initial integrator outputs
0
0
0
0
```

Input Names

Input 1

Output Names

Output 1

System is continuous

2.1.3 Symbol Conventions

Symbols used in this manual include those shown in [Table 2-2](#):

Table 2-2 **Symbol Conventions**

Symbol	Use
%	UNIX [®] operating system prompt for C shell. Xmath input shows no prompt (as you will usually be typing in the Xmath Commands window command area).
\$	UNIX operating system prompt for Bourne and Korn shells.
{ }	Braces denote optional arguments or keywords in Xmath syntax. For example: [out1,out2]=fun(in1,in2,{in3,keywords})
[]	Brackets indicate that the enclosed information is optional. The brackets are generally not typed when the information is entered.
	A vertical bar separating two text items indicates that either item can be entered as a value.
→	Hierarchical menu selections are indicated with arrows: In the Xmath main menu select File→Load to load a model or demo. The arrow is also used to specify hierarchical structure in the online Help Topics Hierarchy pane, and in the topics index: See the MATRIX _x online Help <i>plot→linestyles</i> topic.

2.1.4 Mouse Conventions

This document assumes you have a standard, right-handed 2- or 3-button mouse. From left to right, the buttons are referred to as MB1, MB2, and MB3 for a right-hand mouse definition; these buttons are right to left for a left-hand mouse definition. For workstations with a two button mouse, MB1 is the left button and usually the right button behaves as MB3.

All instructions assume MB1 unless otherwise noted. Some common mouse instructions are shown in [Table 2-3](#):

Table 2-3 **Common Mouse Instructions**

Instruction	Use
click	Press, then quickly release MB1.
double-click	Rapidly click MB1 twice.
drag	Hold down MB1 while moving the mouse; release the button when the desired result is obtained.

The following mouse-click combinations are useful for selecting text:

- To select a word, point anywhere within the desired word and double-click.
- To select an entire line, point anywhere on the line and triple-click.
- To select all text in an Xmath window area, move the cursor into the area and quadruple-click.

2.1.5 Note, Caution, and Warning Conventions

Within the text of this manual, you may find notes, cautions and warnings:



NOTE: Note indicates information that emphasizes or supplements important points of the main text. A note may supply information that applies only in special cases, or details that apply only to specific releases of the product.



CAUTION: Caution advises that failure to take or avoid a specific action could result in loss of data.



WARNING: Warning advises that failure to take or avoid a specific action could result in physical damage to the user or hardware.

2.2 Using Online Books

The MATRIX_X CD-ROM contains software, documentation in PDF format, and a copy of Adobe® Acrobat® Reader with Search. With Acrobat Reader you can view, search, and print any document on the MATRIX_X CD-ROM.

Using Online Books describes viewing, printing, and searching the online PDF files.

If you do not already have Acrobat Reader with Search installed, see the *MATRIX_X System Administrator's Guide, UNIX Version* for installation details. The Search feature provides a full-text search across all documents on the CD-ROM. If you don't have the Search capability, we recommend that you install the version provided on the MATRIX_X CD-ROM.

To determine whether your copy of Acrobat Reader includes Search, start it, and examine the toolbar (select Window→Show Tool Bar if the toolbar isn't visible). If Search is installed, the toolbar ends with the four search buttons shown in [Find and Search in PDF](#), p.14.

2.2.1 Viewing, Printing, and Searching PDF Files

To view the documentation, launch Adobe Acrobat Reader with Search (version 3.0 or higher); then open the file **welcome.pdf**. If you do not have Acrobat on your system, see the *MATRIX_X System Administrator's Guide, UNIX Version* for installation details.


The **welcome.pdf** file is an overall table of contents for PDF documentation on the CD-ROM. Click any document title to open that document.

Using Acrobat Reader

Each document has a “bookmarks” pane displayed on the left.

All bookmarks and blue text are hypertext links. To follow a link, be sure the hand tool is selected; then click the bookmark or blue text.

Use the following Acrobat toolbar buttons for browsing and navigation:

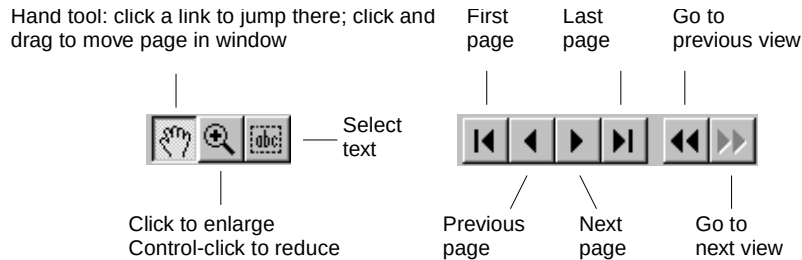

Select Help → Reader Guide for a detailed description of all Acrobat capabilities.

Bookmarks can contain the following links:

- Welcome: Link to the Welcome screen.
- Document Title: Link to the cover of the current document.
- Contents: Link to the Table of Contents for the current document.
- Chapter and Section Bookmarks: Links to chapters and sections in the document.
- A right-pointing triangle in front of a bookmark means there are sub-bookmarks; click the triangle to expand to lower-level bookmarks.
- Index: Link to the Index of the current document if one exists.

Pasting Text Into Other Applications

To copy examples or text from a PDF document into an application, first click Tools → Select Text, or click the abc button. Select the text, and then use the usual technique on your platform to copy and paste the text into the target application.

ATTENTION: Copy and Paste Known Problem

In some cases, example text can contain special typeset characters, such as a non-breaking space, or special left- or right-facing delimiters (“_”, ‘_’), etc., that will not be properly parsed when pasted into an application. If you receive an error message, retype the special characters, and the input will be processed. The following string is an example:

```
plot(a,b, { xlab = "label_string" })
```

If the application does not understand the paired double quotes (“ ”) you need to retype them so the input contains straight quotes:

```
plot(a,b, { xlab = "label_string" })
```

Printing Documents

To print a file, select File → Print and then specify the desired pages. Note that the PDF page numbers appearing at the bottom of the Acrobat screen count every page, including the cover, the table of contents, and so forth. Be sure to use these page numbers (rather than the document page numbers) when printing a range of pages.



NOTE: You must print PDF files on a PostScript printer.


Printing a Large Document on UNIX

When printing in a UNIX environment, a book might fail to print because it is too large for your printer’s memory resources. To alleviate this problem, edit the AcroRead print destination to create a symbolic link to the specified printer by appending -s to the printer string. For example:

```
/usr/ucb/lpr -s
```

If printing problems persist you may have to print a range of pages rather than the entire book.

Find and Search in PDF

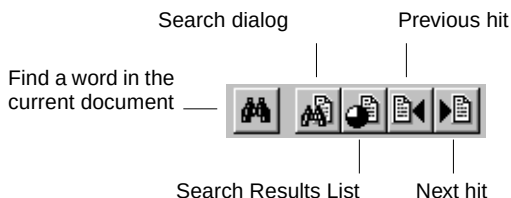

The Acrobat Reader Find feature locates words or word phrases in the current PDF document.

To use Find, click the plain binoculars on the toolbar, or select Tools → Find.

To make a full-text search over all documents on the CD-ROM, use the Search tool. Click the binoculars overlaid on a document on the toolbar, or select Tools → Search. In the Search dialog, enter the word or phrase you want to find, select options as desired, and then click Search. Search displays a Search Results List dialog of documents containing the term. Click any document in the list to open it. All instances of the term on the first page on which it occurs are highlighted.

To find the next or previous occurrence, click the Next or Previous hit buttons on the Acrobat toolbar. To return to the Search Results List dialog, click on the Search Results List button.

The Search command includes powerful features for expanding a search using automatic word-stemming, a thesaurus to find synonyms, and a “sounds like” feature. You can also use wild cards in terms, control case matching, and include Boolean connectives.

For further details on Search, select Help → Plug-In Help → Using Acrobat Search to read the online guide.

ATTENTION: Known Search Index Problem

The Search feature uses a search index file. When you open **welcome.pdf** or any other document, Acrobat automatically “attaches” the required index file.

Acrobat sometimes attaches the index file more than once. Then, the Search Results List dialog contains the same document multiple times. The workaround is as follows:

1. Raise the Search dialog; then click the Indexes button.
2. Remove *all* indexes by selecting each index in turn and clicking the Remove button. When you remove the final index, you are warned that you won’t have any indexes; click OK. Close the dialog.
3. Exit and restart Acrobat; then re-open the **welcome.pdf** file.

2.3 MATRIX_X Installation Guides

The following documents provide instructions for installing the MATRIX_X Product Family software:

System Administrator's Guide, UNIX Version — Describes proper setup of a UNIX workstation for the installation of MATRIX_X software products.

FLEXlm End User Manual — Describes FLEXlm from the end-user perspective. It explains how to use the command-line tools that are part of the standard FLEXlm distribution.

2.4 MATRIX_X Getting Started Guide and Master Index

The following MATRIX_X documents provide help for getting started with basic tasks and for finding the information you need.

MATRIX_X Getting Started Guide, UNIX Version — Describes the MATRIX_X Product family and provides an introduction to basic tasks and tutorials for using MATRIX_X software on the UNIX platform.

Core Documentation Master Index — The MATRIX_X Core Documentation suite includes the *MATRIX_X Getting Started Guide*, and all Xmath, SystemBuild, Autocode, and DocumentIt books. This document indexes all of the Core Documentation suite except *Interactive System Identification Module, Part 2*, and *Xμ Module*.

2.5 Xmath Books

Xmath software is documented in the *Xmath User's Guide* (formerly *Xmath Basics*) and in manuals for each optional Xmath module.

Xmath User's Guide — Describes Xmath structure and concepts. It provides a tutorial, covers basic features for general Xmath use, and describes advanced Xmath features such as creating a GUI, creating your own MathScript commands, functions, or objects, and linking external programs.

Control Design Module — Explains the use of the Control Design Module including Linear system representation, building system connections, system analysis, classical feedback analysis, and state-space design. It describes each function in the Control Design Module.

Interactive Control Design Module — Describes how to use the Interactive Control Design Module (ICDM), which is a tool for interactive design of continuous-time, single-input, linear time-invariant controllers. ICDM uses the Xmath programmable graphical user interface (PGUI or GUI).

Interactive System Identification Module, Part 1 — Describes the Interactive System Identification Module (ISID), which includes system identification, model reduction, and signal analysis tools for identification of linear, discrete time, and multivariable systems.

Interactive System Identification Module, Part 2 — Focuses on a special interactive graphical interface for ISID commands that further simplifies system identification. Various graphical comparison tools allow you to try different identification and validation methods. This interface also supplies plots useful for system identification with the touch of a button.

Model Reduction Module — Describes the model reduction module (MRM), a collection of tools for reducing the order of systems.

Optimization Module — Describes nonlinear, quadratic, and linear optimization functions.

Robust Control Module — Describes the robust control module (RCM), a collection of analysis and synthesis tools that assist in the design of robust control systems.

X μ Module — Describes Xmath functions used for modeling, analysis, and synthesis of linear robust control systems.

2.6 SystemBuild Books

The SystemBuild manuals consist of the *SystemBuild User's Guide* and a number of other manuals for SystemBuild blocks and modules.

SystemBuild User's Guide — Describes how to use SystemBuild, the graphical modeling and simulation environment, to construct a model for a dynamic system. SystemBuild lets you create custom building blocks, hierarchically organize model subsystems into SuperBlocks, and run system simulations based on the models.

Aerospace Models — Describes libraries of SystemBuild models that were written for the aerospace industry.

BetterState User's Guide — Describes how to use BetterStateChart blocks for modeling complex event, state, and transition information.

BlockScript User's Guide — Describes how to write instructions in the BlockScript language. BlockScript is used in SystemBuild with both BlockScript blocks and BetterStateChart blocks.

FuzzyLogic Block — Describes how to use the SystemBuild Fuzzy Logic Block to obtain fuzzy logic control methodology within SystemBuild for simulation and/or code generation. The Fuzzy Logic Block allows users to implement fuzzy logic decision structures of arbitrary complexity within a standardized block-diagram control-logic structure.

HyperBuild User's Guide — Describes how to decrease the computer simulation time of medium and large SystemBuild models. The bigger and more complex the SystemBuild model, the more significant the increase in simulation speed. HyperBuild achieves this improvement by converting a SystemBuild block diagram into highly optimized C code (called HyperCode) that executes much faster in the simulation engine, which normally interprets the model data. HyperBuild can be used to generate code for continuous SuperBlocks only.

Interactive Animation User's Guide — Describes how to create and link Interactive Animation pictures to your model and how to use these pictures for model control and results display at run time. This module is usually considered part of SystemBuild and is now supplied with the standard RealSim package.

Neural Network Module — Describes how the Neural Network Module (NNM) provides users the capability to define, parameterize, and include neural networks as SuperBlocks in a SystemBuild block diagram. Adding neural network technology to the fully integrated block diagram language of SystemBuild includes the capability to simulate your neural network models and to generate embedded code for them via AutoCode.

State Transition Diagram Block — Describes the State Transition Diagram (STD) block. This separately licensed block can be obtained from the SystemBuild Palette Browser SuperBlocks menu. The STD block is an interface between a finite state machine and a SuperBlock diagram. In SystemBuild, each state in a finite state machine is graphically rendered as a bubble rather than a block; the STD editor is used to create bubble diagrams.

2.7 AutoCode and DocumentIt Books

AutoCode User's Guide — Describes how to use AutoCode to generate code from a SystemBuild block diagram.

AutoCode Reference — Supplements the *AutoCode User's Guide* and provides additional reference information.

DocumentIt User's Guide — Describes how to use DocumentIt to generate design documentation from a SystemBuild block diagram.

pCODE Template — Describes the template that is used with AutoCode to generate code for the pSOSystem real-time operating system.

Template Programming Language — Describes how to write templates using the Template Programming Language (TPL) for AutoCode and DocumentIt.

2.8 Using Online Help

MATRIX_x online Help is implemented as an HTML fileset linked to MATRIX_x using the Netscape NetHelp Help engine. For fully functional MATRIX_x online Help, you must use Netscape Navigator (HTML browser). Other browsers can be used to view the online Help fileset, but they do not interface with MATRIX_x to provide context-sensitive Help.

MATRIX_x online Help is compatible with Netscape Navigator Versions 3.01 through the version shipped with your MATRIX_x distribution. The version we ship is the most recent English International version available across all MATRIX_x platforms at the time of an initial MATRIX_x release.

The following topics are covered here:

- [*Starting the Online Help*](#)
- [*Using the MATRIX_x Help Window*](#)
- [*Navigating Between Topics*](#)
- [*Finding Specific Help Topics*](#)
- [*Using Help Examples*](#)
- [*Using Context-Sensitive Help*](#)
- [*Using MATRIX_x Help with Different Versions of Navigator*](#)

2.8.1 Starting the Online Help

You can raise the general MATRIX_x Help window in these ways:

- From the command area of the Xmath Commands window, type **help**. If you know the name of the command, function, or topic, specify it after the Help command; for example, **help sba**.
- From the Xmath Commands window, select Help→Topics.
- If Netscape is not running, Xmath launches Netscape and opens the MATRIX_x Help window. On Windows platforms the window is launched directly. On UNIX platforms, Netscape is launched, and then the Help window is spawned from the Netscape session.
- You can also launch the MATRIX_x online Help window independent of Xmath, assuming the MATRIX_x environment variables are properly set and Netscape is on your path. From the operating system command line, type:

mtxhelp

Note, on Windows platforms, the online Help has its own shortcut on the Start menu.

Multiple Navigators

If you have a Netscape Navigator already running, Xmath attempts to launch the Help window in that version; if the version is not 3.01 or greater, you receive an error message.

- On UNIX platforms it is wise to **close Netscape and/or any other color intensive X resources before starting MATRIX_X**. MATRIX_X applications open successfully, but if necessary colors are allocated by other applications, the color mapping your system attempts can result in a poor working environment. The same is true on Windows platforms, but to a lesser extent.
- On Windows platforms Nethelp opens the MATRIX_X Help using *the last version of Navigator called*, not necessarily the Navigator shipped with MATRIX_X. You get an error message if the version is not 3.01 or higher.

The MATRIX_X Help consists of simple HTML files with hypertext links so that behavior is consistent among platforms and Navigator versions. Netscape functionality has changed from version to version, however. See [Using MATRIX_X Help with Different Versions of the Navigator](#) for hints on using different versions with MATRIX_X Help.

Common Startup Questions

Why Does this Help Topic Look Funny?

In MATRIX_X Help, only text for examples and syntax (where returns must be preserved) have a predetermined font (Courier). For body text Netscape uses default fonts, or whatever you have selected in the Netscape File menu Preferences dialog. The Netscape default font is Times. In rare cases, your machine may not have this font loaded, or it may not have the font in the size you have selected, resulting in pages with letters mysteriously missing. Try choosing another font size, or another font.

- It is best if you have Netscape and other color-intensive applications closed before you start MATRIX_X. This allows your application to get the colors it

needs. It also means that Netscape may not be able to grab the standard colors the online Help uses. This means hypertext links may not be blue, and so forth. In general, the bad colors do not impair the functionality. For the best results:

- a. Close all applications.
- b. Start MATRIX_x (but do not launch the Help yet).
- c. Start Netscape, and then start online Help from the Xmath Commands window.

Why Can't I Use Explorer?

Our files are generic HTML 3.2, so you can use Explorer to view them; however, you must install Netscape if you want [Context-Sensitive Help](#) to work. If you use Explorer, some graphical problems may occur, as we only test the Navigator, and the level of HTML support does vary among browsers.

Where Is this File?

The topic's filename and relative location are shown at the bottom of every file, just above the copyright, e.g., `$XMATH/help/masterIX.doc.html`. You can find the value of the environment variable `$XMATH` from the command area of the Xmath Commands window. For UNIX systems, type `oscmd("env")`; for Windows systems, type `oscmd("set")`. Locate `XMATH` among the environment variables displayed.

2.8.2 Using the MATRIX_x Help Window

Help Window Layout

The MATRIX_x Help window includes elements common to many browsers:

- [Frames](#)
- [Buttons](#)

Frames

The MATRIX_x Help window uses three frames:

- The left frame contains the topics hierarchy. All blue text entries are links to MATRIX_x Help topics. Topics usually contain lists of pertinent functions and commands.
- The lower right frame displays the current topic. For example, click a subject in the topics hierarchy, and it is displayed in the topic frame.
- The upper right frame displays the letters of the alphabet, and the Symbols topic. These are entry points into the online Help index. For example, click D to display an alphabetized list of topics that start with D.

You can use scrollbars or the Bottom and Top buttons to navigate within frames. To change the width or height of a frame, click the dividing line between two frames and drag in the direction you want the frame to enlarge/decrease. Alternatively, change the size of the entire window using a method appropriate to your window manager.

Buttons

The Help window frame has Backwards, Forward, and Exit buttons. The backwards and forwards arrows move you to the last link visited, or forward in the viewing history to a link you've previously visited. You can also go forward and back from the Netscape Quick Access menu. Hold the right mouse button down (anywhere within the Help window) to raise this menu.

2.8.3 Navigating Between Topics

By default, blue text in MATRIX_x Help can be used to jump to a related topic. To jump, click the text.

The Prev and Next buttons, when shown, take you to the previous/next file in the fileset. Because topics are cross-linked, this is not necessarily the next file in the listing that the topic hierarchy shows, because topics are cross-linked.

Topic Groupings

Some topic categories have been grouped into single large topics:

- AutoCode
- Model Reduction Module
- Optimization Module
- Programmable GUI
- Robust Control Module
- RealSim
- RVE
- Simulation
- SystemBuild Utilities

You can access these topics using index and cross reference jumps in the normal way, however:

- Top and Bottom links lead to the first and last files in the category, not the top or bottom of the individual Help.
- Scroll up or down to navigate through the fileset topics; Prev and Next are not available.
- When you print a combined fileset, the entire topic category is printed.

2.8.4 Finding Specific Help Topics

- If you know the name of the topic you want to view, go to the command area of the Xmath Commands window and type **help**, followed by the name of a command, function, or block. Abbreviation is supported as long as enough characters are supplied to guarantee a unique response. For example,

```
help plot      # raise the help on plot
help algeb     # raise the help on the AlgebraicExpression block
```

- Go to the topics hierarchy and select a general topic; follow links through the topic hierarchy listings until you find a topic of interest.
- Use the online Help Index. Click a letter of the alphabet in the upper right Frame to display all entries that start with that letter. The Prev and Next buttons to jump to the next alphabetized category.

2.8.5 Using Help Examples

There is a special convention for MATRIX_X commands and functions. If a command or function name at the top of the Help category is blue, there is a link from the topic name directly to the Examples portion of the Help. In some cases, examples are distributed through the topic. This is usually done to provide related discussion, or keyword category grouping.

Command or function Help usually include Help examples in the form of Xmath or SBA commands and functions. To test the Help examples, use your window manager's copy and paste conventions to copy the example text into the command area of the Xmath Commands window, and then press Return. Usually this involves highlighting some text, using mouse-clicks or menu options to copy the text, and then pasting the text to the command area of the Xmath Commands window.



NOTE: Loss of highlighting is a frequent side-effect of color map conflicts. Netscape's default highlight color in most environments is a pale yellow. If this color is not available it may seem that highlighting is "broken" when you attempt to highlight text on a white page. In most cases you can assume the highlighting is taking place and carry out your copy and paste operation successfully.

Some Help examples consist of Xmath command and function definitions used in conjunction with calls issued from the command area. To test examples where Xmath commands and functions are defined:

- Use a text editor to create a new Xmath command or function file.
- Copy and save the example command or function definition script to the file.
- Name the file **commandName.msc** or **functionName.msf** and save it to a folder included in the lookup path.
- Execute the commands that call the newly defined command or function, by copying them into the Xmath command area.

2.8.6 Using Context-Sensitive Help

The MATRIX_X online Help facility is context sensitive. Clicking the Help button or the ? toolbar button from a specific window or dialog launches Netscape Navigator to provide you with information specific to that topic.

For example, to get Help on the SuperBlock Editor, go to the Editor and select Help→Topics, or click the ? toolbar button. The Help for the SuperBlock Editor appears. To get Help on a given block, open its block dialog (select the block, and then press Return), and click the Help button. The Help for the active block is displayed.

2.8.7 Using MATRIX_X Help with Different Versions of Navigator

If you are not familiar with HTML browsers you should read the Netscape Navigator online documentation. The MATRIX_X online Help deals exclusively with the Navigator. If you have Communicator, which includes the Navigator as part of a tool suite, only the Navigator is relevant to MATRIX_X.

For more information on Netscape products, see Netscape's home page at <http://home.netscape.com>.

4.X Navigator Commands

A standalone Navigator (sans Communicator) is shipped with MATRIXx 6.1 or higher.

- In Navigator 4.X, the NetHelp application disables all normal browser menus and toolbar buttons in a Netscape window. If you want to print or manipulate a MATRIX_X Help topic, you must first send the file to a new window. To do this, place your cursor in the frame containing the desired text, and then use the right mouse button to raise the Navigator Shortcut menu; select Open Frame in New Window. The new window has all the standard Navigator options enabled. You can now print the Help file, or even save the HTML source and edit it locally (this is useful when you are writing online Help for a MathScript program and you'd like it to look the same as MATRIX_X Help).
- To alter the appearance of a Netscape window (for example the font sizes or styles), use Edit→Preferences. Note that changes you make in one window affect all others.
- For more information on Netscape products open a new window and select Help→Contents. The Netscape NetHelp window appears.

Navigator 3.X Commands

Although Wind River does not ship Navigator 3.X, the MATRIX_X Help interface supports it. To get more information on using Netscape 3.X, read the Netscape Navigator HandBook. This document is available from the Help menu on the Netscape window frame. By default, you can't see this menu from the MATRIX_X Help window because NetHelp turns off the toolbars for the standard browser.

- On UNIX platforms you can raise the standard toolbar. In the MATRIX_X Help window, hold down the right mouse button and select Show→Menubar. Now you have access to all Netscape commands available from the toolbar. Select Help→Handbook for more information on the Navigator.
- You can use the Option menu to enable other parts of the window. To edit the appearance of a Netscape window (for example the font sizes or styles), use Options→General Preferences. Note that changes you make in one window affect all others.

2.9 MATRIX_X Release Information

For current MATRIX_X release information, see the MATRIX_X 7.0 *Release Notes*:

- online books: click Release Notes on the document CD Welcome page.
- online Help: select the topic *Release Info*→*Release Notes*

2.10 MATRIX_X Customer Support

For up-to-date information on how to obtain customer support for MATRIX_X, visit the Wind River web site at the following URL:

<http://www.windriver.com/support>

To contact customer support for MATRIX_X:

- Send E-mail to **support@windriver.com**.
- Phone **1-800-USA-4WRS (800-872-4977)**.

3

Xmath

Xmath provides tools for mathematical analysis. You can create, store, plot, and explore data in Xmath. You can define your own functions, commands, and objects, and also link in externally compiled C or Fortran code. Xmath is the controlling environment for SystemBuild and related products. This chapter gives an overview of Xmath functionality.

3.1 Introduction to Xmath

The following sections introduce the Xmath tools and capabilities:

- [Data Handling](#)
- [Numerical Analysis](#)
- [MathScript](#)

3.1.1 Data Handling

MathScript, the language of Xmath, allows you to define and manipulate data in the form of numbers, objects, graphs, and text. Xmath provides a graphical user interface to facilitate data management. You can save, load, import, and export data.

3.1.2 Numerical Analysis

Xmath provides an extensive library of commands and functions, including mathematical functions and filter design functions. Xmath also provides two plotting facilities, one with an interactive graphics display, and the other integrated with a programmable GUI facility.

Optional Xmath modules contain commands and functions to address special uses. The modules are documented in online Help and each has an online manual. Discussions of theory and examples are provided in the manuals. See [2. MATRIX_x Publications, Online Help, and Customer Support](#) for a summary of available documentation.

3.1.3 MathScript

Xmath's programming language, MathScript, allows users to alter or extend Xmath's functionality. An interactive debugger and a full complement of checking utilities simplify developing scripts to define functions, commands, and objects.

Xmath has an object-oriented structure that makes it unique among numerical analysis tools. This enables efficient numerical handling, including the overloading of operators, and more. Xmath's hierarchical objects greatly reduce the amount of user programming devoted to checking data characteristics.

Xmath includes a fully programmable graphical user interface (PGUI or GUI). This programmable GUI allows you to create and manipulate windows, dialogs, and other user interface tools. Any user can develop convenient user interfaces. You can find instructions for using and building GUI applications in the Xmath online Help topic: MathScript Programming, Programmable GUI.

MathScript supports calling external routines from within Xmath, or you can call Xmath from your own C programs. The Linked External (LNX) facility uses an interprocess communication (IPC) mechanism for communication between your external routine, which runs as a separate process, and Xmath. You can modify and recompile your routine without exiting Xmath, so that you can use and debug external programs in the same session. The User-Callable Interface (UCI) allows a C program to invoke Xmath as a computational engine. You can invoke Xmath from your C program and pass it values or expressions to evaluate and retrieve results, perform calculations, or plot values. For information on how to create LNXs and UCIs, see the *Xmath User's Guide*.

3.2 Getting Started in Xmath

This section assumes that Xmath has been properly installed and configured. See the *MATRIX_X System Administrator's Guide, UNIX Version* for installation details.



NOTE: Many of the operations described in this guide can be accomplished by alternative methods and shortcuts. To simplify the presentation, only one method is specified in most cases.

3.2.1 Directories Defined by Environment Variables

The MATRIX_X product line is installed in a directory known as ISIHOM_E. The installation process modifies Xmath startup scripts and provides the location of ISIHOM_E as an environment variable (**\$ISIHOM_E**) that is known *only* within the MATRIX_X environment. Three additional environment variables, also known only within the MATRIX_X environment, define three subdirectories of ISIHOM_E: **\$XMATH**, **\$CASE**, and **\$SYSBLD**.

The MATRIX_X environment variables are recognized only in the Xmath command area. If you need to use them elsewhere (for example, in the operating system), you must specify the full pathname. In such cases, we indicate the file location with italics: *ISIHOM_E*, *XMATH*, *SYSBLD*, and *CASE*. If you do not know this pathname, you can determine it by typing the following command within the Xmath command area:

```
oscmd("echo $variable");
```

where **\$variable** is **\$ISIHOM_E**, **\$XMATH**, **\$CASE**, or **\$SYSBLD**.



NOTE: The environment variables discussed within this section are subject to change, and therefore, should not be used in scripts.

3.2.2 Starting Xmath

To start and run Xmath, type the following command at the system prompt:

```
% xmath &
```



NOTE: The ampersand (&) directs the process to run in the background.


Xmath starts and the Xmath Commands window is displayed as shown in [Figure 3-1](#).

3.2.3 The Xmath Commands Window

When you invoke Xmath, the Xmath Commands window is displayed (see [Figure 3-1](#)).

You type input in the command area. Output and environment status are displayed in the log area above; error messages appear in the message area below.

Figure 3-1 **Xmath Commands Window**

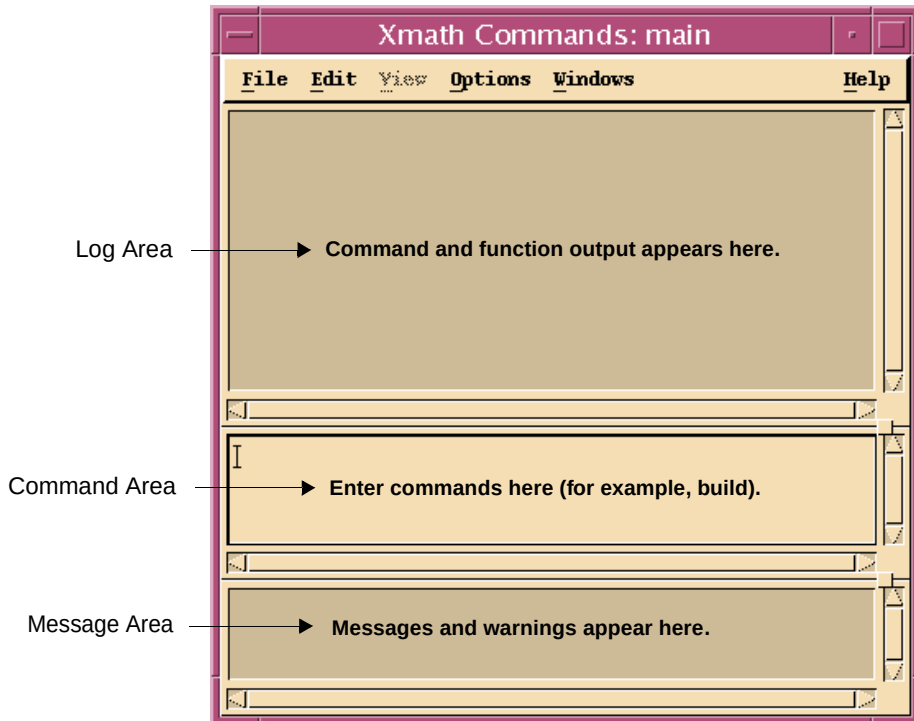

Menu Choices

Menu choices available in the Xmath Commands window are:

- The Edit menu displays commands for editing the Xmath command area: Command Recall, Clear Log Area, Clear Command Area, Clear Message Area, Send Command, and Insert New Line.

The Edit→Command Recall item lets you recall a command; you can also use the Ctrl-↑ (previous command) or Ctrl-↓ (next command) key sequences. Type @ to display your last 10 commands.

- The View menu is reserved for expansion.
- The Options menu has a Format menu item for selecting the format of numeric values displayed in the Xmath log window.
- The Window menu lets you bring up the Graphics or Palette window or invoke SystemBuild.

Command Window Execution

After typing a MathScript instruction, you press the Return key, and the instruction is executed by Xmath. Press Shift-Return to add a new line to be executed with previous lines.

For example:

for i=1:10	Press Shift-Return at the end of the first line to add a new line.
i?	Press Shift-Return at the end of the second line to add a new line.
endfor	Press Return to send the multiline for loop to Xmath.



NOTE: The above text is not valid for cutting and pasting from online format into Xmath.

3.2.4 Running Demos

For a tutorial of Xmath's basic features, see "Xmath Jumpstart" in *Xmath User's Guide*. For an online demo, click in the command area, and then type:

demo

You can choose from several example scripts. As a script executes, explanatory text is displayed in the log and message areas; a Pause dialog pauses the script to give you time to read the text or view a plot. Move the Xmath Pause dialog so that it does not obscure the Commands window.

3.2.5 Accessing Online Help

To access online Help from Xmath, select Help → Topics from the Xmath Commands window. See [2.8 Using Online Help](#), p.20, for detailed instructions on using the online Help feature.

3.2.6 Stopping Xmath

- To exit from Xmath, select File→Quit from the Commands window menu bar. Xmath prompts you to save the workspace.
- To stop an Xmath operation, type Ctrl-C. Note that Ctrl-C cannot interrupt a process in communication with the operating system (**load**, **save**); this includes creating and displaying windows.
- To abort Xmath if the program stops responding (for example, after a system error), type Ctrl-\ (Control backslash). Xmath attempts to save the workspace to a file called **abort.xmd** in the current directory.

3.3 Performing Sample Xmath Tasks

This section introduces some basic and advanced Xmath features, including MathScript. If you have never used a mathematical analysis package, become familiar with the demos described in [3.2.4 Running Demos](#), p.34, before continuing.

In the sections below, instructions that you enter in the commands area are shown in **bold Courier**. A description of the instruction, if applicable, and related Help topics are found following the Xmath comment symbol (#), to the right of each input.

Try some of the examples below. You do not need to type comments. If you are accessing this document online, the instructions can be copied and pasted to the command area for execution.



NOTE: Command and function names can be shortened to a unique opening substring (as few as four characters).

If Xmath is not running, see [3.2.2 Starting Xmath](#), p.31.

3.3.1 Creating Data

The first step in mathematical analysis is usually creating some data. Enter the following MathScript statements to create and save the variables (comments are for your information):

```
a=[1,2,2^2,3^3] # See punctuation.
b=1:.1:5        # Define a variable. See vector and operators.
c=sin(b)        # See regular vector.
                # Call a function. See functions.
```

Xmath provides the ability to save a graph as data (to a variable):

```
graph1=plot(c,{title="Creating the Graph Object graph1."})
```

For more information on graph objects see the online Help topic “Graph Object” under Xmath→Plotting.

3.3.2 Getting to Know Objects

You have just created two types of numeric objects. Let's identify each object.

```
whatis b          # See commands for command calling syntax.  
whatis c          # See objects.
```

Look at the vector topic in the online Help. **vector** is a numeric class. Nonnumeric, or complex, objects are strings or combinations of strings and numeric objects. Polynomials fall into this category:

```
d=makepoly(a,"d")    # See makepoly.  
e=polynomial(1:3,"d") # See polynomial.
```

Xmath's object structure allows you to build mathematical constructs in a natural way. Create a system as follows:

```
sys=system(d,e)      # See system and transfer function.
```

Some functions accept only a certain type object and return another type object. For example, **char()** accepts an integer and returns a string:

```
str=char(65)
```

The **freq()** function accepts a system and returns a parameter-dependent matrix (PDM). A PDM is a special object that stores matrices in relation to an independent parameter or domain. (In SystemBuild, simulation output is a PDM.) The independent parameter is typically time or frequency.

Let's see how PDMs look.

```
f=freq(sys,b)?  
g=freq(sys,{fmin=1,fmax=length(f),npts=length(f)})?
```

To create **f**, we specified a vector of frequencies; this became the domain. To create **g**, we let **freq()** calculate the frequencies for the domain. Let's compare the two:

```
graph1=plot(f,{rows=2})?  
graph2=plot(g,{row=2})?
```

For more on PDMs, see **pdm** and **PDM** object in online Help. For more on the **plot()** function, see the *Xmath User's Guide* and the *plot* topic in the MATRIX_X online Help.

3.3.3 Saving, Loading, and Printing Data

To list the variables you have created so far, type

```
who
```

Note the sizes (see `who()` in online Help for an explanation).

To save everything you have created, type

```
save
```

Xmath saves all data to a file with the default name **save.xmd** in the current working directory. (You may want to specify a filename because **save.xmd** will be overwritten by the next **save** command.) The first of the following two commands saves your variables to a file, and the second uses a wildcard to save a subset of variables to a different file.

```
save "try.xmd"  
save "try_2.xmd" g* sys
```

See “save” and “wildcards” in the Xmath online Help.

Type the following command to display your working directory:

```
show directory
```

You can use the Xmath operating system command **oscmd** to list the files you saved:

```
oscmd("ls try*")
```

The operating system should find both **try.xmd** and **try_2.xmd**. If it does, you can delete what you have created in Xmath:

```
delete *
```

Retrieve the second file you saved and use the function **who()** to list the variables that you have:

```
load "try_2"  
who
```

Graphics

Let's use the variable **sys** again:

nyquist(sys)?

The function **nyquist()** creates a plot; however, the output of **nyquist()** is not the graphics object. To save the contents of the Graphics window, use one of the following methods:

- In the Xmath Graphics window, select File→Bind to Variable, and then specify the variable name **graph3**
- From the Xmath Commands window command line, type:

graph3=plot()

You now have three graph objects: **graph1**, **graph2**, and **graph3**. You can display them in a manner analogous to other variables:

graph1
graph2
graph3

Printing Graphs

To print the graph currently displayed in the Graphics window, use one of the following methods:

- In the Xmath Graphics window, select File→Print and fill in the resulting dialog.
- In the Xmath Commands window, enter

hardcopy {color=0}

The setting **color=0** ensures that you receive a black and white rather than a color plot, which is the default.



NOTE: To use the **hardcopy** command to print directly, the environment variable **\$XMATH_PRINT** must be defined. If you need further help, see the *Xmath User's Guide*.

Use **hardcopy** to save your graphics to a PostScript® (**.ps**) file and then submit the file to the printer with a standard UNIX command. For example:

hardcopy graph3, file="graph3.ps", {color=0}

From a Terminal window, type:

```
lpr -P printer_name graph3.ps
```

3

3.4 MathScript

MathScript, the language of Xmath, defines statements, constructs, punctuation, functions (MSFs), commands (MSCs), and objects (MSOs). You can use MathScript to create your own functions and commands. Open a text editor, and create a file named **cdown.msf** (.msf corresponds to MathScript function) with contents as shown in [Example 3-1](#).



NOTE: The filename must be all lowercase.

Example 3-1 **cdown.msf**

```
#[
    cdown counts from the integer input down to 1
    and displays the square root of each count.
    cdown outputs a vector of the square roots
]#
function [out]=cdown(c)

if is(c,{integermin=1}) then
    out=[];
    display "*****"
    for i=[c:-1:1]
        display "SQRT(" + string(i) + ") = " + string(sqrt(i))
        out=[out,sqrt(i)];
    endfor
else
    error("cdown accepts positive integers only","C",c)
endif

endfunction
```

Save your file in the current directory for Xmath (or any directory in the lookup path), and return to Xmath. To see your current lookup path:

```
show path
```

To add a new directory to the path:

```
set path "directory path specification"
```

Try calling `cdown()` with valid and invalid inputs:

```
cdown(5)
```

```
cdown(-5)
```

```
cdown("what, me worry?")
```

3.5 The Xmath Debugger

The Xmath debugger helps you to debug MathScripts you write (MSFs, MSCs, and MSOs). You can control the Xmath debugger interactively from the Debugger window (see [Figure 3-2](#)) or from the command area in the Commands window. This section describes these interfaces.

3.5.1 Starting the Debugger

Debug mode starts under three circumstances:

- A call to **debug** is made with a script that is set up for debugging—that is, you execute the debug command:

```
debug script_name
```

The debugger opens automatically on the first executable line in the script.

- A script contains a syntax error (for example, an error in punctuation, such as a missing brace: `plot(a,{xlab="A missing brace")`).
- A script contains a run-time error. A run-time error occurs when an instruction is impossible to process. The following statement would cause a run-time error because the operation `+` does not accept an integer and a string:


```
x=5 + "hello"
```

Normally, when an error is detected in a script, Xmath automatically displays the error in the debugger window and sets the interpreter to debugging mode. To prevent the interpreter from going into debugging mode, execute the command:

set debugonerror off

Xmath displays the debugger window, but the interpreter does not go into debugging mode.

Figure 3-2 Xmath Debugger Window in Debug Mode

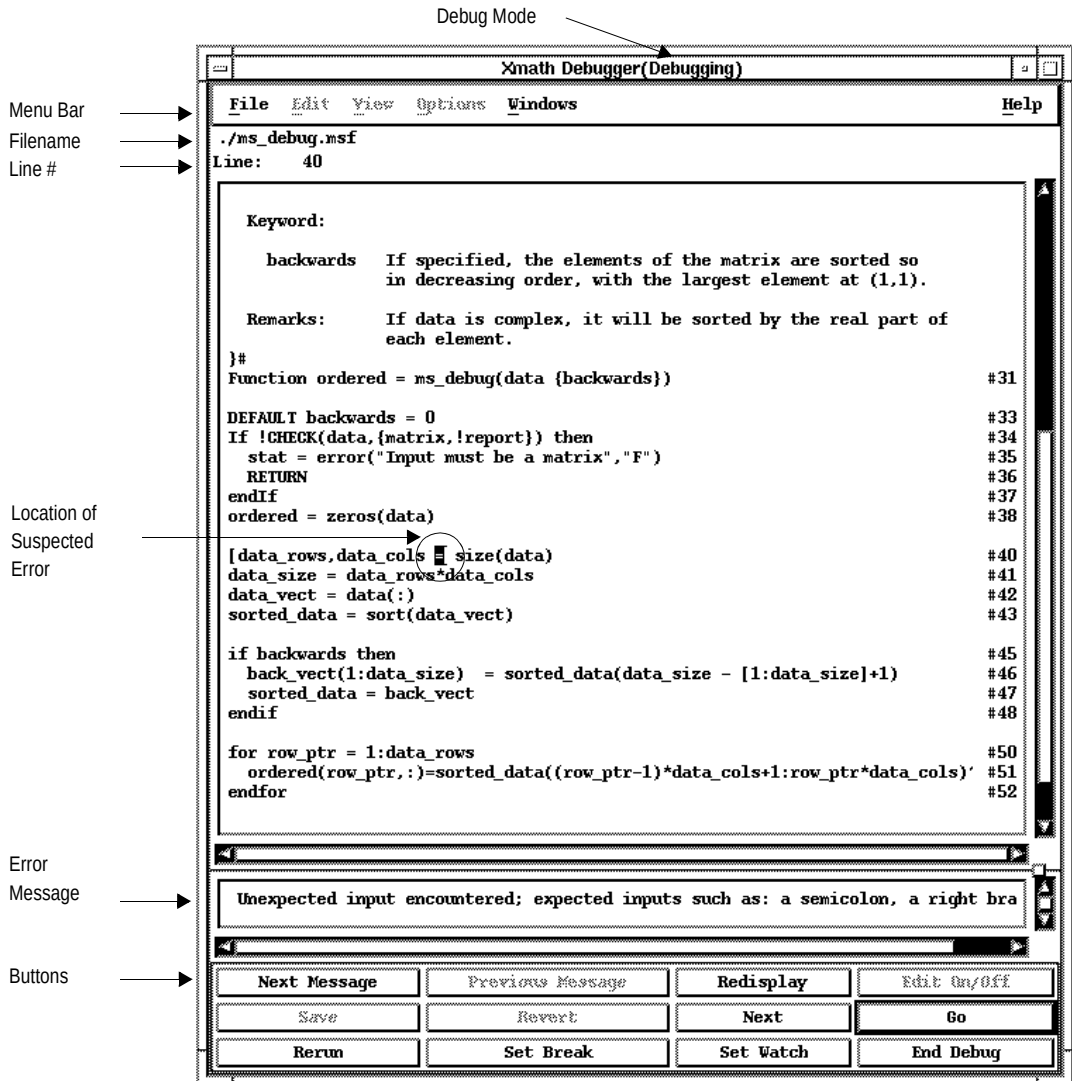

3.5.2 Using the Debugger

You can provide instructions to the Xmath debugger to debug MathScripts you write (MSFs, MSCs, and MSOs) interactively from the Debugger window or from the Xmath command line in the Commands window. You can use the buttons, such as Set Break and Set Watch, shown in [Figure 3-2](#), or type the equivalent commands in the commands area to perform debugging tasks.

In the command window, let's start the debugger by typing:

```
debug cdown
```

The debugger sets a break at the first line of executable code—in this case, line 6. Now that a break point is set, let's try the debugger:

```
cdown(2)
```

Look at the difference in the command area prompt. You are now in debug mode; you can step through the code and examine local or global variables. Type **next** to continue until you reach the first line of the **for** loop. Click Set Watch on the variable **i**, or type:

```
set watch i
```

Click Next or type **next**. Note that you travel through the for loop two times, and you are notified when **i** is incremented.

You can examine variables local to the function. In the command area, type:

```
who  
i?
```

When you fall out of the loop, type **next**, or **go** to run the function through to the end.

For additional information, see the “MathScript Programming→MathScript Debugger” online Help topic.

3.5.3 Exiting the Debugger

When you reach the end of the MathScript, you automatically exit debug mode. Type **abort** in the Commands window to exit debug mode before completing the script.

3.5.4 Correcting Errors During Debugging

When you are in the process of developing a MathScript, you can open your file in an ASCII text editor and fix problems that the debugger locates. After you save your file, you can restart the script, and start debugging again. The debugger identifies the locations of errors by means of program line numbers; however, one limitation of some editors is that they do not support line numbers. You can use the editor's find feature to locate the error by copying the line containing the error from the debugger to the search field. To avoid this inconvenience, you can use an ASCII editing program that supports line numbering.

3.6 Xmath Plotting

Xmath provides a choice of three basic plotting functions:

- The **plot()** function provides an easy to learn syntax for 2d and 3d plotting in an interactive graphics window. For a quick, interactive look at your data, and for 3d plotting, the **plot()** function is a good choice.
- The **uiPlot()** function provides full featured 2d plotting integrated with an extensive programmable GUI facility. If you want more control over the formatting of your 2d graphics, or the ability to integrate plots with your own interactive Xmath PGUI tools, then **uiPlot()** has the power you need.
- The **plot2d()** function provides quick access to advanced formatting features of the **uiPlot()** function, while avoiding the cost of constructing a programmable GUI tool. Use **plot2d()** to obtain highly-customized 2d graphics without writing a PGUI tool.

3.7 Exploring Additional Topics

There are many more topics to explore in Xmath. For additional information, see the MATRIX_X online Help and the *Xmath User's Guide*.

4

SystemBuild

SystemBuild is a graphical programming environment that uses a block diagram paradigm with hierarchical structuring for modeling and simulation of linear and nonlinear dynamic systems. You can use the SuperBlock editor to build block diagram models, and then test them with SystemBuild Simulator and additional analysis tools. This chapter presents an overview of SystemBuild, as well as a tutorial to guide you through some of the most common SystemBuild tasks. The tutorial includes the use of BetterState with SystemBuild.

Additional information about SystemBuild is available:

- The *SystemBuild User's Guide* details use of the SystemBuild SuperBlock Editor and the SystemBuild Simulator. It also contains a comprehensive guide to terms, concepts, and keyboard and mouse actions, as well as several chapters on special topics.
- The extensive SystemBuild block library and other technical reference topics are documented in the MATRIX_x online Help.
- [2.6 SystemBuild Books](#), p.18 lists additional SystemBuild publications.

4.1 Introduction to SystemBuild

This section introduces fundamental SystemBuild concepts, tools and functions.

[Table 4-1](#) provides definitions for key terms used throughout this guide and in other SystemBuild documentation.

Table 4-1 **Definition of Key SystemBuild Terms**


Term	Definition
SuperBlock	A basic hierarchical object in SystemBuild, which serves as a container for blocks and defines the environment in which they operate.
Block	A basic functional element of SystemBuild. A set of blocks are used to make a block diagram model of a controller or a real-time system.
Internal Connection	Signals and data are passed between blocks using connections that appear as lines in the diagram within the Editor window. Internal connections pass data between blocks within the same SuperBlock.
External Connection	Connections between the SuperBlocks of a model and between the SuperBlocks and the outside world.
BetterState Chart	A construct that maintains state information, controls state transitions based on events and conditions, and produces actions associated with states and transitions.

4.1.1 Catalog Browser

The Catalog Browser is used to manage your SystemBuild models. You use the Catalog Browser to save and load model catalogs composed of SuperBlocks and BetterState Charts. It can also be used to view currently loaded SuperBlocks and BetterState Charts, create new SuperBlocks and BetterState Charts, and to select SuperBlocks and BetterState Charts for editing, as well as other functions.

The Catalog Browser, shown in Figure 4-1, contains a menu bar and a tool bar with buttons that are shortcuts to menu operations. The main portion of the Catalog Browser is divided into two *panes*. The left pane displays a hierarchical catalog tree of different types of objects (for example, SuperBlocks). The hierarchy provides compartmentalization of models and allows you to build and visualize extremely large models; it also provides for reuse of elements of a diagram. The right pane contains the contents of the catalog object selected in the left pane.

Figure 4-1 Catalog Browser

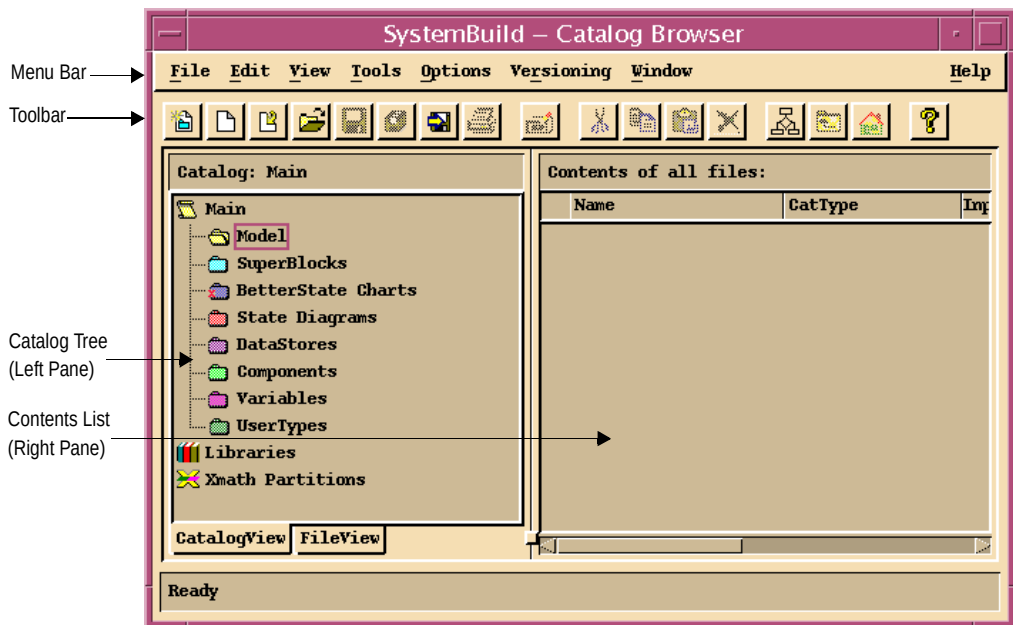


4.1.2 SuperBlock Editor

The SuperBlock Editor (also known as the Editor window or Editor) offers a user-friendly graphical modeling environment, which allows you to construct continuous-time, discrete-time, and hybrid systems of arbitrary complexity. You use the Editor window (see [Figure 4-2](#)) to edit the contents of your model.

SystemBuild supports the use of up to 20 Editor windows at once. Each Editor window can display the contents of one SuperBlock. The Window menu available on both the Catalog Browser and the SuperBlock Editor facilitates switching between the Catalog Browser to select a SuperBlock for editing, and an Editor window to do the editing.


Figure 4-2 **SystemBuild Editor**

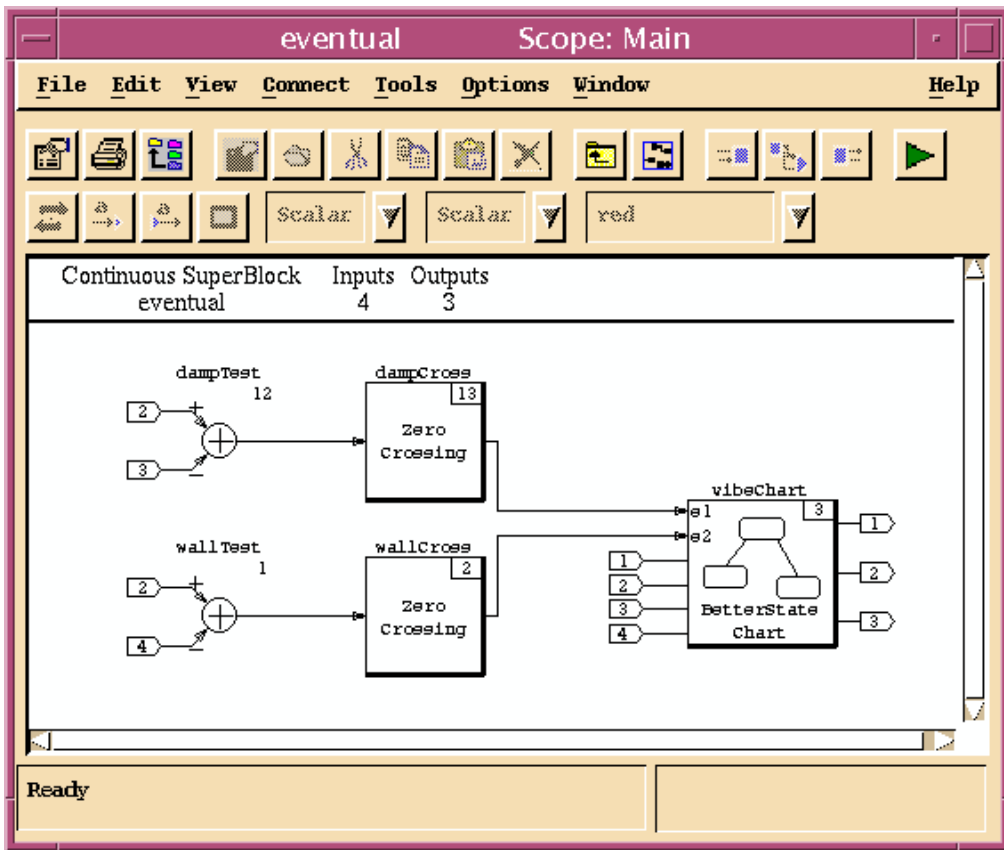

4.1.3 SystemBuild Palette Browser

The SystemBuild Palette Browser (see [Figure 4-3](#)) provides a choice of over 80 block types, including dynamic systems, algebraic and logical functions, signal generators, piecewise linear functions, trigonometric and exponential functions, and user-programmable blocks. The palette feature is customizable. The *SystemBuild User's Guide* describes several methods for adding custom blocks and custom palettes.

Figure 4-3 **Palette Browser**

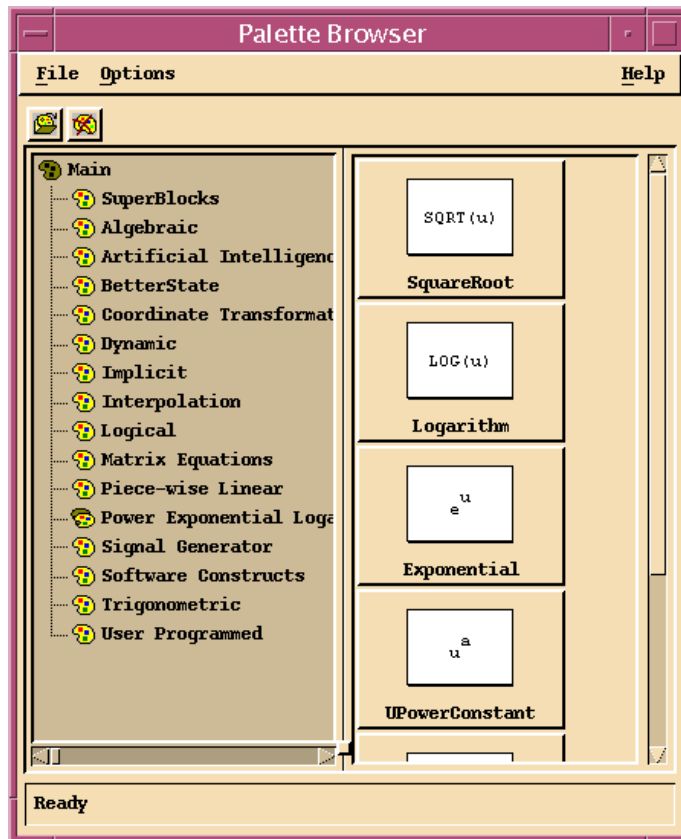

4.1.4 SystemBuild Simulator

The SystemBuild Simulator facilitates simulating your block diagram model under user-defined conditions. The Simulator provides flexibility in algorithms for integration, data input methods, model timing, and other areas. Both interactive and command based simulation interfaces are provided.

Simulation in an interactive mode lets you interact with the model, and monitor outputs of your blocks during simulation. You can debug your models with interactive capabilities such as block stepping or time stepping.

You can change the values of some block parameters during simulation by using the Run-Time Variable Editor (RVE).

4.1.5 Specifying an ASCII Text Editor

You may need a text editor for entering text in some block properties dialogs. Each tab that requires text has a drop-down combo box that allows you to select a text editor. The default is vi.

To customize the editor selections available:

 Edit the *SYSBLD/etc/user.ini* file.

 See the *SystemBuild User's Guide* for details.

4.1.6 SystemBuild Optional Modules

This section describes optional modules available for SystemBuild.

Fuzzy Logic Block

The Fuzzy Logic Block module lets you design and implement fuzzy logic real-time applications that are fully supported by SystemBuild, AutoCode, and DocumentIt.

Neural Network Module

The Neural Network Module lets you define, parameterize, and include neural networks as SuperBlocks in a SystemBuild block diagram. Adding neural network technology to the fully integrated block diagram language of SystemBuild includes the capability to simulate your neural network models and to generate embedded code for them via AutoCode. The module supports both training (offline) and learning (real-time) modes of operation.

State Transition Diagram Block

State transition diagrams (STD) offer the capability to design and implement finite state machines. A mathematically rigorous implementation of finite state machines is supported by simulation, AutoCode code generation, and DocumentIt. .

4.2 Starting and Exiting SystemBuild

In this section you learn how to start and exit SystemBuild.



NOTE: Many of the operations described in this guide can be accomplished by alternative methods and shortcuts. To simplify the presentation, only one method is specified in most cases.

Starting SystemBuild

To start SystemBuild:

1. If Xmath is not currently running, start Xmath as described in [3.2.2 Starting Xmath](#), p.31.
2. Type the following in the command area of the Xmath Commands window:

build

After a short time, SystemBuild is loaded and the Catalog Browser window is displayed.

Exiting SystemBuild

To exit SystemBuild:

Select File→Exit from the Catalog Browser.

SystemBuild asks if you want to save your work before exiting; if you answer yes, the Save dialog appears.

4.3 Basic SystemBuild Tasks

This section describes tasks performed in basic SystemBuild use.



NOTE: Many of the operations described in this guide can be accomplished by alternative methods and shortcuts. To simplify the presentation, only one method is specified in most cases.

4.3.1 Creating a New SuperBlock

The Catalog Browser can be used to create a new top-level SuperBlock. If this window is not activated, click on the Catalog Browser's window frame to raise it to the top, or select Window→Catalog Browser from the Editor.

To create a new top-level SuperBlock and define its properties:

1. Select File→New→SuperBlock.

The SuperBlock Properties dialog appears. Use this dialog to define properties of the SuperBlock, such as its name, type (continuous or discrete), and number of inputs and outputs.

Figure 4-4 SuperBlock Properties Dialog for Creating a New SuperBlock

SuperBlock Properties

Name:

Inputs:

Outputs:

Attributes | Code | Inputs | Outputs | Document | Comments

Type: ▼

Input Naming: ▼

Group ID:

Trigger Options

Timing Requirement:

Output Posting: ▼

Trigger Signal: ▼

Discrete Options

Sample Period:

Sample Skew:

Enable Signal: ▼

Procedure

Class: ▼

Interrupt:

SJK Interface: ☐

OK Cancel Help

2. With the SuperBlock Properties dialog (see [Figure 4-4](#)), perform the following steps:
 - a. Click in the Name edit field, and type:
Sample SuperBlock
 - b. In the Outputs field, set the number of outputs to 1.
 - c. Click OK to verify creation of the SuperBlock.

The SystemBuild Editor (or Editor window) now appears; it contains an Info Bar, which displays the SuperBlock name (Sample SuperBlock), type (Continuous), and other relevant information (0 inputs and 1 output) about the current SuperBlock.

4.3.2 Creating a New Block in a SuperBlock

You create a new block in a SuperBlock by dragging it from the Palette Browser into the Editor window (see [Figure 4-5](#)).


To create a new block in a SuperBlock:

1. With your SuperBlock displayed in the Editor window, select Window→Palette Browser to open the Palette Browser.

Reposition your windows so that both the Palette Browser and the Editor are visible.

2. Click the Algebraic palette in the Palette Browser.
3. Move the mouse cursor over the Gain block icon. Press and hold down MB2. (❶)
4. While holding down MB2, drag the mouse cursor into the Editor window. (❷)
5. With the mouse cursor within the Editor window, release MB2 to complete the drag-drop operation. (❸)

Figure 4-5 Creating a New Block Using the Palette Browser

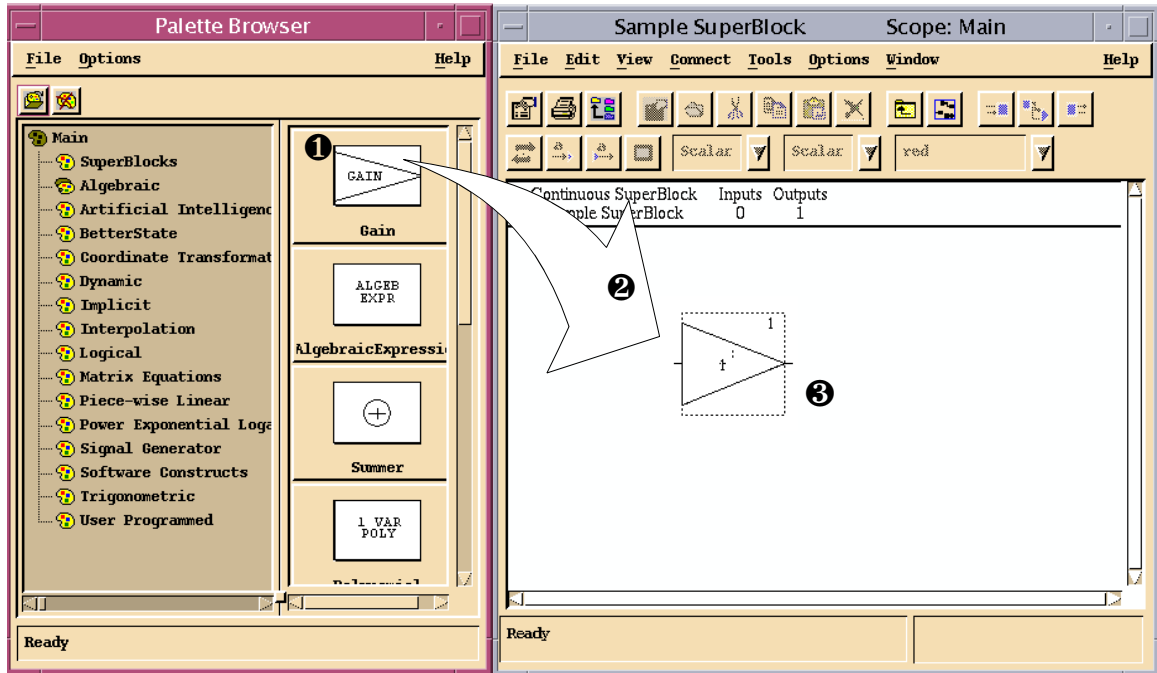

4.3.3 Loading a Model File

Loading a model file opens a previously saved SystemBuild diagram. Once loaded, you can then edit or simulate that model.


To load the **pred_pre**y catalog file from the Xmath command area:

```
load "$SYSBLD/demo/predprey_demo/pred_pre.y.cat";
```

\$SYSBLD is an environment variable that specifies your SystemBuild directory, defined automatically when you start Xmath. Environment variables are recognized only on the Xmath command line. SystemBuild catalogs can also be loaded from the Catalog Browser, but there you must specify the full pathname of the catalog directory.

After the load completes, the Catalog Browser lists the contents of the model (see [Figure 4-6](#)).

Figure 4-6 Predator-Prey Model Loaded into Catalog Browser

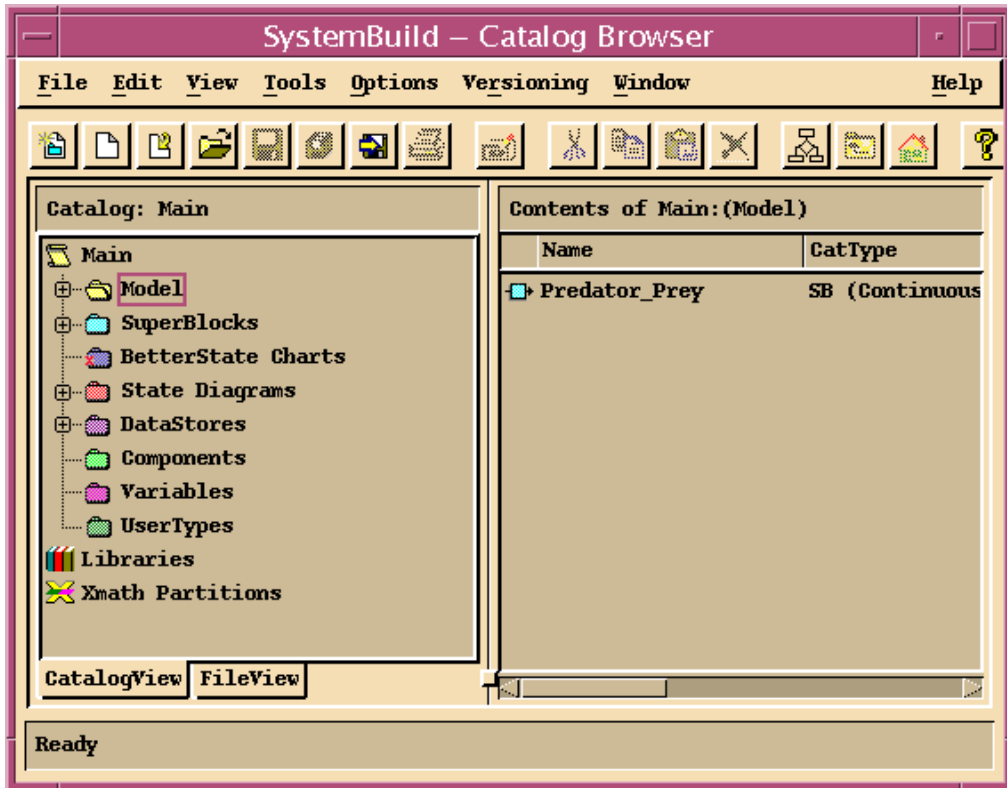


4.3.4 Opening a SuperBlock in the Editor

After loading a model, you can open a SuperBlock in the editor to edit or view it:

1. If needed, load the predator-prey model as described in [4.3.3 Loading a Model File](#), p.55.
2. To see a list of all SuperBlocks currently loaded, click in the left pane on the SuperBlocks node. A listing of the SuperBlocks appears in the right pane.
3. In the right pane, double-click the Predator_Prey SuperBlock.

This opens an Editor window and displays the contents of the SuperBlock (see [Figure 4-7](#)).

Figure 4-7 Predator_Prey SuperBlock Displayed in Editor Window

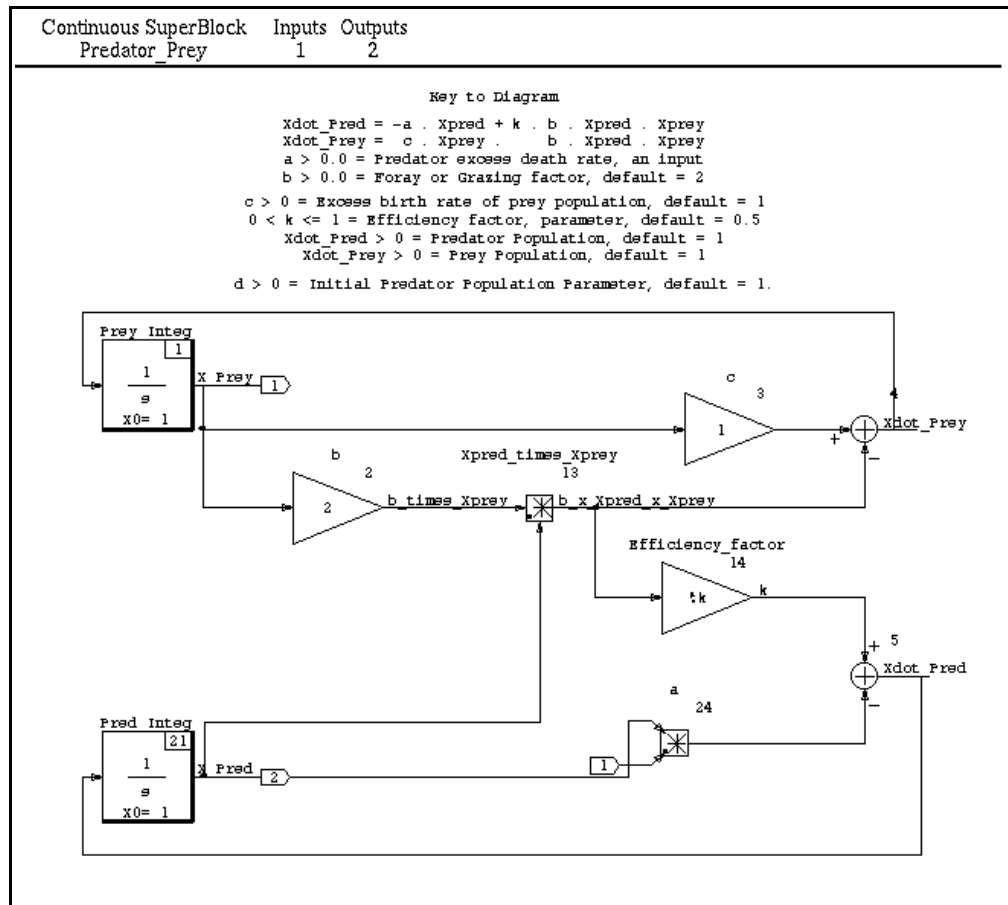

4.3.5 Simulating the Model from the Xmath Commands Window

After a model is loaded, you can simulate it. This section describes performing a simulation directly from the Xmath command area and also from the SystemBuild Editor. Load the predator-prey model as described in [4.3.3 Loading a Model File](#), p.55.

To simulate the predator-prey model from the Xmath commands area:

1. Activate the Xmath window by clicking on the Xmath window's frame.
2. Click within the Xmath command area.
3. Create a time vector and assign the input vector to a variable:

```
t=[0:.01: 50]';  
u=ones(t);
```

4. Input the value of the efficiency factor **k**:


```
k=.333;
```

5. In the Xmath command area, type:

```
y=sim("Predator_Prey", t,u, {graph});
```

Watch the log area of the Xmath window as the model is analyzed and simulated. The simulation output plot, which appears in a separate window, is shown in [Figure 4-8](#).

Figure 4-8 Plot of a Predator-Prey Simulation Output

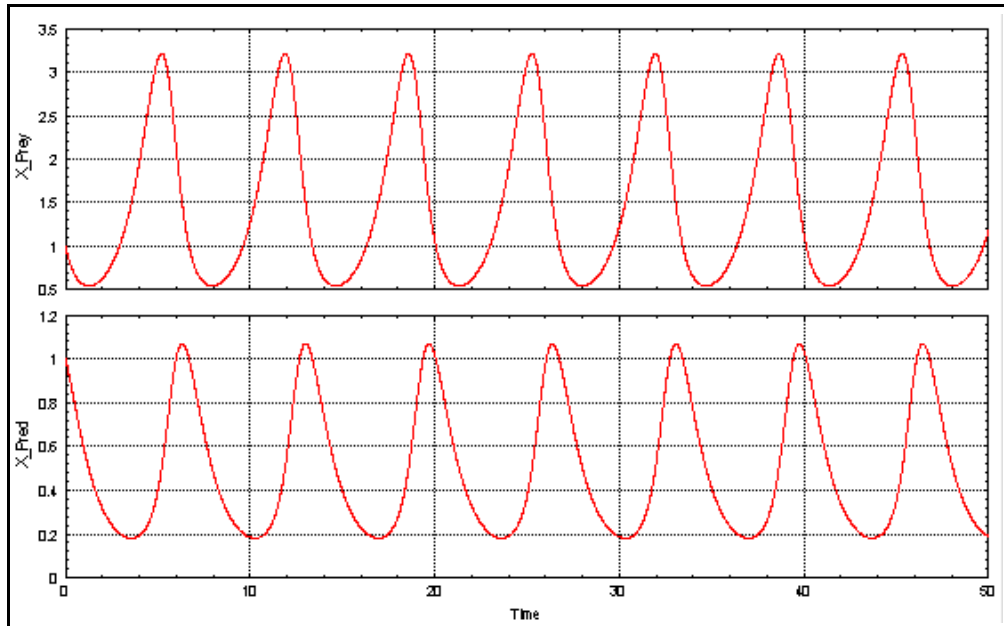

To simulate the model from the SystemBuild Editor:



NOTE: If you performed the simulation from the Xmath command line above and haven't deleted the variables, you can start at [Step 5](#).

1. Activate the Xmath window by clicking on the Xmath window's frame.
2. Click within the Xmath command area.
3. Create a time vector and assign the input vector to a variable:


```
t=[0:.01: 50]';  
u=ones(t);
```

4. Input the value of the efficiency factor k:

```
k=.333;
```
5. Activate the Predator_Prey SuperBlock SystemBuild Editor (see [4.3.4 Opening a SuperBlock in the Editor](#), p.56).

6. In the SystemBuild Editor, select Tools→Simulate from the pull-down menu.
- The SystemBuild Simulation Parameters dialog appears (see [Figure 4-9](#)).

Figure 4-9 SystemBuild Simulation Parameters Dialog

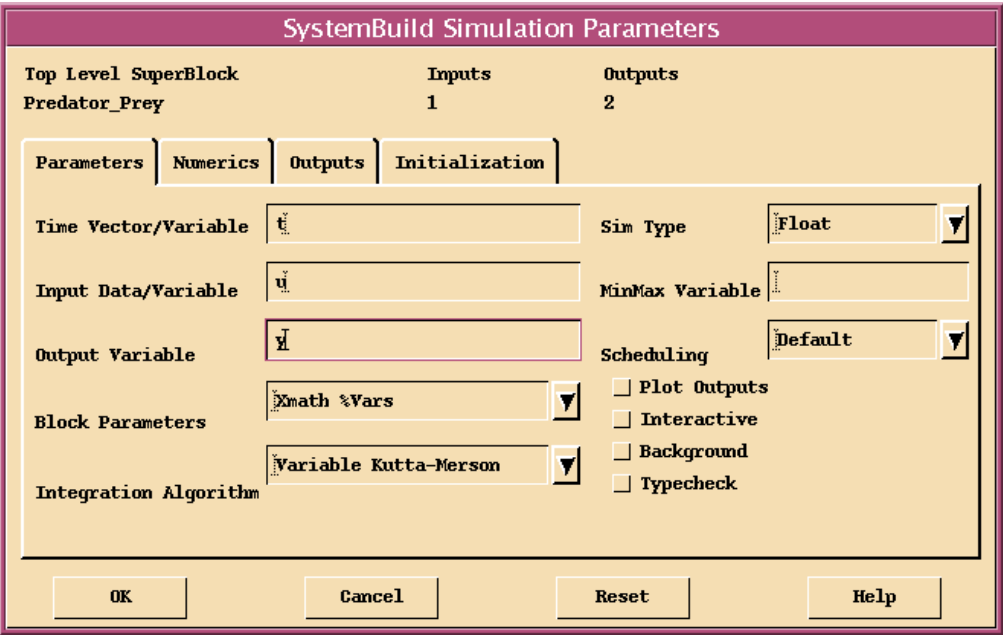

The dialog box is titled "SystemBuild Simulation Parameters". It has a tabbed interface with four tabs: "Parameters", "Numerics", "Outputs", and "Initialization". The "Parameters" tab is currently selected. At the top, it displays "Top Level SuperBlock" as "Predator_Prey", "Inputs" as "1", and "Outputs" as "2". Below the tabs, there are several input fields and checkboxes. The "Time Vector/Variable" field contains "t". The "Input Data/Variable" field contains "u". The "Output Variable" field contains "y". The "Block Parameters" field contains "Xmath %Vars". The "Integration Algorithm" field contains "Variable Kutta-Merson". On the right side, the "Sim Type" dropdown is set to "Float". The "MinMax Variable" field is empty. The "Scheduling" dropdown is set to "Default". There are four checkboxes: "Plot Outputs" (checked), "Interactive" (unchecked), "Background" (unchecked), and "Typecheck" (unchecked). At the bottom, there are four buttons: "OK", "Cancel", "Reset", and "Help".

7. In the SystemBuild Simulation Parameters dialog, enter *t* in the TimeVector/ Variable field, *u* in the Input Data Variable field, and *y* in the Output Variable field; enable the Plot Outputs check box, and click OK.

You can monitor the log area of the Xmath window as the model is analyzed and simulated. The simulation output plot appears in a separate window([Figure 4-8](#)).

4.3.6 Deleting a SuperBlock

To delete a SuperBlock:

From the Catalog Browser (either pane, provided the SuperBlock names appear), select a SuperBlock. Then select Edit→Delete.



CAUTION: Deletion of SuperBlocks cannot be undone.



NOTE: Once you delete a SuperBlock, it is no longer visible to the Catalog Browser. Any SuperBlock that references the deleted SuperBlock, contains an “Undefined” SuperBlock indicator.

4.3.7 Navigating a SuperBlock Hierarchy

The use of hierarchy in your SystemBuild models is crucial to the successful implementation of a system. As mentioned earlier, you use SuperBlocks to create a model hierarchy. This section presents some of the methods for navigating up and down a SuperBlock hierarchy.

You need a fresh start for this exercise:

1. Delete all of the SuperBlocks you may have created, or exit the Catalog Browser (File→Exit), and restart SystemBuild.
2. Load a model with a SuperBlock hierarchy:

From the Xmath command area, enter:


```
load "$SYSBLD/demo/f14_demo/f14new.cat";
```

Navigating with the Catalog Browser

When you navigate with the Catalog Browser, you use the left pane of the browser to expand and collapse SuperBlocks within the tree.

After the f14 model is loaded, the Catalog Browser displays the types of catalog objects (SuperBlocks, BetterState Charts, and so forth) in the left pane. Click on the Model folder icon to see a full list of model objects, including SuperBlocks, in the right pane (see [Figure 4-10](#)).

Figure 4-10 Catalog Browser After Loading the f14 Model

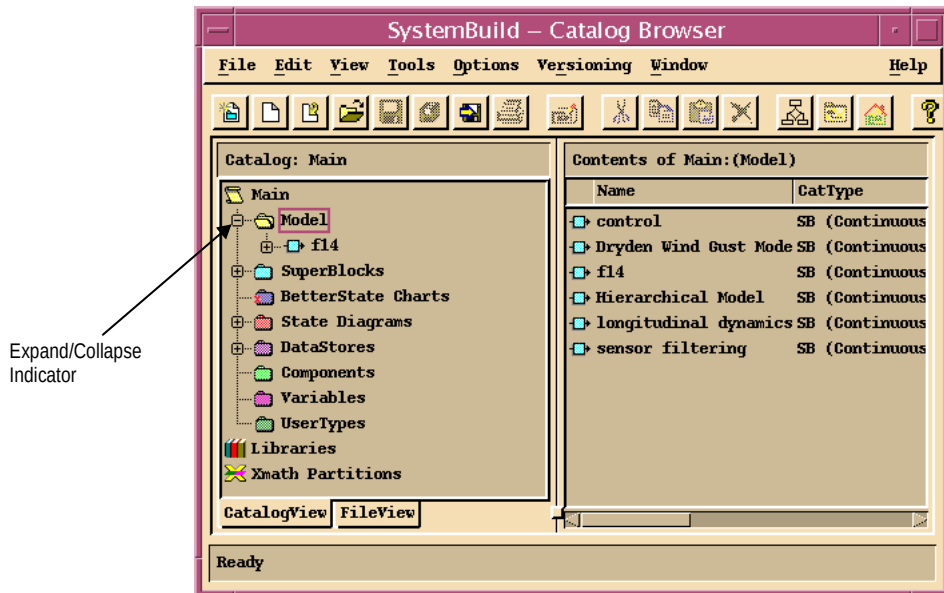

Notice the expand/collapse indicator for the Model folder (left pane). Plus (+), indicates that the folder is collapsed (and at least one additional hierarchical layer can be expanded).


To navigate from the Catalog Browser:

1. Expand the hierarchy of the Model folder in the left pane by double-clicking the folder or by single-clicking the expand indicator, the plus (+) sign.
2. Continue expanding each level of the model (see [Figure 4-11](#)).
3. Open the SuperBlock named **sensor filtering** by double-clicking the SuperBlock in the right pane.

An Editor window appears with the selected SuperBlock on view. You can edit the contents of the SuperBlock.

To edit another SuperBlock, return to the Catalog Browser, and double-click any SuperBlock in the right pane.

Figure 4-11 Expanded Hierarchy of the f14 Model

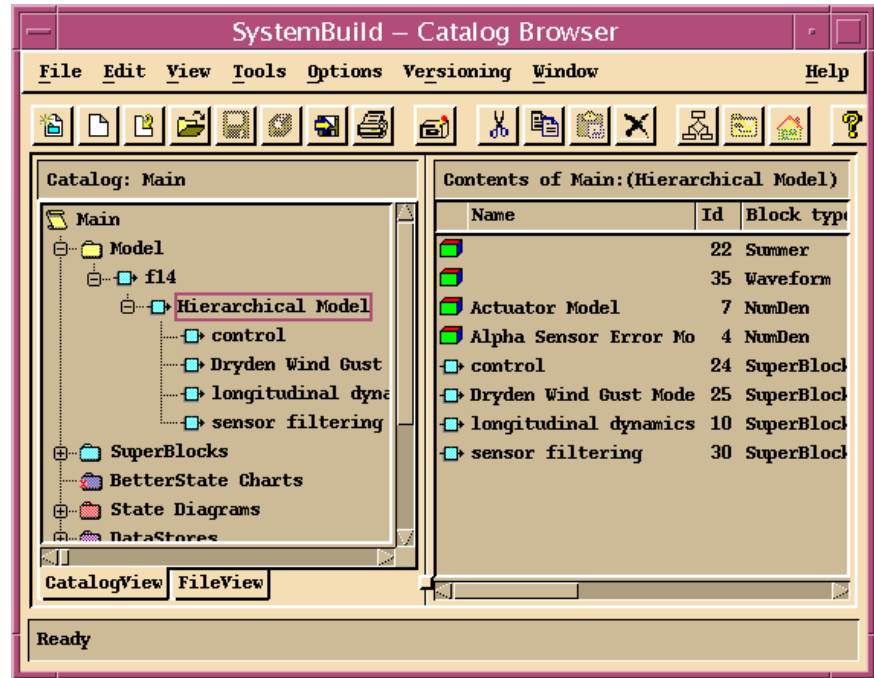

Navigating from the Editor Window

You can navigate up and down a hierarchy from within the Editor window using menu items.

To navigate from the Editor window:

1. From the Catalog Browser, open the **sensor filtering** SuperBlock (see [Step 1–Step 3](#) above).
2. With the Editor window, select View→Parent→Hierarchical Model to view this SuperBlock's parent.

The Editor window now displays the SuperBlock named **Hierarchical Model**.

3. To move down the SuperBlock hierarchy in the Editor window, click the desired SuperBlock icon; then select Edit→Open.

The Editor window now displays the selected SuperBlock.



NOTE: The MATRIX_X demo package includes a simulation of the F14 model.

To run the demo simulation:

1. Enter the command **demo** from the Xmath Commands window.
The Xmath Demos dialog appears.
 2. Enable the SystemBuild Demos... radio button and press OK.
If the Save SysBld & Xmath workspace dialog appears, enable the Yes->Save radio button and click OK.
The SystemBuild Demos dialog appears.
 3. Enable the F14 Jet Simulation radio button and click OK.
Follow the prompts to run the demo.
-

4.3.8 Printing from the Editor Window

To print the contents of an Editor window:

Select File→Print.

Printing uses the settings you last made in the Page Setup dialog, also available from the File menu. The default printer is specified by the **\$PRINTER** environment variable.

You can change the print command and its option(s) that appear in the Print dialog to any print command that is available on your system; you can also specify the list of printers available in the *SYSBLD/etc/user.ini* file (see the *SystemBuild User's Guide* for details).

4.4 SystemBuild Tutorial

This section presents basic procedures used in the design, development, and simulation of SystemBuild block diagrams:

- [Designing a Block Diagram](#)
- [Creating and Editing a Block Diagram](#)
- [Simulating a SuperBlock](#)
- [Encapsulating a SuperBlock](#)
- [Using a BetterStateChart Block to Model Events](#)



NOTE: This tutorial is designed to lead you through the construction of basic and intermediate SystemBuild block diagrams and BetterState charts. If instead, you wish to examine the completed models, the block diagrams and state charts constructed in this tutorial can be loaded into the CatalogBrowser by executing the following commands from the Xmath Commands window.

```
load "$SYSBLD/examples/gs_tutorial/vibe1.cat";
```

The **vibe1** catalog contains a solution of the basic spring-mass damper constructed in the first four sections of the SystemBuild tutorial. This catalog can be used to skip ahead to [4.4.5 Using a BetterStateChart Block to Model Events](#).

```
load "$SYSBLD/examples/gs_tutorial/vibe2.cat";
```

vibe2 contains a solution of the intermediate spring-mass damper model with event modeling using the BetterState block.

```
load "$SYSBLD/examples/gs_tutorial/vibe3.cat";
```

The tutorial concludes with a challenge exercise. **vibe3** contains a solution.

4.4.1 Designing a Block Diagram

To develop a useful block diagram representation of a physical system, you need to know:

- the analytic behavior of the physical system components.
- how block diagram elements correspond to physical system components.
- how to use SystemBuild editors and dialogs to develop a block diagram.

The Spring-Mass Damper Model

In this tutorial, you develop a block diagram representation for a physical system incorporating a spring-mass damper. The following well-known equation is derived by making standard assumptions about the system behavior:

$$F(t) = m\ddot{x}(t) + c\dot{x}(t) + kx(t) \quad (4-1)$$

Equation 4.1 follows the common convention of indicating time derivatives by dots. F denotes the external force applied to a mass m . The spring introduces a force proportional to and opposite its elongation. The scalar value k depends on the spring, and is called its *stiffness*. Motion of the mass is damped by a force proportional to and opposite its velocity. The scalar value c is referred to as the *damping* constant.

Equation 4.1 provides a mathematical model that can be represented directly by a SystemBuild block diagram. Alternatively, the system analysis that produced the equation can be used to develop a block diagram. But first you need to know how SystemBuild blocks model physical systems.

SystemBuild Block Basics

SystemBuild block diagrams are composed of interconnected blocks. Most blocks in a block diagram receive input signals and produce output signals. A signal is a scalar value that can vary over time. The process performed by a given block to produce its outputs may depend on user-defined properties.

Blocks are combined in a block diagram by connecting outputs to inputs. A group of interconnected blocks can collectively define a SuperBlock. Most SuperBlocks also have input and output signals connected to one or more of its blocks. A SuperBlock can be simulated by specifying each of its input signals with respect to some time vector. A SuperBlock can be a building block in a higher-level SuperBlock. A SuperBlock hierarchy is defined in this manner.

In this tutorial, you use several basic SystemBuild block types to develop the block diagrams of a SuperBlock hierarchy. The introductory block information included here is intended to motivate that development; it is not a complete description of the capabilities and options of the block types.

Constant Block

A Constant block has no input signal. Its output signal is a constant.

ElementDivision Block

The output signal of an ElementDivision block is input signal #1 divided by input signal #2.

Integrator Block

The output signal of an Integrator block is the integration over time of its input signal. The initial value of the output signal of an Integrator can be defined, and an Integrator can be triggered to reset its output signal to a specified value.

Gain Block

The output signal of a Gain block is its input signal multiplied by a constant.

Summer Block

The output signal of a Summer block is the sum of its input signals. Each input signal has a sign which determines if it added to, or subtracted from the output signal.

ElementProduct Block

The output signal of an ElementProduct block is the product of its input signals.

ZeroCrossing Block

During a simulation, a ZeroCrossing block detects the instant at which its input signal crosses zero. The simulation is recomputed to include this additional time point. The ZeroCrossing block output signal toggles between zero and one at such crossings.

BetterState Block

A BetterState block implements a finite state machine. Input signals trigger state transitions. (When a BetterState block is used in a continuous SuperBlock, its events must be triggered by ZeroCrossing blocks.) Output signals are generated by user-defined code associated with states and state transitions.

Getting Started on a Design

Identifying the inputs and outputs of the top-level SuperBlock is a good way to start a design. For the spring-mass damper, there is one input—the external force applied to the mass. The outputs of a top-level SuperBlock are the signals you choose to monitor for the purpose of observing the behavior of the modeled system. Position and velocity of the mass are useful choices here.

Next, make a rough plan for modeling and connecting elements of the physical system. For the spring-mass damper, you have force acting on a mass. That determines an acceleration that can be integrated to give velocity and position. The velocity and position can be used to determine the spring and damping components of the force.

In developing a block diagram, try to identify subsystems that can be built independently. Simulating submodels can help to verify that a complex SuperBlock hierarchy simulation is valid. Also, by encapsulating the subsystems in your area of interest, you can optimize reuse in subsequent designs.

In this tutorial, you start building the spring-mass damper by modeling force acting on a mass.

4.4.2 Creating and Editing a Block Diagram

A block diagram is the graphical representation of a SystemBuild model. To create and edit a new block diagram:

1. Create a SuperBlock.
2. Add blocks to the block diagram (of the SuperBlock).
3. Edit block properties.
4. Connect blocks to each other.
5. Connect blocks to SuperBlock inputs and outputs.
6. Save the SuperBlock



NOTE: Many of the operations described in these procedures can be accomplished by alternative methods and shortcuts. To simplify the instructions, only one method is specified in most cases.

Creating a SuperBlock

To create a new SuperBlock called **vibe**:

1. Start Xmath as described in [3.2.2 Starting Xmath](#), p.31.
2. In the Xmath command area, type:

build

After loading, the SystemBuild Catalog Browser is displayed. If necessary, click on the bar at the top of the window to make it active and bring it to the front.

3. In the Catalog Browser, create a new SuperBlock by selecting File→New→SuperBlock.

The SuperBlock Properties dialog is displayed. The Attributes tab is selected and all properties of the SuperBlock are set to their default values. ([Figure 4-12](#) shows the SuperBlock Properties dialog as it appears during [Step 4](#) below).

Figure 4-12 SuperBlock Properties Dialog


The SuperBlock Properties dialog box is shown with the following settings:

- Name:** vibe
- Inputs:** 1
- Outputs:** 2
- Attributes Tab:**
 - Type:** Continuous
 - Input Naming:** Inherit Higher-Level
 - Group ID:** 0
- Trigger Options:**
 - Timing Requirement:** 0
 - Output Posting:** After Timing Req
 - Trigger Signal:** Parent
- Discrete Options:**
 - Sample Period:** 0
 - Sample Skew:** 0
 - Enable Signal:** Parent
- Procedure:**
 - Class:** Standard
 - Interrupt:** 0
 - SIX Interface:** ☐

4. With the SuperBlock Properties dialog:
 - a. Click in the Name field; name the new SuperBlock **vibe**.
 - b. Verify that the Type of the SuperBlock is **Continuous**.
 - c. Set the number of Inputs to 1.
 - d. Set the number of Outputs to 2.
 - e. Click OK to accept current values and close the dialog.

A SuperBlock Editor is displayed for the new SuperBlock. The information bar at the top contains the type, name, and number of inputs and outputs. The area in which block diagrams are constructed is empty (see [Figure 4-13](#)).

Figure 4-13 SuperBlock Editor (Initial View)

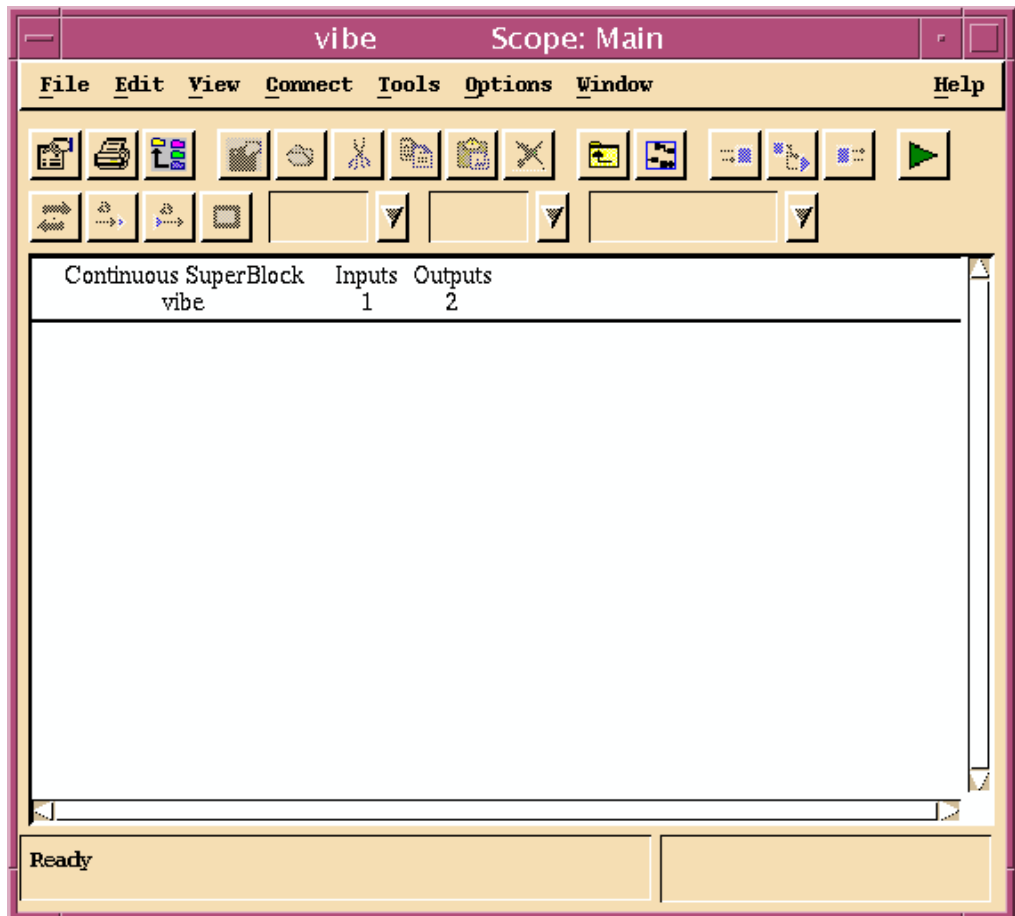

Adding Blocks to the Block Diagram

In this section, you add four blocks to the block diagram of the **vibe** SuperBlock: a Constant block, an ElementDivision block, and two Integrator blocks.

To add a Constant block to the block diagram:

1. Open the Palette Browser by selecting Window→Palette Browser. Position your windows so that the Palette Browser is alongside the Editor.
2. In the Palette Browser, select the Matrix Equations palette.

3. With MB2, drag and drop a Constant block from the Matrix Equations palette into the Editor.


In the same manner, add an ElementDivision block from the Algebraic palette, and two Integrator blocks from the Dynamic palette.

Blocks are positioned in a block diagram by dragging with MB1. Position the blocks as in [Figure 4-14](#).



NOTE: The block ID is displayed in the upper right corner of each block. Your ID numbers might not match those in [Figure 4-14](#).

Figure 4-14 Adding Blocks to **vibe**

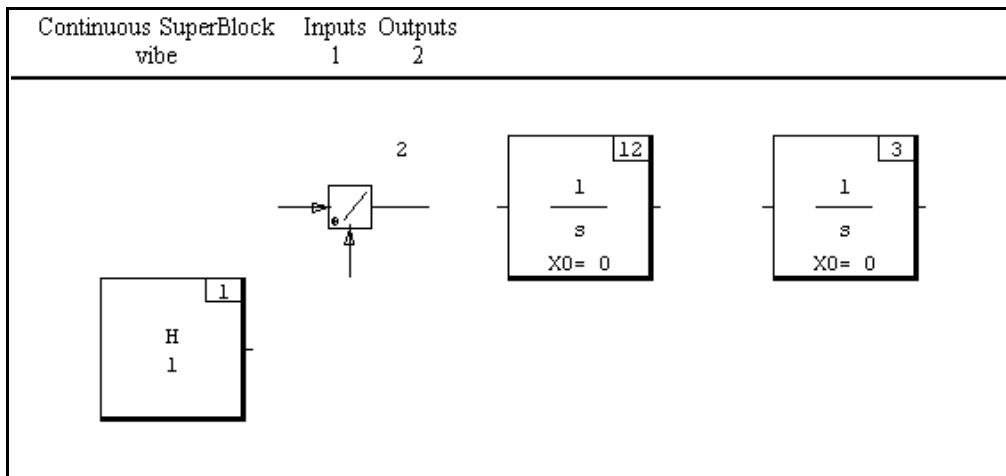

Editing Block Properties

Each block in a block diagram contains properties that can be edited to adjust aspects of its performance. In this section, you open the Block Properties dialog for each block in **vibe** and edit various properties.

To edit block properties for the Constant block:

1. In the Editor, move the mouse cursor over the Constant block (the left most block as shown in [Figure 4-14](#)) and press the Enter key.

The Constant Block properties dialog is displayed. The Parameters tab is selected and all properties are set to their default values. ([Figure 4-15](#) shows the Constant Block Properties dialog as it appears during [Step 3](#) below).

2. Click in the Name field; name the Constant block **mass**.

Figure 4-15 Constant Block Properties Dialog: Parameters Tab

Constant Block

Name: Inputs: Outputs: ID:

Parameters | Outputs | Document | Comments | Icon | Display

Parameter	Value	% variable
ConstantName	mass	
ConstantValue	1.0	m

ConstantName:


OK Cancel Help

3. Verify that the Parameters tab of the Block Properties dialog is selected (see [Figure 4-15](#)).
 - a. Locate the field in the Parameter table, in the Value column, and the ConstantName row. Click in that field and replace **H** with the name **mass**.
 - b. Locate the field in the Parameter table, in the % variable column, and the ConstantValue row. Click in that field and type **m**.



NOTE: The % *variable* property allows you to set parameters of your model by assigning values to corresponding variables in the Xmath workspace. Before simulating this model, you set the mass parameter in the Xmath command window by typing an assignment to the Xmath variable **m** (see [Step 3](#), p.84). In this way you can simulate the model with different parameter settings without editing the block diagram.

Figure 4-16 **Constant Block Properties Dialog: Outputs Tab**

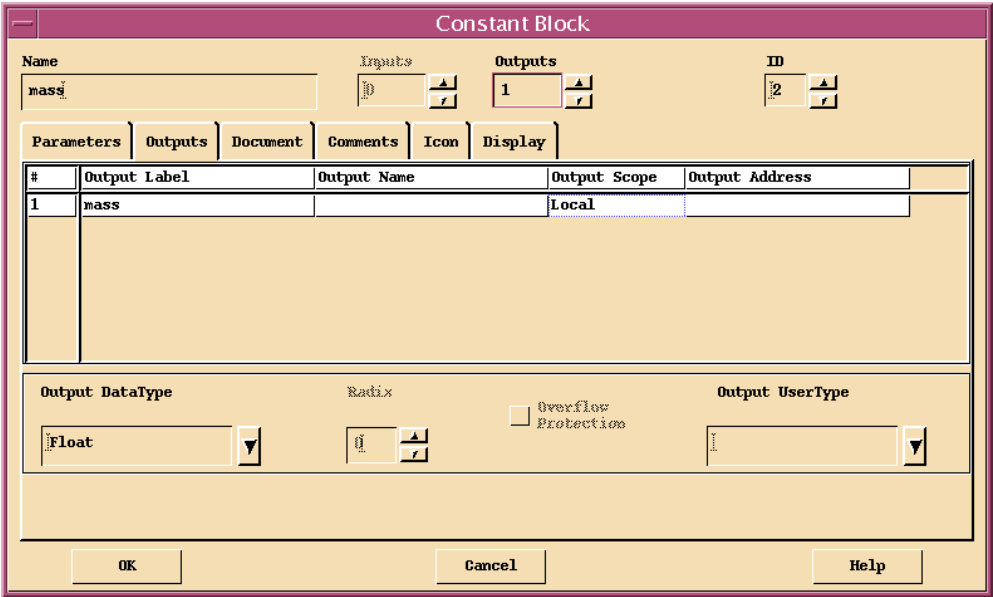

The dialog box is titled "Constant Block". It has several sections:

- Name:** A text field containing "mass".
- Inputs:** A numeric field with "0" and up/down arrows.
- Outputs:** A numeric field with "1" and up/down arrows.
- ID:** A numeric field with "2" and up/down arrows.
- Tabs:** A row of tabs: "Parameters", "Outputs" (selected), "Document", "Comments", "Icon", and "Display".
- Table:** A table with 5 columns: "#", "Output Label", "Output Name", "Output Scope", and "Output Address".

#	Output Label	Output Name	Output Scope	Output Address
1	mass		Local	
- Output Settings:** Fields for "Output DataType" (set to "Float"), "Radix" (set to "10"), "Output UserType" (set to "1"), and an unchecked "Overflow Protection" checkbox.
- Buttons:** "OK", "Cancel", and "Help" at the bottom.


- 4. Click the Outputs tab. (see [Figure 4-16](#)).
Locate the field in the Outputs table, in the Output Label column, and row 1.
Click in that field and type **mass**.
- 5. Click the Display tab (see [Figure 4-17](#)).
Enable the Show Output Labels check box.



NOTE: When the Show Output Labels check box is enabled for a block, the block’s output labels are displayed on its output connectors.

- 6. Click OK to accept current values and close the dialog.

Figure 4-17 Constant Block Properties Dialog: Display Tab

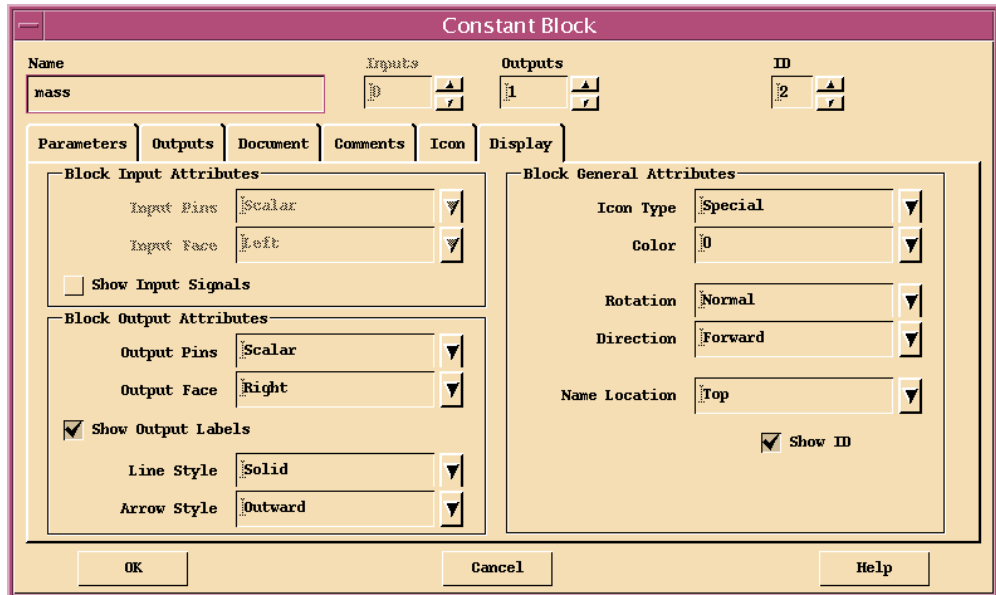

Follow the instructions below to edit block properties for the remaining blocks in **vibe**. You give each block a name, label its outputs, and enable the Show Output Labels check box. For additional detail, refer to steps 2, 4, and 5 above in the instructions for editing properties in a Constant block.

You also set additional properties as noted in the instructions.

To edit block properties for the ElementDivision block:

1. In the Editor, move the mouse cursor over the ElementDivision block (second block from the left as shown in [Figure 4-14](#), p.72) and press the Enter key.

The ElementDivision Block properties dialog is displayed. The Inputs tab is selected and all properties are set to their default values. ([Figure 4-18](#) shows the ElementDivision Block properties dialog as it appears during [Step 3](#) below).

2. Name the block **Feqma**.
3. **Feqma** divides force by mass to calculate acceleration. Naming block inputs can make block connections easier.

In the Input Name column: name input 1 **force**; name input 2 **mass**.

4. Click the Outputs tab and set the Output Label to **acc**.

5. Click the Display tab and enable the Show Output Labels check box.
6. Click OK to accept current values and close the dialog.

Figure 4-18 ElementDivision Block Properties Dialog: Inputs Tab

ElementDivision Block

Name:

Inputs:

Outputs:

ID:

Inputs | Outputs | Document | Comments | Icon | Display

#	Input Name	Input Signal	Input Face
1	force		Left
2	mass		Left

OK Cancel Help

To edit block properties for the first Integrator block:

1. In the Editor, move the mouse cursor over the first Integrator block (second block from the right as shown in [Figure 4-14](#), p.72) and press the Enter key.

The Integrator Block properties dialog is displayed. The Parameters tab is selected and all properties are set to their default values. ([Figure 4-19](#) shows the Integrator Block properties dialog as it appears during [Step 3](#) below).

2. Name the block **accToVel**.

Figure 4-19 Integrator Block Properties Dialog: Parameters Tab

Integrator Block

Name: Inputs: Outputs: States: ID:

Parameters Inputs Outputs States Document Comments Icon Display

Parameter	Value	% variable
Highest Reset	1	
Gain	1.0	
Zero Initial States	Yes	
Initial States	0	v0
Discrete Integrator	Backward Euler	
Reltol Multipliers	1 0	

Initial States
Rows: 1 Columns: 1 Value: 0

1	0
---	---

OK Cancel Help

- Verify that the Parameters tab of the Block Properties dialog is selected (see [Figure 4-19](#)).


Scroll down in the Parameter table to access the field in the % variable column, and the Initial States row. Click in that field and type **v0**.

- Click the Outputs tab and set the Output Label to **vel**.
- Click the Display tab and enable the Show Output Labels check box.
- Click OK to accept current values and close the dialog.

Repeat the previous steps for the second integrator block. Name it **velToPos**. Give it an Initial States % variable named **p0**. Set the Output Label to **pos**.

After Editing Block Properties your block diagram should resemble [Figure 4-20](#). The short lines extending out from the sides of the blocks are input and output *pins*. Each output pin is now labeled.

Figure 4-20 Block Diagram after Editing Block Properties

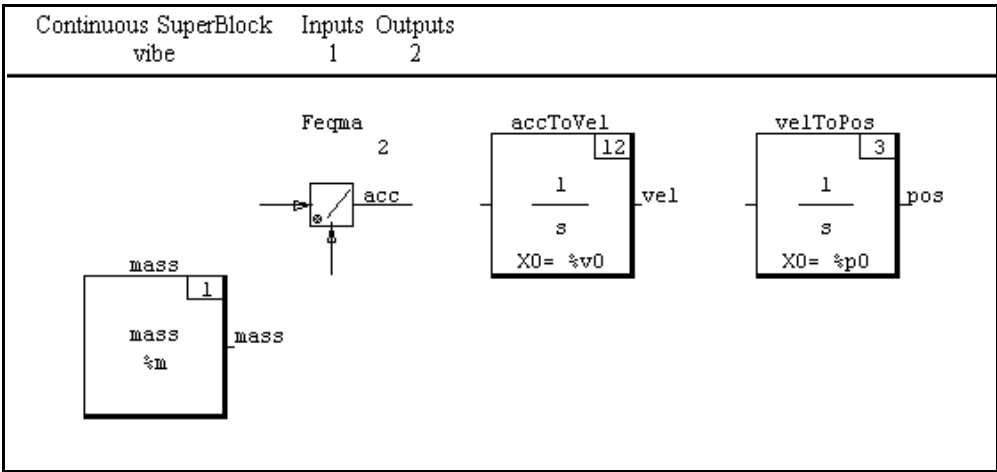

Connecting Blocks

When two blocks are connected, an output signal of one becomes the input signal of the other (a block cannot be connected to itself). Connections between the blocks of a SuperBlock are called *internal connections*. An internal connection is *directed* from an output pin of the *source* block to an input pin of the *destination* block.



NOTE: A source block output pin can be connected to zero, one, or more than one destinations. However, a destination block input pin can be connected to at most one source: either a source block output pin or a SuperBlock input.

To connect the Constant block to the AlgebraicExpression block:


1. Click the Constant block with MB2 (middle mouse button).
2. Click the AlgebraicExpression block with MB2.

The Connection Editor is displayed (see [Figure 4-21](#)).

- Source block information is displayed on the left.
- Destination block information is displayed on the right.
- Output labels and input names are displayed when available.


- Data types are displayed when available; F (Float) is the default.
- Source block outputs are numbered in a column opposite the numbered inputs of the destination block. Click on the numbers with MB1 to add and delete connections.

Figure 4-21 Connection Editor

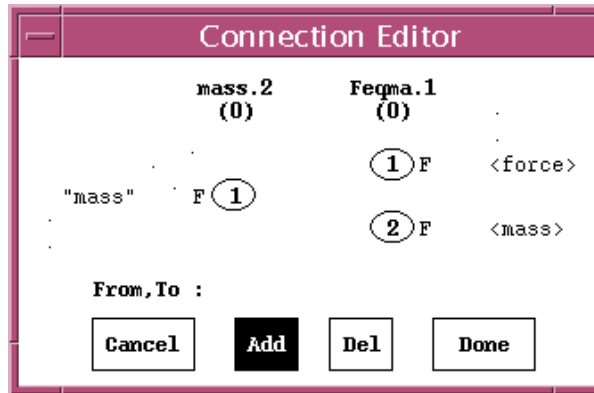


3. Verify that the Add button is highlighted. With MB1, click output 1 (left column), and click input 2 (right column). A line is drawn to indicate the connection as shown in [Figure 4-22](#).
4. Click Done to accept the connection and close the dialog.

Figure 4-22 Adding a Connection with the Connection Editor

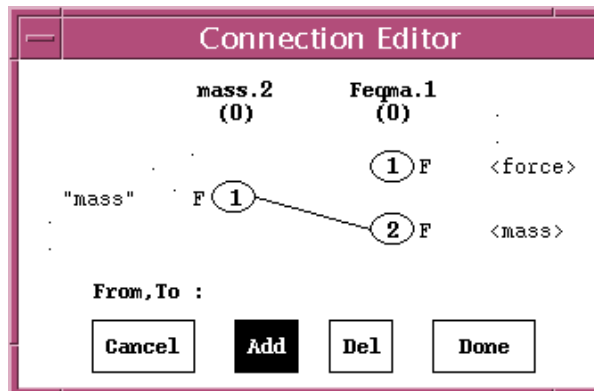

Complete the internal connections as shown in [Figure 4-23](#). In each case, use MB2 to click the source block, and then the destination block.

Figure 4-23 **Block Diagram after Internal Connections**

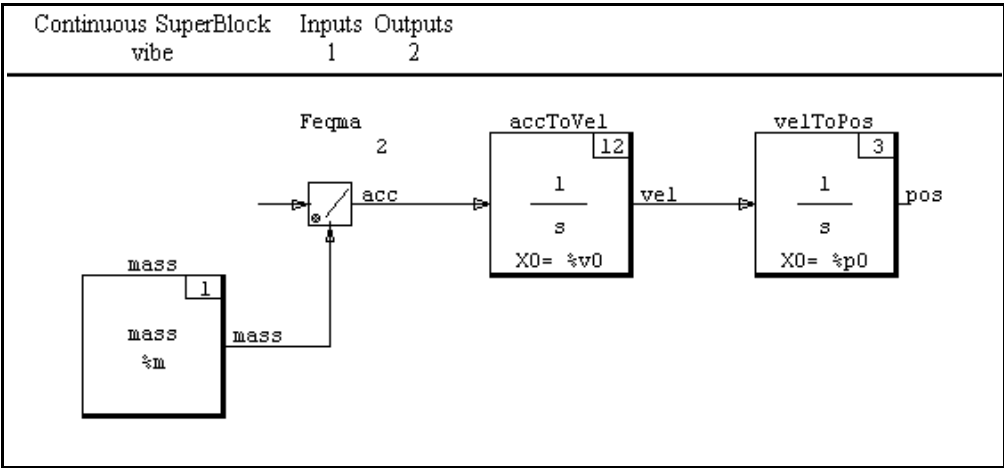

NOTE: When only one possible connection can be made between the source and destination blocks, the connection is made without displaying the Connection Editor.


Connecting SuperBlock Inputs and Outputs

Connections from SuperBlock inputs to blocks, and from blocks to SuperBlock outputs are called *external connections*. An external input connection is directed from a SuperBlock input to an input pin of the destination block. An external output connection is directed from an output pin of the source block to a SuperBlock output.



NOTE: A SuperBlock input can be connected to zero, one, or more destination blocks. However, a SuperBlock output must be connected to exactly one source block.

Figure 4-24 External Input and Output Flags

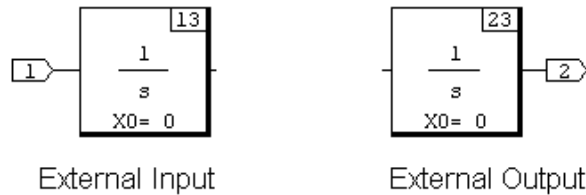

External input and output connections are represented in a block diagram by flags containing the number of the corresponding input or output. [Figure 4-24](#) shows typical external connection flags: a SuperBlock input 1, and a SuperBlock output 2.

In this section, you connect the external input and output signals for the **vibe** SuperBlock.

To connect the **vibe** SuperBlock input to the **Feqma** ElementDivision block:

1. Move the mouse cursor to an open space in the editor (not over any block), and click with MB2.
2. Click the ElementDivision block with MB2.

The Connection Editor is displayed. (The layout of information is analogous to that displayed for internal connections, as shown in [Figure 4-21](#)).

3. Verify that the Add button is highlighted. With MB1, click external input 1 (left column), and click block input 1 (right column). A line is drawn to indicate the connection.
4. Click Done to accept the connection and close the dialog.

To connect the **accToVel** Integrator block to the **vibe** SuperBlock output 1:

1. Click the **accToVel** Integrator block with MB2.
2. Move the mouse cursor to an open space in the editor (not over any block), and click with MB2.

The Connection Editor is displayed. (Again, the layout of information is analogous to that displayed for internal connections.)

3. Verify that the Add button is highlighted. With MB1, click block output 1 (left column), and click external output 1 (left column). A line is drawn to indicate the connection.

4. Click Done to accept the connection and close the dialog.


Repeat the previous steps to connect the **velToPos** Integrator block to **vibe** SuperBlock output 2.

When complete, your block diagram should resemble [Figure 4-25](#).



NOTE: The current block diagram models force acting on a mass. The spring-mass damper model will be completed in [4.4.4 Encapsulating a SuperBlock](#), p.86.

Figure 4-25 **Block Diagram after External Connections**

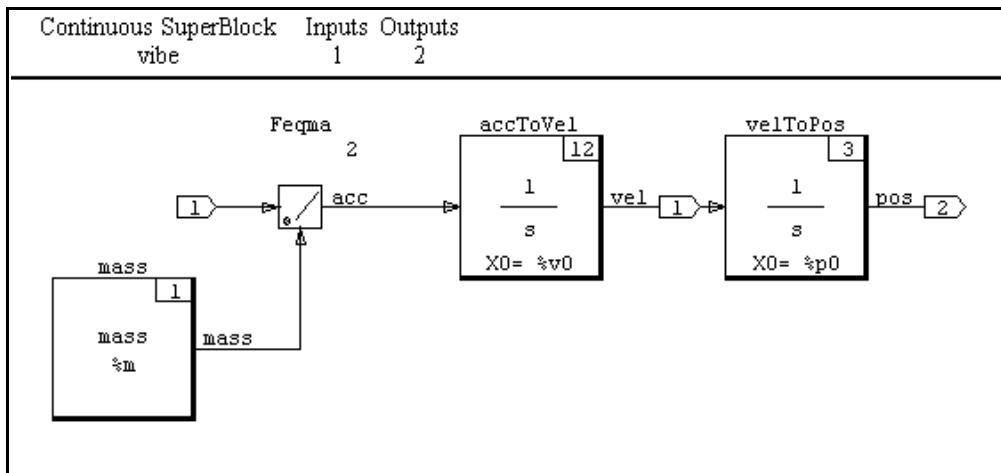

Saving a SuperBlock

To avoid loss of your work, you should save your block diagrams at regular intervals during development. In this section, you save the **vibe** SuperBlock.



NOTE: SuperBlocks and BetterStateChart blocks can be saved individually, or grouped in catalogs. The method described here saves all SuperBlocks and BetterStateChart blocks in the current catalog of the Catalog Browser to a single catalog file.


To save the **vibe** SuperBlock to a catalog file:

1. Make the Editor the active window and update the **vibe** SuperBlock by selecting File→Update.
2. Make the Catalog Browser the active window and refresh its contents by selecting View→Update. A list of SuperBlocks in the current catalog is displayed on the right.
3. Select File→Save As.

The Save As dialog is displayed. (Figure 4-26 shows the Save As dialog as it appears during Step 5 below).

4. Select a directory in which to save SuperBlock catalogs.

Figure 4-26 Save As dialog

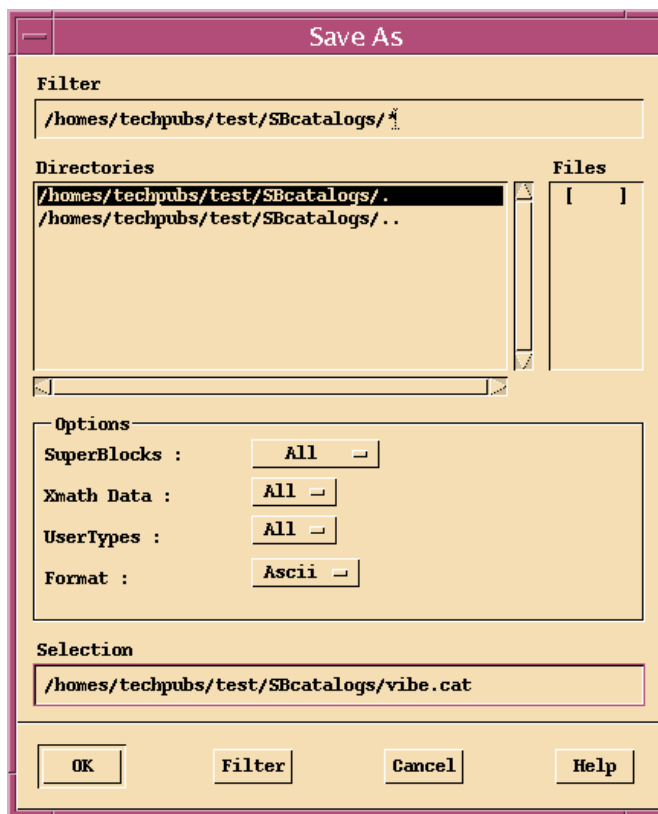

5. Click in the File name field and type **vibe.cat** (see [Figure 4-26](#)).



NOTE: If you type a file name with no extension, the default extension **.dat** is appended to the file name when the file is saved.

6. Click OK to save the file and close the dialog.

4.4.3 Simulating a SuperBlock

In this section, you simulate the SuperBlock **vibe**. The current model applies an input force to a mass. The resulting velocity and position of the mass are output.

Simulations proceed with respect to a user-defined time vector. Because **vibe** is a *continuous* SuperBlock, its simulation algorithms are relatively independent of the granularity of the time vector sequence. However, the input and output of a continuous simulation are indexed by its time vector, so the granularity must accommodate those factors.

To simulate **vibe**, an input force vector is specified whose elements correspond to those of the time vector. Here, you model the force of gravity. Therefore, the input signal is constant with respect to time.

There are three % variable parameters to define: the mass **m**, the initial velocity **v0**, and the initial position **p0**. In this tutorial, you assign values with MKS units.

To simulate the SuperBlock **vibe** from the Xmath command area:

1. Define a time vector. In the Xmath command area, type:

```
t=[0:0.01:5]';
```



NOTE: Remember to type the semicolon to suppress output.

Time must be specified in a column vector. You have created a regular column vector with 501 elements: **0,0.01,0.02,...,4.99,5.00**. The simulation will proceed for 5 seconds, with a computational granularity of 0.01 seconds.

2. Define an input force vector (MKS gravity is approximately -9.8 meters/sec²);

```
u=-9.8*ones(t);
```

The input variable **u** is constructed to have the same dimensions as the time vector **t**. Here, **u** is a column vector of 501 elements.

3. Specify a mass of 1 kilogram, starting at rest and position 0:


```
m=1;  
v0=0;  
p0=0;
```

4. Execute the simulation:

```
y=sim("vibe",t,u,{graph});
```

Information about the simulation is displayed in the Xmath log area. When the simulation completes, velocity and position are plotted in an Xmath Graphics window (see [Figure 4-27](#)).

Figure 4-27 Simulation Results

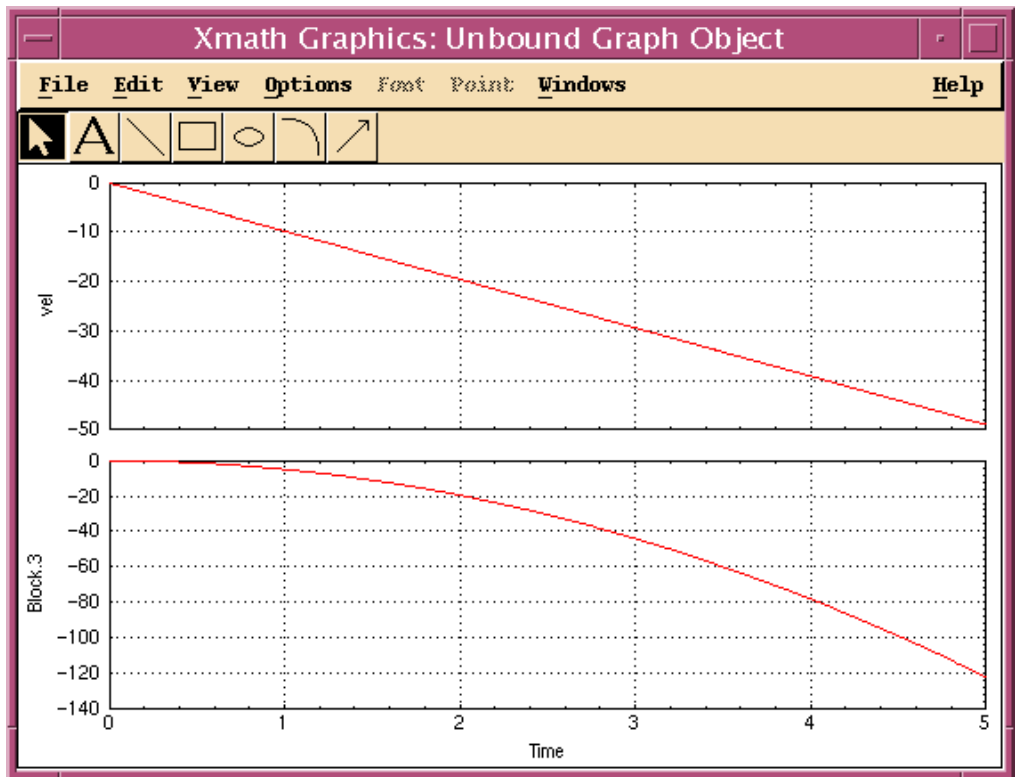

The simulation result y is a pdm consisting of 501 row vectors. Each vector has two scalar elements, a velocity and a position. You can inspect the velocity and position values at a given time by computing its position in the pdm. For example, to see the result at time 3.83 seconds, type:

$y(3.83 \cdot 100 + 1)$

Exercise the model by simulating other values for the parameters **m**, **v0**, and **p0**. You can also change the input force. Try $u = \cos(4 \cdot t)$.

4.4.4 Encapsulating a SuperBlock

In this section, you encapsulate a SuperBlock and develop a hierarchical block diagram.

To encapsulate a SuperBlock:

1. Make the Editor the active window and update the **vibe** SuperBlock by selecting File→Update.
2. Select the ElementDivision block and both Integrator blocks of the block diagram by holding down the Control key and clicking each in turn with MB1. A heavy rectangular border indicates that a block is selected.
3. Select Edit→Make SuperBlock. The block diagram now shows a new SuperBlock block, along with the **mass** Constant block.

To edit properties of the new SuperBlock block:

1. In the Editor, move the mouse cursor over the SuperBlock block and press the Enter key.

The SuperBlock Block properties dialog is displayed. The Parameters tab is selected and all properties are set to their default values. (Figure 4-28 shows the SuperBlock Block properties dialog as it appears during Step 3 below).

2. Click in the Name field; replace the default name with **Newton**.
3. Click the Display tab (see Figure 4-28).

Locate the drop-down combo box labeled Icon Type. Change its value to **User**.

Figure 4-28 SuperBlock Block Properties: Encapsulation

SuperBlock Block

Name: Inputs: Outputs: ID:

Instance Name: Xmath Partition:

Parameters | Inputs | Outputs | Comments | Icon | Display

Block Input Attributes

Input Pins: Input Face:

☐ Show Input Signals

Block Output Attributes

Output Pins: Output Face:

☒ Show Output Labels ☒ Propagate Labels

Line Style: Arrow Style:

Block General Attributes

Icon Type: Color:

Rotation: Direction:

Name Location: ☒ Show ID

OK Cancel Help


4. Click OK to accept current values and close the dialog.

The Superblock editor now displays the **mass** Constant block, and the **Newton** SuperBlock block. Position and resize the blocks so that they resemble the block diagram displayed in [Figure 4-29](#). Recall, blocks are positioned by dragging with MB1.

To enlarge the **Newton** SuperBlock block, move the mouse cursor over the block, and press e twice.

To reduce the **mass** Constant block, move the mouse cursor over the block, and press r twice.

Figure 4-29 **Newton SuperBlock Block**

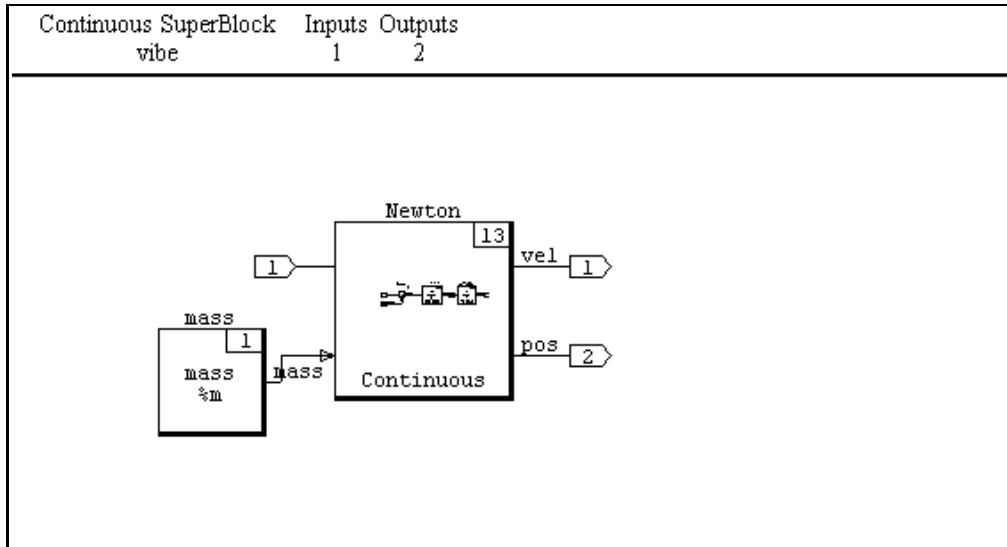

To complete a block diagram representation of a damped spring, a few more blocks are needed. A solution is shown in [Figure 4-30](#). Two Gain blocks have been added. One produces the damping force by multiplying velocity by the damping constant. Position and stiffness are used by the other to determine the spring force. These forces are subtracted from the **vibe** input force by a Summer block that passes the resultant force to the Newton SuperBlock block.

To implement the damped spring representation:

1. Add blocks to the block diagram.


Open and position the Palette Browser. Select the Algebraic palette. With MB2, drag and drop a Gain block and a Summer block into the Editor.

2. Flip, reduce, and duplicate the Gain block.

Move the mouse cursor over the Gain block and press **f r d** (one key at a time).

You now have two gain blocks that have been flipped horizontally. Input pins are now on the right; output pins are on the left.

Figure 4-30 Block Diagram for Damped Spring

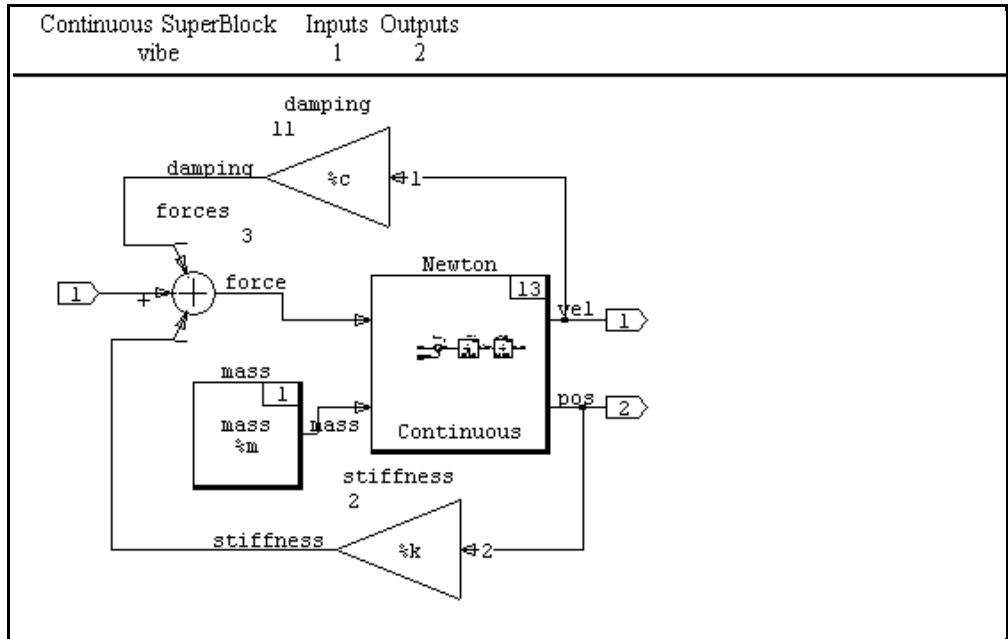

3. Position the new blocks as shown in [Figure 4-30](#).
4. Edit properties for the Summer block.
 - a. Move the mouse cursor over the Summer block and press the Enter key.
The Summer Block properties dialog is displayed. The Parameters tab is selected and all properties are set to their default values. ([Figure 4-31](#) shows the Summer Block properties dialog as it appears during [Step e](#) below).
 - b. Name the block **forces**.
 - c. Change the number of inputs to 3.
 - d. In the Parameter table, click in the field in the Value column, and the Number Branches row. Change its value to 3.
 - e. In the Parameter table, click in the field in the Value column, and the Signs(+1,-1) row. Change its value to -1,1,-1.

Figure 4-31 Summer Block Properties Dialog

The dialog box is titled "Summer Block". It features a tabbed interface with the following tabs: Parameters, Inputs, Outputs, Document, Comments, Icon, and Display. The "Parameters" tab is currently selected, displaying a table with the following data:

Parameter	Value	% variable
Number of Branches	3	
Signs(+1, -1)	-1, 1, -1	

Below the table, there is a section labeled "Number of Branches" with the following details:

- Rows: 1
- Columns: 1
- Value: 3

At the bottom of the dialog, there are three buttons: "OK", "Cancel", and "Help".

- f. Click the Inputs tab and name the inputs: **damping**, **external**, **stiffness**.
 - g. Click the Outputs tab and label the output: **force**,
 - h. Click the Display tab, change the value of Icon Type to **User**, and enable the Show Output Labels check box.
 - i. Click OK to accept current values and close the dialog.
5. Edit properties for the Gain blocks.

You give each Gain block a name, a % variable assignment, label its output, and enable the Show Output Labels check box. For additional detail, refer to the instructions for setting these properties in a Constant block, in the section [Editing Block Properties](#), p.72.

- a. Name the upper Gain block **stiffness**, give it a % variable named **k**, label its output **stiffness**, and enable the Show Output Labels check box.
- b. Name the lower Gain block **damping**, give it a % variable named **c**, label its output **damping**, and enable the Show Output Labels check box.

6. Make block diagram connections as shown in [Figure 4-30](#). For additional detail, see [Connecting Blocks](#), p.78 and [Connecting SuperBlock Inputs and Outputs](#), p.80.
7. Save the current catalog. For additional detail, see [Saving a SuperBlock](#), p.82.



NOTE: The current tutorial block diagrams can be loaded into the CatalogBrowser by executing the following command from the Xmath Commands window.

```
load "$SYSBLD/examples/gs_tutorial/vibe1.cat";
```

The **vibe1** catalog contains a solution of the basic spring-mass damper constructed in the first four sections of the SystemBuild tutorial.

To simulate the block diagram representation of the damped spring:

1. In the Xmath command area, verify or reenter the original values for **t**, **u**, **m**, **p0**, and **v0**:

```
t = [0:0.01:5]';
u = -9.8 * ones(t);
m = 1;
v0 = 0;
p0 = 0;
```

2. Define values for the stiffness **k** and damping constant **c**:

```
k = 100;
c = 1;
```


3. Execute the simulation:

```
y = sim("vibe", t, u, {graph});
```

When the simulation completes, velocity and position are plotted in an Xmath Graphics window (see [Figure 4-32](#)).

Exercise the model by simulating other values for the parameters and the input force. Try **u = zeros(t)**; **p0 = 1**;

Figure 4-32 Damped Spring Simulation Plot

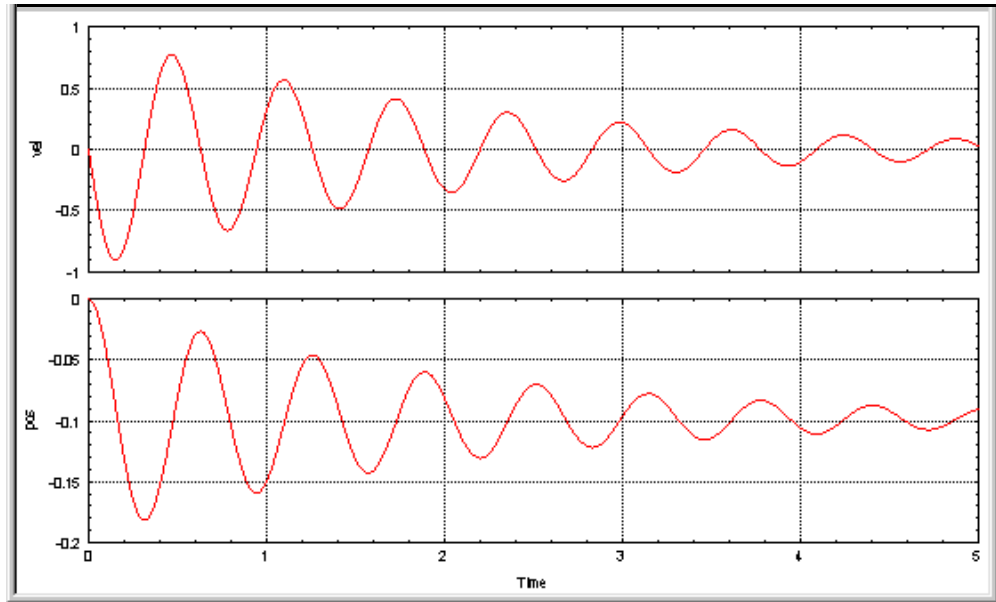

Exercise

While using the Palette Browser, you have probably noticed many more pre-defined block types. To read brief descriptions of SystemBuild block types:

1. In the Xmath command area, enter:
help blocks
2. When the Blocks topic appears, scroll down to the tables that list the block types by palette, and read the descriptions there. For more detailed information about block types, follow the table links.

4.4.5 Using a BetterStateChart Block to Model Events

In this section, you enhance the **vibe** SuperBlock model to simulate events.



NOTE: This tutorial is designed to lead you through the construction of basic and intermediate SystemBuild block diagrams and BetterState charts. If you wish to skip the first four sections of the tutorial, the current tutorial catalog can be loaded into the CatalogBrowser by executing the following command from the Xmath Commands window.

```
load "$SYSBLD/examples/gs_tutorial/vibe1.cat";
```

Suppose that the space of the damped spring model is divided into two regions with different damping constants. Also, suppose that a barrier is added from which the mass rebounds. The resulting model includes events that produce discontinuous behaviors. To effectively simulate events, you need to detect them, and then modify affected values in the model. Modeling events often presents an additional challenge: *algebraic loops* must be avoided, or properly managed.

An algebraic loop is created when a signal path in a block diagram forms a loop, without passing through the input of an Integrator block. Look again at [Figure 4-30](#). Note that each of the two signal loops pass through the **force** input to the **Newton** SuperBlock, which is subsequently routed through the input of both integrators. The standard processing algorithms of continuous SuperBlocks can not handle an algebraic loop unless its signal is controlled by one of several special SystemBuild features. In this tutorial, the use of a BetterState block creates an *asynchronous subsystem* that controls signal flow through algebraic loops.

To simplify implementation, the physical system you model in this section:

- sets a damping region boundary such that the region above the boundary is damped according to a damping constant; the region below the boundary is undamped (damping constant = 0).
- sets a barrier below the damping region boundary (in the undamped region).
- assumes a rebound *restitution factor* = 1.

To implement this enhancement to the damped spring model:

- Modify the **Newton** SuperBlock so that its integrators are resettable, give it more inputs for the signals needed to do the resets, and add acceleration to the outputs, so that it can be displayed with simulation results.
- Modify the damping loop so that the damping force can be switched on and off; add blocks that set the damping region boundary and barrier positions.
- Create a new SuperBlock for controlling events. It detects boundary crossings and barrier impacts, and uses ZeroCrossing blocks to generate event signal inputs to a BetterStateChart block.
- Develop a BetterState chart that maintains the damping state, processes boundary crossings and barrier impact events, and has three outputs:
 - a signal to switch the damping force.
 - a value for resetting velocity.
 - an integrator reset trigger.
- Make final connections in the block diagram.

Resettable Integrator


In this section you learn how to modify the block properties of an Integrator block to make it resettable. A resettable integrator has two additional input signals: one containing the reset value, and one to trigger resets. These additional inputs to integrator blocks do not break algebraic loops, as does the input signal to be integrated.

To modify the **Newton** SuperBlock:

1. Access the block diagram of the **Newton** SuperBlock.
 - a. Make the Editor the active window and update the **vibe** SuperBlock by selecting File→Update.
 - b. Double click on the **Newton** SuperBlock block. The Editor now displays the block diagram of the **Newton** SuperBlock.

2. Edit properties of the accToVel Integrator block.
 - a. In the Parameter table, locate the drop-down combo box in the Value column and the Resettable row. Change its value to **Double Edge**.
A double edge reset is triggered by a signal that changes from ≤ 0 to >0 , or from >0 to ≤ 0 . The trigger in this model resets the integrators by switching between 0 and 1.
 - b. Click the Input tab and name the inputs: **acc**, **velReset**, and **trigger**.
3. Change the velToPos Integrator block reset to Double Edge.
 Name its inputs: **vel**, **posReset**, and **trigger**.
4. Edit the **Newton** SuperBlock Properties dialog:
 - a. Open the dialog by selecting File→SuperBlock Properties....
 - b. Change the number of inputs to 5 and outputs to 3.
 - c. Click OK to accept current values and close the dialog.
5. Complete connections, and make minor position adjustments so that your **Newton** block diagram resembles [Figure 4-33](#).

Figure 4-33 **Newton with Resettable Integrators**

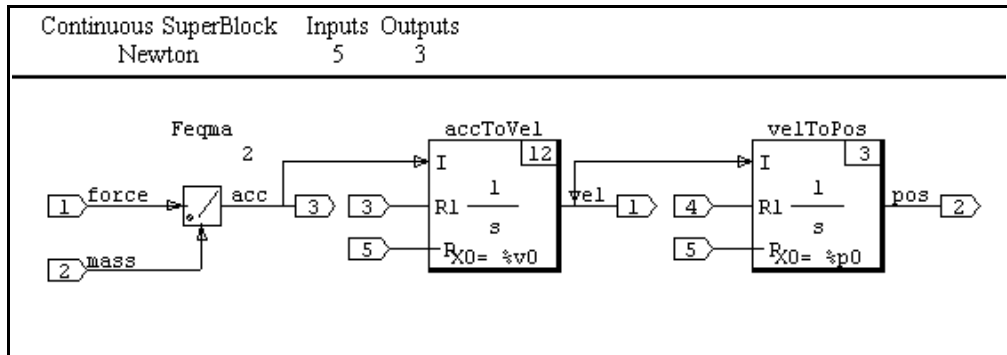


Signal Switch

In this section, you implement a simple signal switch that enables a model to turn a signal on and off.

To modify the damping loop, and add blocks for damping boundary and barrier position:

1. In the SuperBlock editor, return to the **vibe** block diagram by selecting View→Parent→vibe, followed by File→Update.
2. Delete the **damping** Gain block:
 - a. Select the block by clicking it with MB1.
 - b. Select Edit→Delete.
3. Add blocks to **vibe**:
 - a. Add an ElementProduct block from the Algebraic palette, and a Constant block from the Matrix Equations palette.
 - b. Flip and duplicate the ElementProduct block.
 - c. Flip, reduce twice, and make 2 duplicates of the Constant block.
 - d. Position the **vibe** blocks as shown in [Figure 4-34](#).
4. Edit block properties:
 - a. Name the left ElementProduct block **dampingF**, name its inputs **dampingC** and **velocity**, label its output **damping**, and enable its Show Outputs Labels check box.
 - b. Name the right ElementProduct block **dampingA**, name its inputs **dampingC** and **switch**, and label its output **damping**.
 - c. Name the upper right Constant block **dampingC**, change its ConstantName to **c**, give it a % variable **c**, and label its output **damping**.
 - d. Name the lower left Constant block **wallPos**, change its ConstantName to **wp** give it a % variable **wp**, and label its output **wallPos**.
 - e. Name the upper right Constant block **dampPos**, change its ConstantName to **dp** give it a % variable **dp**, and label its output **dampPos**.
5. Make block connections for the damping loop as shown in [Figure 4-34](#). More connections are added later.

Figure 4-34 **vibe Modifications**

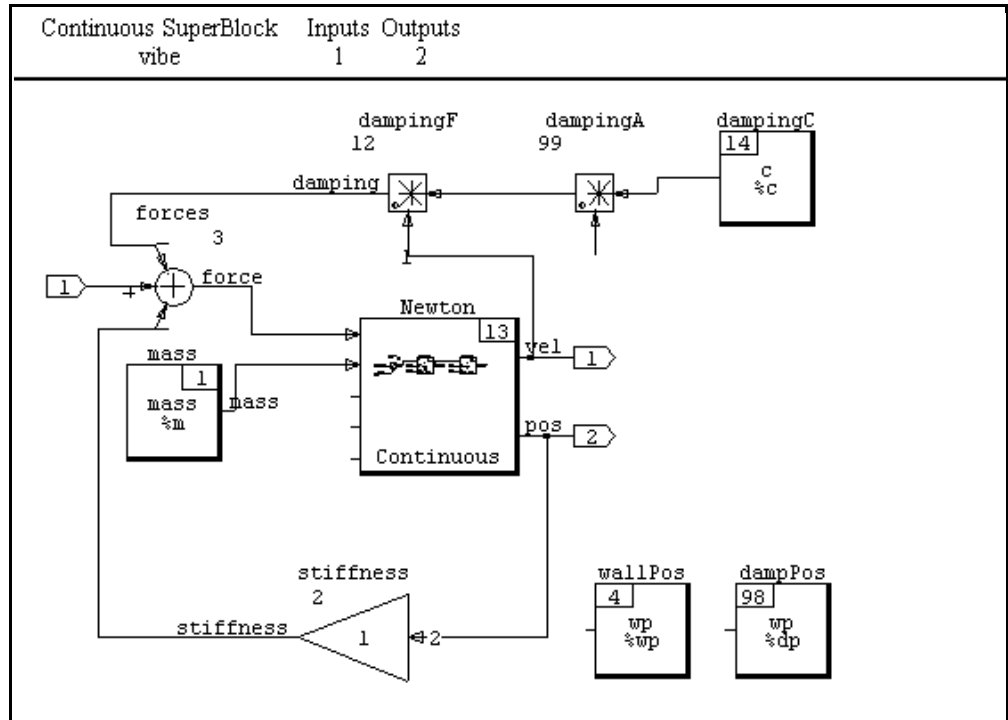

Next you create a Superblock to control events. Instead of encapsulating blocks already in place, you add a new SuperBlock block to **vibe**, and then construct its block diagram.

Event Controller


In this section, you'll create an event controller for **vibe**. An event controller recognizes that an event has happened, and causes actions to occur as a result. Actions can be based on state information stored by the controller, and can include changes in output signal values, and internal state transitions.

To create a new SuperBlock for controlling events:

1. Add a SuperBlock block to **vibe**:
 - a. Drag and drop a SuperBlock block from the SuperBlocks palette to the open area on the right side of the **vibe** block diagram. Make it the same size as the **Newton** SuperBlock.
 - b. Name the block **eventual**. Give it 4 inputs and 3 outputs and change its Icon Type to **User**.
2. Navigate to the **eventual** block diagram and add blocks:
 - a. Double click the new SuperBlock block. The SuperBlock editor now displays an empty block diagram.
 - b. Drag and drop a Summer block from the Algebraic palette, a ZeroCrossing block from the User Programmed palette, and a BetterStateChart block from the BetterStateChart palette.
 - c. Duplicate the Summer and ZeroCrossing blocks, and enlarge the BetterStateChart block twice.
 - d. Position the blocks as shown in [Figure 4-35](#).
3. Edit block properties:
 - a. Name the upper Summer block **dampTest**, name its inputs **pos** and **dampPos**, label its output **dampTest**, and change its Icon Type to **Simple**.
 - b. Name the lower Summer block **wallTest**, name its inputs **pos** and **wallPos**, label its output **wallTest**, and change its Icon Type to **Simple**.
 - c. Name the ZeroCrossing blocks **dampCross** and **wallCross**, and use those names to label their outputs.
 - d. Name the BetterStateChart block **vibeChart**.

You make connections in the eventual SuperBlock after developing the BetterState chart.

Figure 4-35 **eventual SuperBlock**

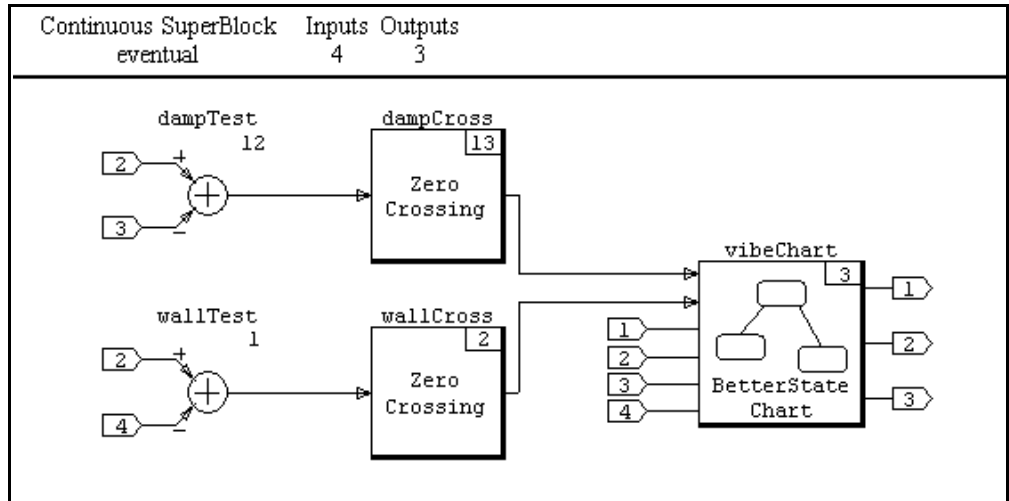

BetterStateChart Block

A **BetterStateChart** block performs a central role in an event controller. It maintains current state information, and allows specification of the actions taken as events are processed. For more information about the **BetterStateChart** block, see the *BetterState User's Guide*.

To develop the **vibeChart** **BetterState** chart:

1. Display the **BetterState** Statechart window for **vibeChart**.
2. Verify settings in the Chart Properties dialog.
3. Specify events and variables in the Data Dictionary dialog.
4. Add states to **vibeChart**.
5. Edit state properties.
6. Add transitions to **vibeChart**.
7. Edit transition properties.

BetterState Statechart

To display the BetterState Statechart window for **vibeChart**:

Double click on the BetterStateChart block. The BetterState process is activated and the BetterState Statechart window is displayed. The chart area is empty. See [Figure 4-36](#).



NOTE: There may be a delay as the BetterState process is loaded.



NOTE: State chart appearance can be controlled through settings available through Visual Settings dialogs. The settings for the chart displayed in this tutorial are selected for visual clarity in b/w display. The chart you construct will differ in color and text styles.

Figure 4-36 The BetterState Statechart Window

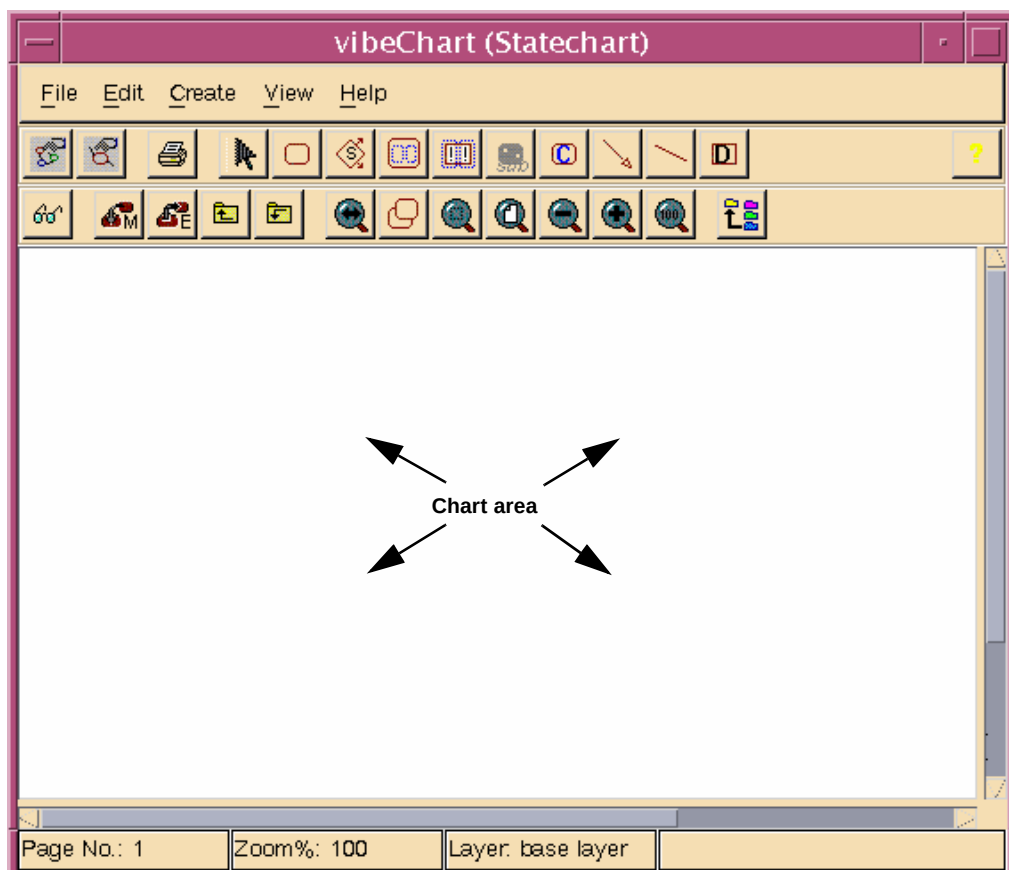


Figure 4-37 BetterState Chart Properties dialog

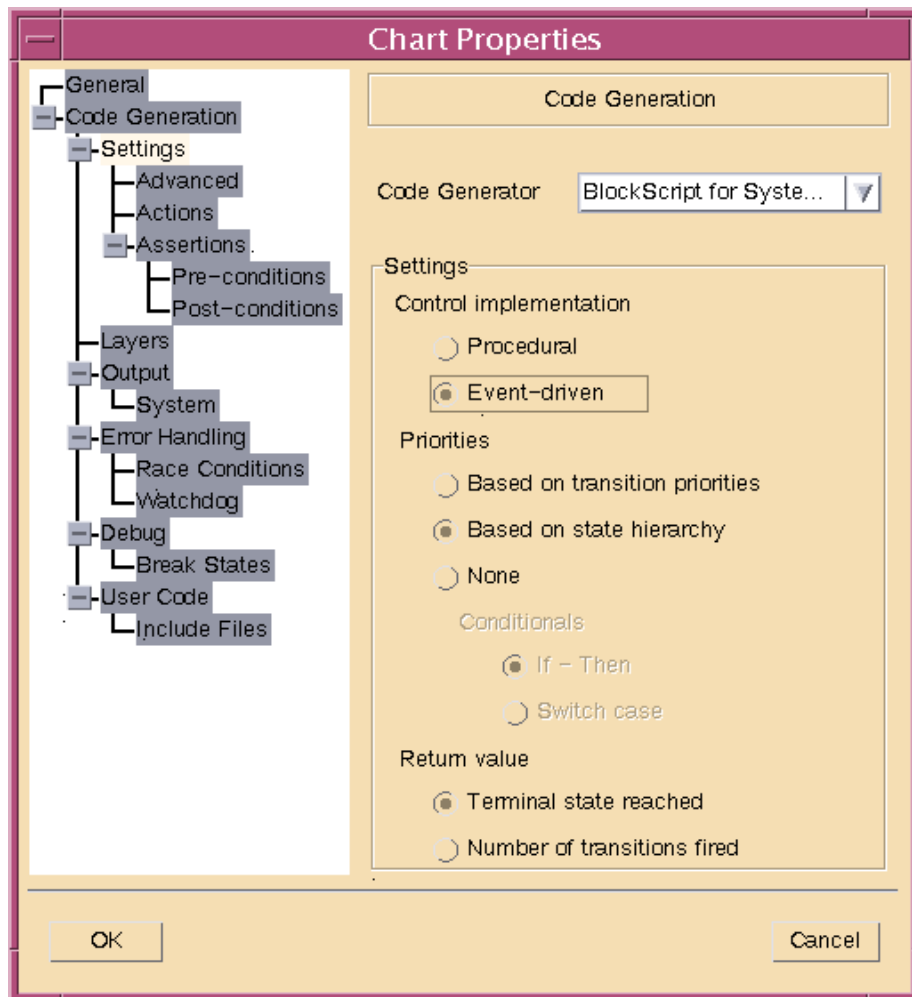


Chart Properties

To verify settings in the Chart Properties dialog:

1. From the Statechart window, select File→Chart Properties....

The Chart Properties dialog is displayed. (Figure 4-37 shows the Chart Properties dialog as it appears during Step 2 below).

2. Click the Code Generation/Settings node and verify:
 - a. The Code Generator combo box field contains **BlockScript for SystemBuild**.
 - b. In the Control implementation group, the Event-driven radio button is enabled.

Data Dictionary

To specify events and variables in the Data Dictionary dialog:


1. From the Statechart window, select File→Data Dictionary....

The Data Dictionary dialog is displayed. (Figure 4-38 shows the Data Dictionary dialog as it appears during Step 5 below).
2. To enter event names in the Data Dictionary dialog:
 - a. Select the Arguments tab. In the Arguments pane, select the Events tab.
 - b. In the Define event inputs and outputs editable combo box field, type **dampEvent** and press the Enter key.
 - c. Double click on the entry **dampEvent** to select it, type **wallEvent**, and press the Enter key.
 - d. Click the Define event inputs and outputs combo box arrow to verify that the list now contains both **dampEvent** and **wallEvent**.
3. To enter input variable names in the Data Dictionary dialog:
 - a. In the Arguments pane, select the Chart Arguments tab.
 - b. In the Inputs table, double click in the Name field of row 1. Type **vel** and press the Enter key.
 - c. Enter the input variable names **pos**, **dampPos**, and **wallPos** in the Name fields of rows 2 through 4.
4. With the Chart Arguments tab still selected, enter the output variable names **dampSwitch**, **velReset**, and **trigger** in the Outputs table Name fields of rows 1 through 3.
5. Verify all entries in the Data Dictionary dialog.

In the Arguments pane, select the SystemBuild Interface tab. The information displayed should agree with that shown in Figure 4-38.

Select File→Close to close the dialog.

Figure 4-38 Data Dictionary dialog

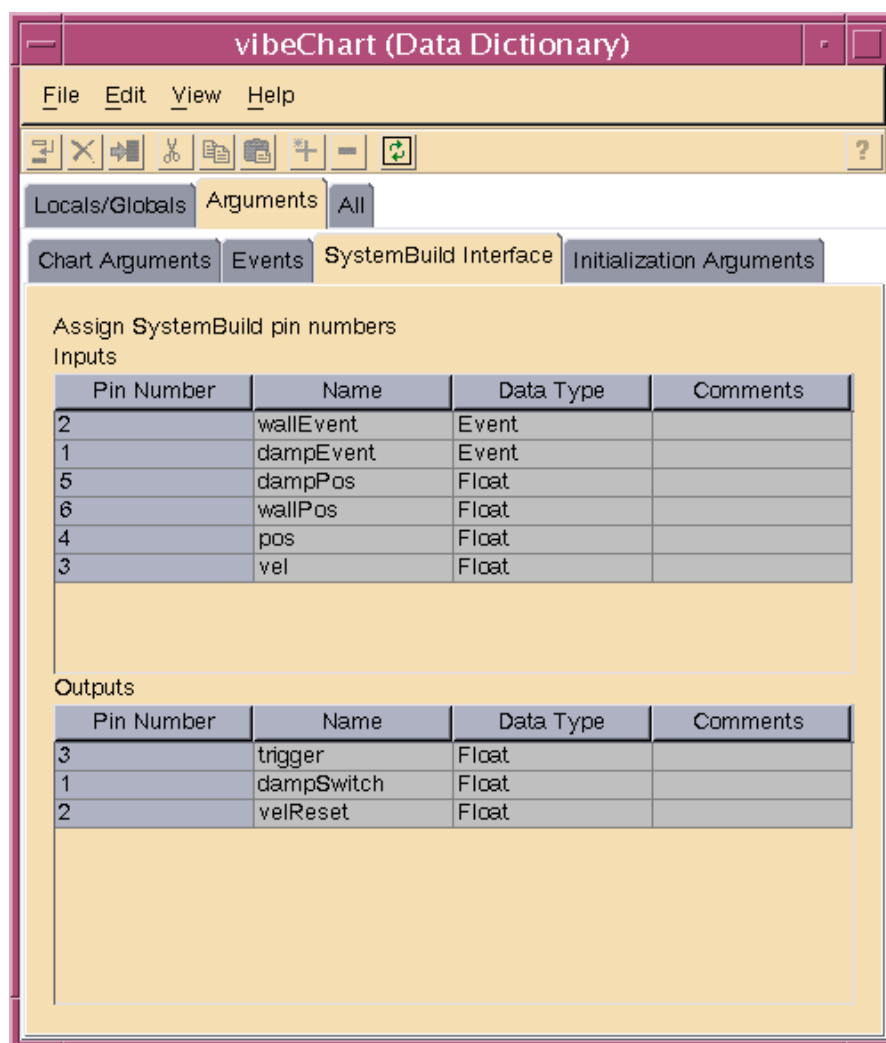


States

To add states to **vibeChart**:


1. On the Statechart window, select Create→State. Click in the chart area. Drag and release to create a rectangle. Create two more rectangles in the chart area.

Figure 4-39 **vibeChart**

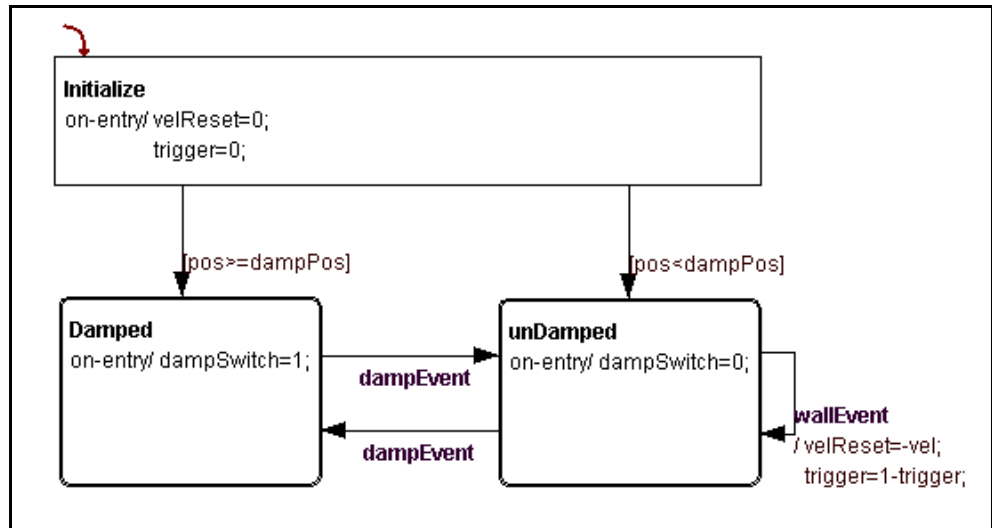

2. Resize and position your state rectangles to resemble those in [Figure 4-39](#):
 - a. Select Create→Select Mode.
 - b. Select a rectangle by clicking in it.
 - c. Resize by dragging the resize handles of a selected rectangle.
 - d. Position by clicking inside a selected rectangle and dragging.

Figure 4-40 State Properties dialog

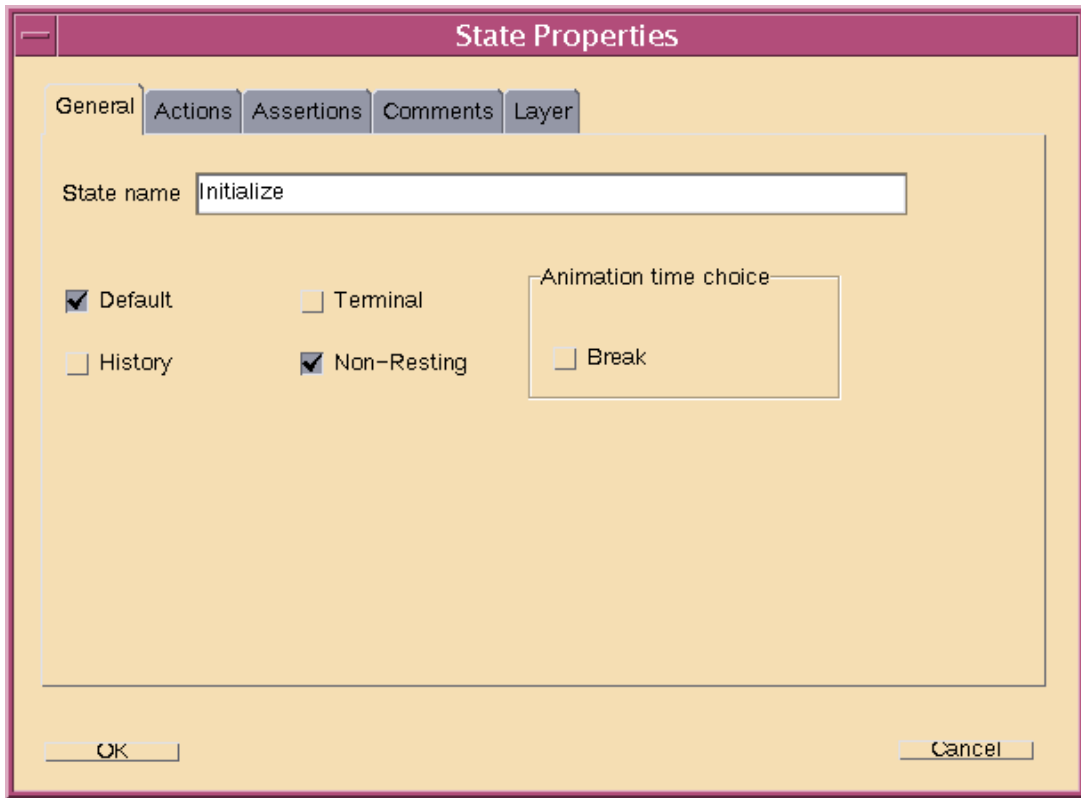

State Properties

To edit state properties:

1. On the Statechart window, select Create→Select Mode and then double click inside the top state rectangle. The State Properties dialog for that state is displayed. (Figure 4-40 shows the State Properties dialog as it appears during Step a below).
 - a. Name the state **Initialize**, and enable the Default and Non-Resting check boxes.

The *default* state is entered at the start of a simulation. A simulation does not remain in a *non-resting* state. **vibeChart**'s **Initialize** state is entered only during initialization of simulations. At that time, it assigns values to


two of the output variables, and then determines the correct state to assume based on initial values of its input variables.

- b. Click the Actions tab. Verify that the User Code radio button is selected for Edit On-Entry Action. Click the Edit On-Entry Action button.

The User Code dialog for the On-Entry Action of the **Initialize** state is displayed. Enter initializations for the variables `velReset` and `trigger` as shown in [Figure 4-41](#).

- c. Click the OK button to verify that the correct code is entered, and exit the User Code dialog. Click the OK button of the State Properties dialog to return to the Statechart window.

Figure 4-41 User Code dialog

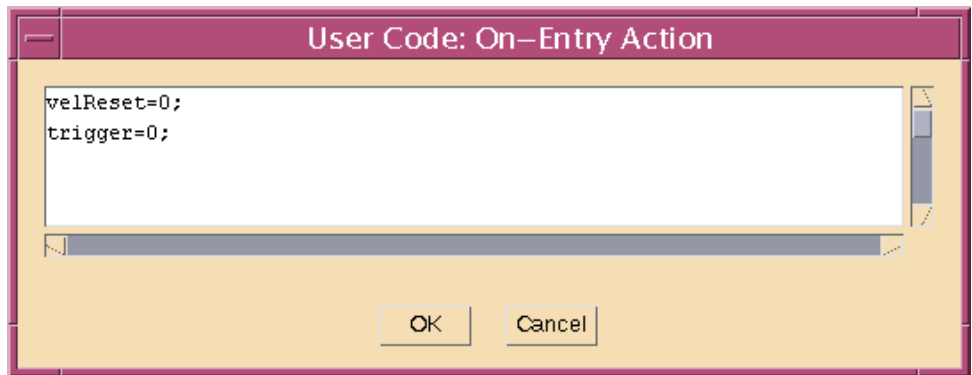


2. Double click on the lower left state to display its State Properties dialog.
 - a. Name the state **Damped**. (Do not enable any of the check boxes.)
 - b. Navigate to the User Code dialog for the On-Entry Action of the **Damped** state. Enter the code line:
dampSwitch=1;
 - c. Return to the Statechart window.
3. Name the remaining state **unDamped**. Give it an On-Entry Action:
dampSwitch=0;

Transitions

To add transitions to vibeChart:

1. On the Statechart window, select Create→Transition. Click inside the **Initialize** state, drag into the **Damped** state, and release. A transition arrow now connects the **Initialize** rectangle to the **Damped** rectangle.
2. Add additional transitions:
Initialize → **unDamped**
Damped → **unDamped**
unDamped → **Damped**.
3. Create a transition from **unDamped** back to itself:
 - a. Click inside the **unDamped** state.
 - b. Drag into empty area to the right of **unDamped**.
 - c. Drag back into the **unDamped** state and release.
4. Position your transition arrows to resemble those in [Figure 4-42](#):
 - a. Select Create→Select Mode.
 - b. Select a transition arrow by clicking on it.
 - c. Position by dragging the handles of a selected transition arrow.

Figure 4-42 **Transition Properties dialog**

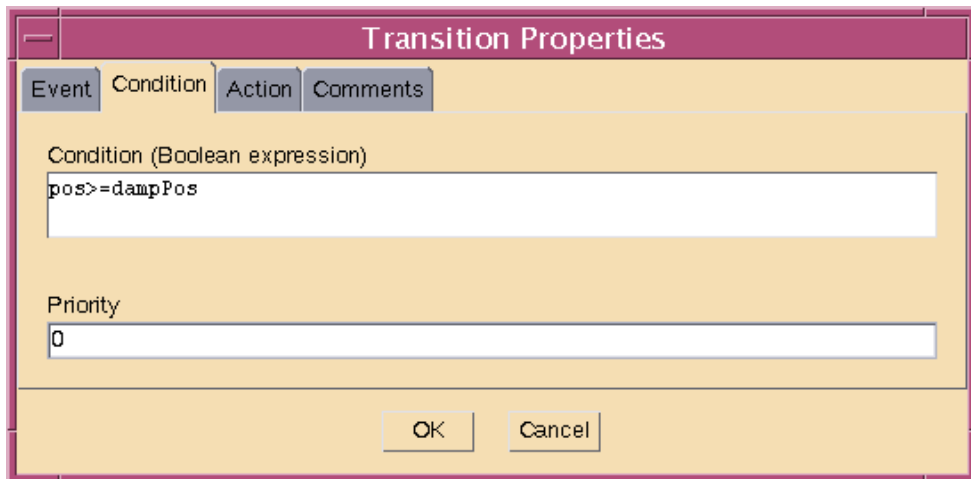

Transition Properties

To edit transition properties:

1. On the Statechart window, select Create→Select Mode and then double click on the transition arrow from **Initialize** to **Damped**. The Transition Properties dialog for that transition is displayed. (Figure 4-42 shows the Transition Properties dialog as it appears during Step a below).
 - a. Verify that the Condition tab is selected and enter the transition condition in the Condition (Boolean expression) text entry box as shown in Figure 4-42.
 - b. Click the OK button to accept the edited properties and exit the Transition Properties dialog.
2. Give the **Initialize** to **Damped** transition the Condition (Boolean expression):
pos<dampPos
3. Edit the **Damped** to **unDamped** transition properties:
 - a. Verify that the Event tab is selected and set the Event name combo box field to **dampEvent**.
 - b. Click OK to exit the Transition Properties dialog.
4. Set the **unDamped** to **Damped** transition Event name to **dampEvent**.
5. Edit the **unDamped** to **unDamped** transition properties:
 - a. Set the Event name combo box field to **wallEvent**.
 - b. Select the Action tab. Verify that the User Code radio button is selected and click the Edit On-Entry Action button.

 In the User Code dialog, enter the code lines:
velReset=-vel;
trigger=1-trigger;

 Click OK to exit the User Code dialog.
 - c. Click OK to exit the Transition Properties dialog.



NOTE: Recall that a simplifying assumption was made concerning the position of the barrier wall: the wall is located within the undamped region. Therefore, it is not necessary for the damped state to handle a wall event.

If an event triggers a state chart process, and the transitions of the current state do not reference that event, no state transition occurs. However, if the current state contains a During Action, the code for that action is executed.


Return to SystemBuild for Final Connections

Your state chart should now look like the one in [Figure 4-39](#). Recall that visual properties have been modified for tutorial Statechart figures.

To make final connections in the **eventual** and **vibe** block diagrams:

1. Select File→Close Window to return to the **eventual** block diagram in the SystemBuild SuperBlock editor.
2. In the SuperBlock editor, select File→Update.
3. Make connections in the **eventual** block diagram as shown in [Figure 4-43](#).

Figure 4-43 The eventual Block Diagram

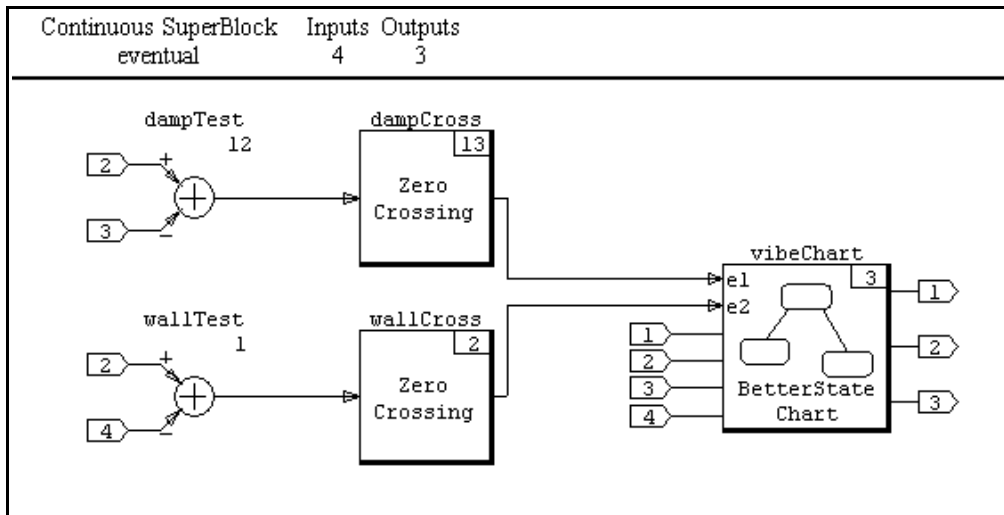


4. Return to the **vibe** block diagram by selecting View→Parent→vibe, followed by File→Update.
 - a. Change the number of **vibe** external outputs to 3.
 - b. Connect **Newton** output 3 to **vibe** output 3.
 - c. Make additional **vibe** connections as shown in [Figure 4-44](#).

Before you test the event enhanced model, take a minute to save your work.

In the first simulation, you test barrier events only. Gravity is used to drop the mass from an initial position beneath the damping boundary, but above the barrier. Spring stiffness and damping constant are set to zero.

Figure 4-44 The **vibe** Block Diagram.

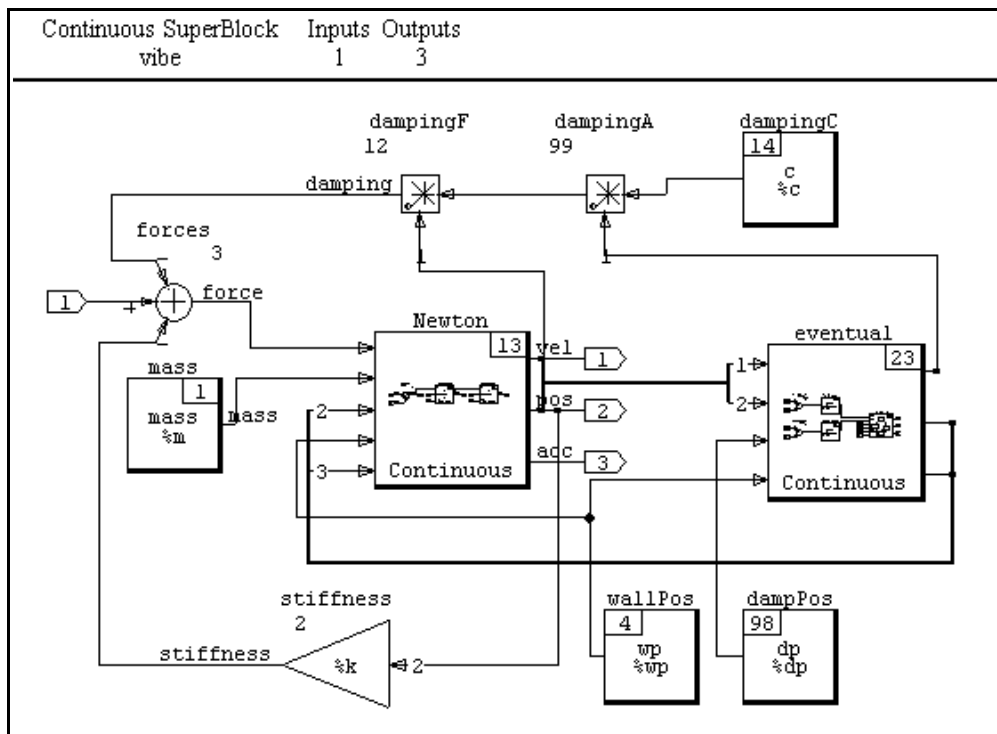

NOTE: The current tutorial block diagrams and state chart can be loaded into the CatalogBrowser by executing the following command from the Xmath Commands window.

```
load "$SYSBLD/examples/gs_tutorial/vibe2.cat";
```

vibe2 contains a solution of the intermediate spring-mass damper model with event modeling using the BetterState block.

To simulate barrier events with **vibe**:

1. In the Xmath command area, enter the following values:

```
t = [0:0.001:5]';  
u = -9.8 * ones(t);  
m = 1;  
v0 = 0;  
p0 = 7;  
c=0;  
k=0;  
dp=10;  
wp=0;
```


2. Execute the simulation:

```
y = sim("vibe",t,u,{graph});
```

The simulation proceeds as before, but there is a delay as the BetterStateChart block code is compiled and linked. Also, the simulation output log shows that two zero-crossings occurred.

The plot results in [Figure 4-45](#) verify that these zero-crossings correspond to rebounds from the barrier.

Figure 4-45 **vibe Barrier Events**

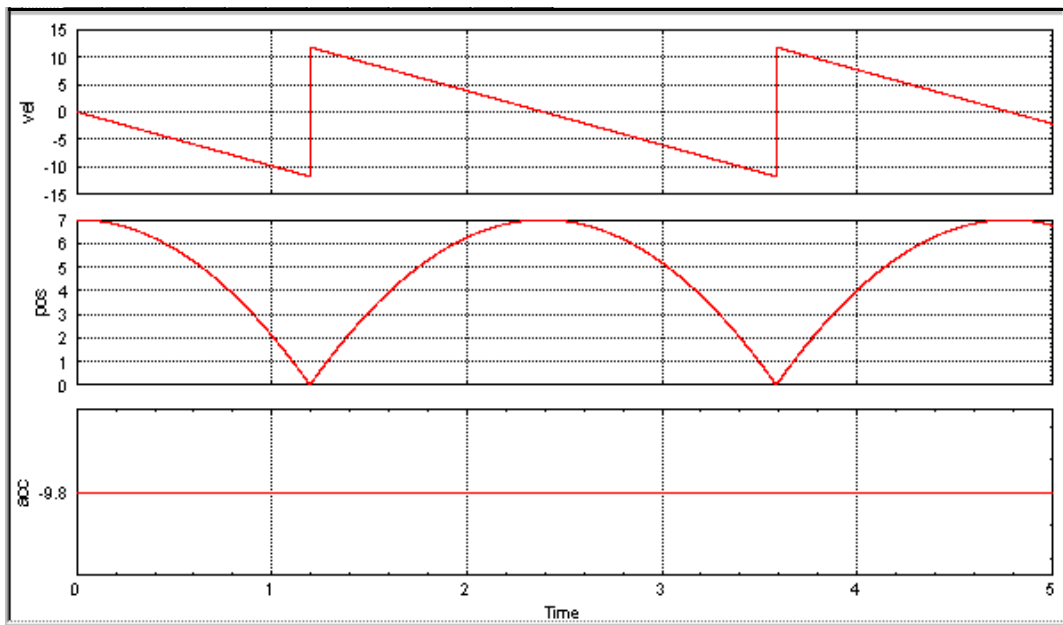

In the final simulation, you include damping boundary events. The external input force is set to zero, but the spring produces a force when the mass is displaced from the spring equilibrium point. The damping boundary is set between the initial position and the equilibrium point (zero). The barrier is set on the opposite side of the equilibrium point.

To simulate damping boundary and barrier events with **vibe**:

1. In the Xmath command area, enter the following values:

```
t = [0:0.001:5]';  
u = zeros(t);  
m = 1;  
v0 = 0;  
p0 = 7;  
c=5;  
k=20;  
dp=2;  
wp=-2;
```

2. Execute the simulation:

```
y = sim("vibe", t, u, {graph});
```

The simulation log shows many more zero-crossings. The plot results in [Figure 4-46](#) verify that some are from barrier events, and some are from damping boundary events. Note that the velocity curve is discontinuous at barrier events, and the acceleration curve is discontinuous at damping boundary events.

Final Exercise

Recall that several simplifying assumptions were made in modeling damping region and barrier events. Test your understanding of SystemBuild and BetterState, as well as your design skills, by adding the following enhancements to the current model:


- Damping constants can be specified for both damping regions.
- Barriers can be placed both above and below the initial position of the mass.
- Restitution factors can be specified for both barriers.



NOTE: A solution to the final exercise can be loaded into the CatalogBrowser by executing the following command from the Xmath Commands window.

```
load "$SYSBLD/examples/gs_tutorial/vibe3.cat";
```

Figure 4-46 **vibe Barrier and Damping Boundary Events**

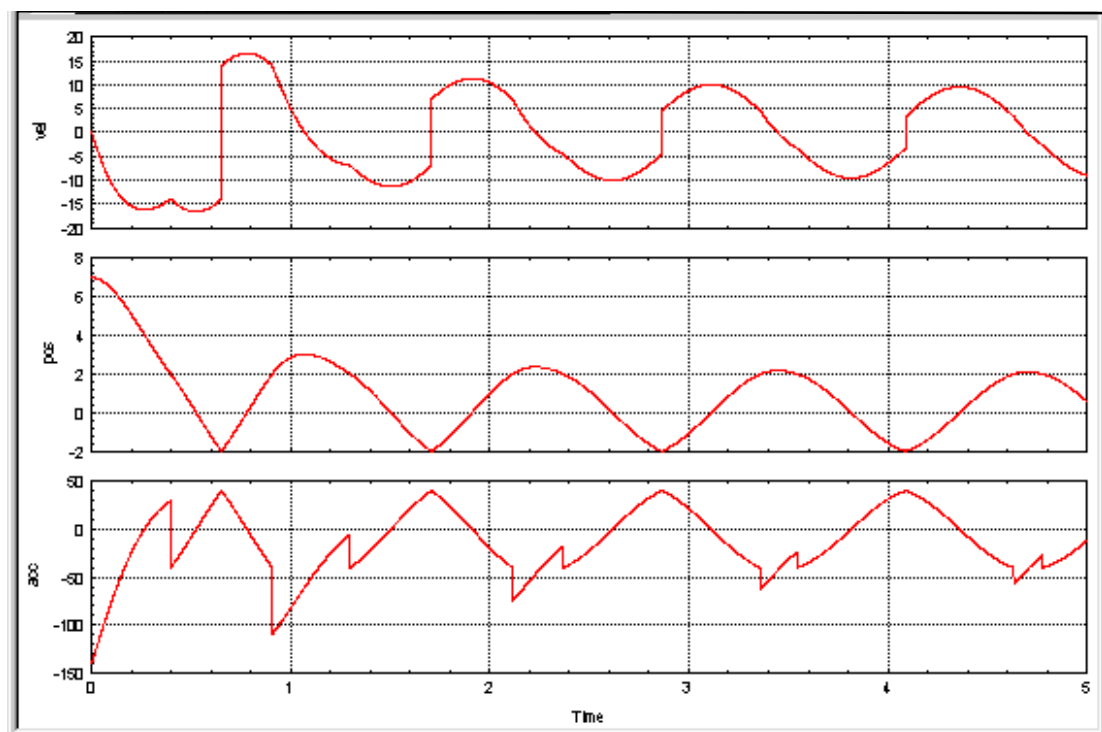

5

AutoCode

AutoCode software lets you generate ANSI C or Ada code automatically from SystemBuild models.

You can generate code from the Catalog Browser in SystemBuild or use the **autocode** Xmath command. The generated code represents a complete implementation of the model and can be targeted to run on computers or on an actual controller. The default target is a stand-alone simulation that you can execute on your computer; you can load the results of the simulation back into Xmath for analysis.

5.1 Generating Non-Customized Code

To generate code for the sample Discrete Cruise System model, follow the steps below. on your terminal.

To generate code for the Discrete Cruise System SystemBuild model:

1. If Xmath is not currently running, start Xmath as described in [3.2.2 Starting Xmath](#), p.31.
2. Verify that you have write permission for the current directory, and that it is where you want to save your code. If not, enter the command below from the Xmath command window, substituting your directory name:

```
set directory ="write_enabled_directory"
```

3. From the Xmath command line, type the following command to load the model:

```
load "$SYSBLD/demo/cruise_demo/cruise_d.cat";
```



NOTE: Environment variables are only recognized on the Xmath command line. For other loading methods, you must know the full pathname of the SystemBuild directory


4. From the SystemBuild Catalog Browser, select the Discrete Cruise System SuperBlock.



NOTE: You must generate code from a top level SuperBlock.

5. From the Catalog Browser, select Tools→AutoCode to bring up the Generate Real-Time Code dialog (see [Figure 5-1](#)).
6. Enter a name in the Selection field, or accept the default, **Discrete_Cruise_System**.

Figure 5-1 Generate Real-Time Code Dialog

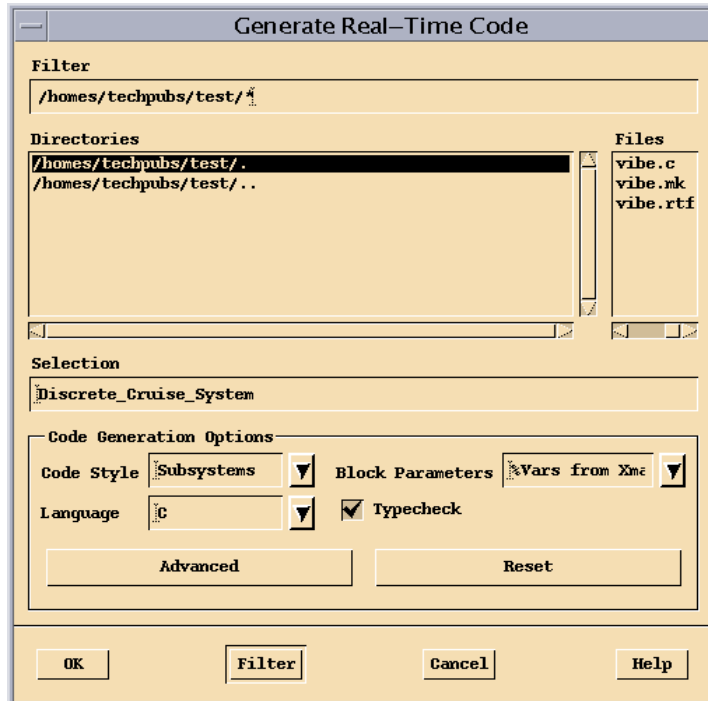

7. Click OK to start the code generation process.
8. Activate the Xmath Commands window to monitor the progress of the code generation.
9. Once the code generation is complete, look for a statement similar to the following in the Xmath log area:

Output generated in *your_directory*\Discrete_Cruise_System.c.

Code generation complete.

10. (Optional) Display the output file in the Xmath Output window by entering a command similar to the following in the Xmath Commands window:

```
oscmd ("more your_directory\Discrete_Cruise_System.c")
```

5.2 Generating Customized Code

To customize your AutoCode output, click Advanced on the Generate Real-Time Code dialog; this brings up the Advanced dialog (see [Figure 5-2](#)).

You can use the Advanced dialog from the AutoCode Code Generation dialog or use keywords with the **autocode** Xmath command to customize the generated code as follows:


- Specifying a template file on the Templates tab allows you to control the formatting of the output of AutoCode to meet a variety of software needs; you can modify the overall architecture of generated code, customize the scheduler, modify data structures and external I/O calls, add user code, and so forth. Using the Template Programming Language (TPL), you can tailor any part of the code except the hierarchy logic and the elementary blocks. Numerous templates are available, including one to customize the generated code for the pSOSystem real-time operating system. For more information on templates, see the *Template Programming Language User's Guide*.
- Formatting options (Formatting tab) let you set maximums, such as the number of significant digits, the length of variable names, and columns per row. From here, you can also specify indentation between levels, as well as set a number of other parameters.

- The IALG (Integration Algorithms) Options tab lets you select an integration algorithm such as Euler or Runge Kutta.
- The Multi-Processor tab lets you specify a processor, startup, background, interrupt, skew, priority, or map file.
- The Optimization tab lets you make general, vectorization, and VAR block settings that affect code size and efficiency (see the *AutoCode Reference* for details).
- The Miscellaneous tab lets you select an options file, the type of scheduler, output scope control, and various other settings.
- The RTOS (real-time operating system) Options tab lets you specify a configuration file and set additional options.

Once you have customized your settings, you click OK in the Advanced dialog; then you generate code by clicking OK in the Generate Real-Time Code dialog.

For information about compiling, executing, and using the generated code, see the *AutoCode User's Guide*. For information about autocode keywords, see the topic *AutoCode* in the MATRIX_x online Help.

Figure 5-2 **Advanced Dialog**

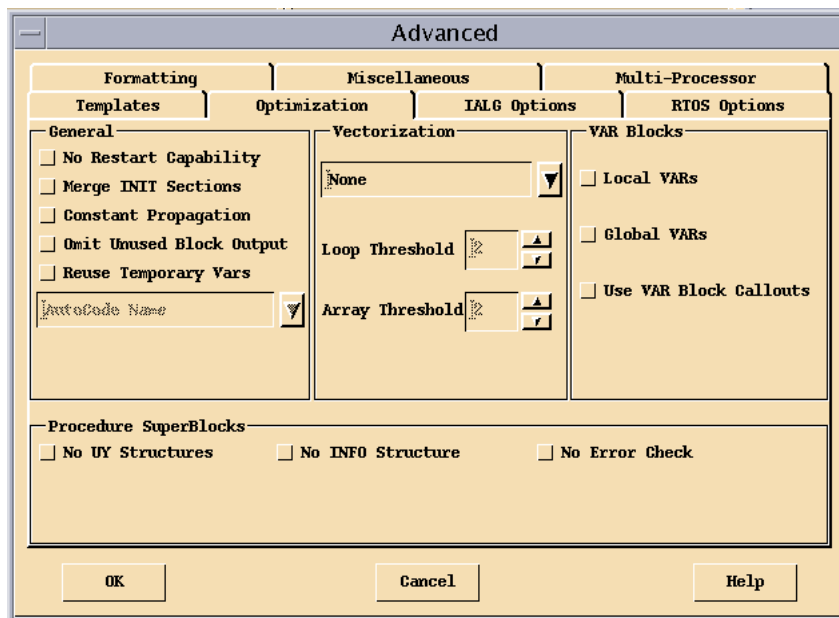

6

DocumentIt

The DocumentIt software generates block-level documentation for SystemBuild models. The DocumentIt software extracts the parameters of the SuperBlocks and elementary blocks in your model and any comments you have entered for each block; it then formats the documentation according to guidelines you define. You can generate documentation from the Xmath command area or from the SystemBuild Catalog Browser. You can invoke controls as arguments from the command area or make choices in a user dialog.

This chapter provides an introduction to using DocumentIt. For a complete description, see the *DocumentIt User's Guide*.

6.1 Generating Non-Customized Documentation

To generate documentation for the sample Discrete Cruise System model, follow the steps below. We assume that you have Xmath running on your terminal.

1. Make sure you are in a directory where you have write permission for saving your code. If not, enter the command below from the Xmath command window, substituting your directory name:

```
set directory ="your_directory"
```

- From the Xmath command line, type the following command to load the model:

```
load "$SYSBLD/demo/cruise_demo/cruise_d.cat";
```



NOTE: Environment variables are recognized only in the Xmath command area. For loading with other methods, you must know the full pathname of the SystemBuild directory. See [3.2.1 Directories Defined by Environment Variables](#), p.31 for additional information.)


- From the SystemBuild Catalog Browser, select the Discrete Cruise System SuperBlock.



NOTE: You must generate documentation from a top level SuperBlock.

- Select Tools→DocumentIt to bring up the Generate Documentation dialog (see [Figure 6-1](#)).

Figure 6-1 Generate Documentation Dialog

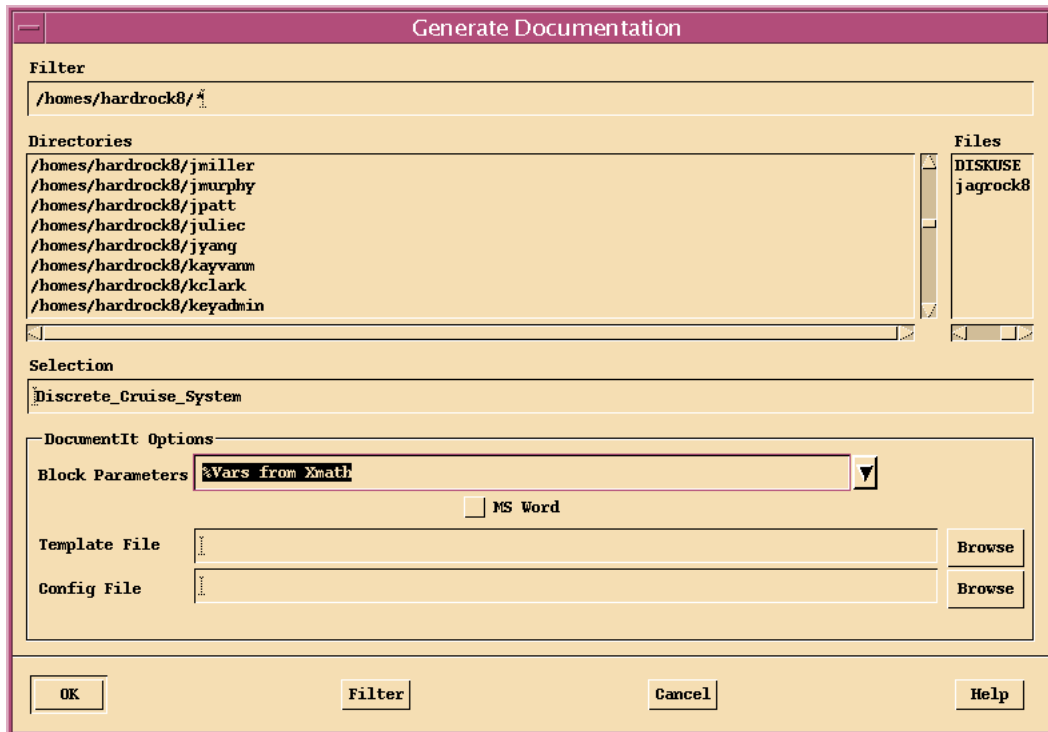

5. Choose a directory, and enter a name in the Selection field or accept the default, **Discrete_Cruise_System**.



NOTE: You do not need to supply the extension. DocumentIt supplies the default, **.doc**, for you.

6. Click OK to start the document generation process.
7. Select the Xmath Commands window to monitor the progress of the documentation generation.
8. Once the document generation is complete, look for a statement similar to the following in the Xmath Log window:

Documentation generation complete.
Document generated and saved in file: Discrete_Cruise_System.doc.



NOTE: The **.doc** file is in ASCII format. The current defaults also produce an **.rtf** file, which contains Microsoft Word markup commands.

9. (Optional) Display the output file in the Xmath Output window by entering a command similar to the following in the Xmath Commands window:

oscmd ("more your_directory\Discrete_Cruise_System.doc")

Figure 6-2 provides a sampling of DocumentIt output from the **Discrete_Cruise_System.doc** document.

Figure 6-2 Sample of DocumentIt Output



6.2 Generating Customized Documentation

You can customize documentation generated with DocumentIt by using templates. Template files are ASCII files containing text, interspersed with template command parameters that specify DocumentIt output. The TPL programming language lets you modify the templates to control the output of DocumentIt to meet a variety of needs. Various templates are available.

In addition to template command parameters, you can also place publishing software markup commands (for example, FrameMaker or WordPerfect markup commands) in template files, which DocumentIt writes directly to the ASCII output file. The markup commands automatically format the document when it is imported into the corresponding publishing software. See the *Template Programming Language User's Guide*.

Unlike AutoCode, DocumentIt does not have a dialog box for advanced features.

Index

Symbols

%CASE% 31
%ISIHOM% 31
%SYSBLD% 31
%XMATH% 31

A

Acrobat Reader 12
algebraic loop 93
AutoCode 4, 115
 code generator 19, 51
 configuration options 117
 Tools Menu pulldown 115
 Xmath command 115, 117

B

BetterStateChart block 92, 99
 Chart Properties dialog 102
 Data Dictionary dialog 103
 State Properties dialog 106
 Transition Properties dialog 109
 User Code dialog 107
block diagram 69

adding blocks 71
algebraic loop 93
connecting blocks 78
connecting SuperBlock inputs and outputs 80
editing block properties 72
event controller 98
resettable integrator 94
signal switch 96
simulation 84
breakpoint, setting initial 40
building and simulating a model 65

C

CASE 31
Catalog Browser 47
caution 11
Chart Properties dialog 102
code generation 1, 4, 19, 51, 115
command area, Xmath 32
conventions
 book 8
 font 8
 format 9
 mouse 11
 note, caution, and warning 11
 symbol 10
customer support 28

D

Data Dictionary dialog [103](#)
debug command [40](#)
document generation [4, 119](#)
DocumentIt [4, 119](#)

E

encapsulating a SuperBlock [86](#)
environment variable
 %CASE% [31](#)
 %SIHOME% [31](#)
 %SYSBLD% [31](#)
 %XMATH% [31](#)
event controller [98](#)
events [92](#)
Explorer [22](#)
external connections [80](#)

F

finding a Help topic [24](#)

G

generated code [19](#)
 neural network [51](#)
generating
 code [1, 4, 115](#)
 customizing [117](#)
 documentation [4, 119](#)
 customizing [119, 123](#)
getting started in Xmath [31](#)

H

Help [20](#)
 Context-Sensitive [25](#)

finding a topic [24](#)
launching standalone (mtxhelp) [20](#)
NetHelp engine [20](#)
printing online Help [26](#)
starting [20](#)
using examples [25](#)
window, using [22](#)

I

internal connections [78](#)
ISIHOME [31](#)

L

loading SystemBuild tutorial catalogs [65](#)

M

MATRIX_X Product Family [1](#)
mtxhelp [21](#)

N

Netscape Navigator, using with Help [26](#)
Neural Network Module [19, 51](#)
note [11](#)

O

online Help [20](#)
 finding topics [24](#)
 navigating [23](#)
 starting [20](#)
 using context sensitive [25](#)
 using examples [25](#)
 window [22](#)
online Help (see Help) [20](#)

P

Palette Browser [49](#)
 parameter, template command [123](#)
 plot function [43](#)
 plot2d function [43](#)
 plotting [3](#), [30](#), [35](#)
 print (online Help) [26](#)
 printing documents [14](#)

R

RealSim
 environment [4](#)
 introduction [1](#)
 resettable integrator [94](#)
 Run-time Variable Editor (RVE) [50](#)

S

Shift-Return [33](#)
 signal switch [96](#)
 simulation [58](#), [84](#)
 Simulator [50](#)
 spring-mass damper model [66](#)
 starting the online Help [20](#)
 State Properties dialog [106](#)
 SuperBlock Editor [48](#)
 SuperBlock Properties dialog [69](#)
 support [28](#)
 SYSBLD [31](#)
 system analysis [3](#)
 SystemBuild [3](#)
 block basics [66](#)
 block diagram [69](#)
 Catalog Browser [47](#)
 Editor [48](#), [52](#)
 features [48](#)
 getting started [52](#)
 modules [50](#)
 overview [3](#)
 Palette Browser [49](#)

Simulator [50](#)
 simulator [50](#)
 SuperBlock Editor [48](#)
 SuperBlock Properties dialog [69](#)
 things to try [52](#)
 tutorial [65](#)

T

technical support [28](#)
 template
 command parameters [117](#), [123](#)
 tpl program [117](#), [123](#)
 text editor, specifying [50](#)
 tpl programming language [117](#), [123](#)
 Transition Properties dialog [109](#)
 tutorial block diagram
 loading [65](#)
 tutorials
 SystemBuild [65](#)
 Xmath [35](#)

U

uiPlot function [43](#)
 User Code dialog [107](#)

W

warning [11](#)

X

XMATH [31](#)
 Xmath
 capabilities [29](#)
 command area [32](#)
 command line debugger [40](#)
 Commands window [32](#)

features	29
getting started	31
invoking	31
overview	1
tutorial	35
Xmath PGUI tools	43