

# **NHR 9410 & 9420 SERIES**

## **USER'S MANUAL**



**Part No. 09-0329**

**REVISION R**

**October 12, 2021**



**Document History**

Rev A	ECO 17364	03/24/2016	EW
Rev B	ECO 17423	03/28/2016	EW
Rev C	ECO 17434	04/15/2016	MW/KF
Rev D	ECO 17490	11/16/2016	MW/KF
Rev E	ECO 17711	12/19/2017	MW
Rev F	ECO 17832	12/18/2018	MJ
Rev G	ECO 17849	02/07/2019	RW
Rev H	ECO 17862	03/19/2019	MJ/KM
Rev J	ECO 17889	05/06/2019	KM
Rev K	ECO 17901	05/29/2019	MJ/KM
Rev L	ECO 17910	06/20/2019	RW
Rev M	ECO 17915	07/10/2019	KM
Rev N		09/23/2019	RW
Rev P	ECO 18044	06/30/2021	KM
Rev R	ECO 18118	10/12/2021	BH

### **Proprietary Rights Notice**

**This document and the information that it contains are the property of NH Research, Incorporated. The rights to duplicate or otherwise copy this document, the rights to disclose the document and its information to others, and the right to use the information therein may be acquired only by written permission signed by a duly authorized officer of NH Research, Incorporated.**

**Unauthorized duplication of software and documentation provided with the test workstations violates the copyright protection provided by law. However, backup copies of programs are permitted for archives and recovery from hardware failures.**

**The material in this publication is current as of the release date on the cover page and is subject to change without notice. Any questions concerning the product or any questions or comments concerning this manual should be directed to the NH Research Field Service Department during normal business hours Monday through Friday at (949) 474-3900 or FAX (949) 474-7062 or [www.nhresearch.com](http://www.nhresearch.com).**



## TABLE OF CONTENTS

---

<b>1. GENERAL.....</b>	<b>9</b>
1.1 MODELS .....	9
1.2 SYMBOLS USED.....	10
1.3 WARRANTY .....	10
1.4 INTENDED USAGE.....	10
1.5 SAFETY NOTICE – NO USER SERVICEABLE PARTS INSIDE .....	11
1.6 GENERAL SAFETY NOTICES.....	11
1.7 IMPORTANT TERMINOLOGY .....	12
1.7.1 GENERAL TERMS .....	12
1.7.2 UNITS.....	13
<b>2. 9410 &amp; 9420 SERIES OVERVIEW .....</b>	<b>15</b>
2.1 MODULE FRONT VIEW.....	15
2.2 MODULE REAR VIEW .....	16
2.3 SYSTEM DESCRIPTION .....	17
2.4 9410 & 9420 FEATURE COMPARISON.....	17
2.5 9410 & 9420 SERIES COMMON SPECIFICATIONS .....	18
2.5.1 COMMON ELECTRICAL OUTPUT SPECIFICATIONS .....	18
2.5.2 COMMON MEASUREMENT SPECIFICATIONS .....	19
2.5.3 COMMON FACILITY & MECHANICAL SPECIFICATIONS.....	20
2.6 9410-SERIES SPECIFIC SPECIFICATIONS.....	21
2.6.1 9410 PROGRAMMABLE FEATURES .....	21
2.6.2 9410 OPERATING MODE .....	21
2.7 9420-SERIES SPECIFIC SPECIFICATION .....	22
2.7.1 9420 PROGRAMMABLE FEATURES .....	22
2.7.2 9420 LOW CURRENT MEASUREMENT RANGE .....	23
2.7.3 9420 OPERATING MODE .....	23
2.8 SYSTEM SIZE (ALL MODELS).....	24
<b>3. INSTALLATION.....</b>	<b>25</b>
3.1 UNPACKING THE 9410 OR 9420 SYSTEM .....	25
3.2 LOCATION MOUNTING AND COOLING .....	25
3.3 REAR OF MODULE OR CABINET.....	25
3.3.1 INPUT COOLING .....	25
3.3.2 CONNECTING AC FACILITY POWER.....	26
3.3.3 EMERGENCY-OFF CONNECTOR WIRING.....	28
3.3.4 INTERLOCK & EXTERNAL SENSE WIRING .....	28
3.3.5 UUT WIRING .....	29
3.3.6 TERMINATOR INSTALLATION .....	29
3.3.7 DIP-SWITCHES .....	30
3.3.8 ANALOG V/I MONITOR .....	31
3.3.9 LAN CONNECTION.....	32
3.4 TURN ON CHECKLIST .....	33
3.4.1 PRIOR TO APPLYING EXTERNAL POWER TO THE UNIT .....	33
3.4.2 POWERING UP THE SYSTEM .....	33
3.4.3 POWERING DOWN THE SYSTEM .....	33
3.5 CONFIGURING THE IP ADDRESS.....	34
3.5.1 CONFIGURING THE MASTER MODULES IP ADDRESS.....	35
3.5.2 CONFIGURE THE TOUCH CONTROLLER SOFTWARE .....	36
3.5.3 CONFIGURE THE TOUCH CONTROLLER'S IP ADDRESS .....	38
3.5.4 CONFIGURING AN EXTERNAL APPLICATION.....	39
<b>4. SYSTEM FEATURES.....</b>	<b>41</b>
4.1 THEORY OF OPERATION.....	41

4.1.1	MULTI-CHANNEL DESIGN .....	41
4.1.2	ISOLATED OUTPUTS .....	42
4.1.3	4-QUADRANT AC OPERATION.....	42
4.1.4	CONSTANT POWER ENVELOPE WITH HiVAR .....	43
4.1.5	ALL DIGITAL CONTROL AND FIRMWARE UPGRADABLE.....	44
4.1.6	FIELD EXPANDABLE POWER.....	44
4.1.7	REDUCED CHANNEL MODELS .....	44
4.1.8	SAFETY FEATURES .....	45
4.2	FLEXIBLE AC & DC OPERATING MODES.....	45
4.2.1	9410 & 9420 SPECIFIC PROGRAMMABLE LIMITS.....	45
4.2.2	SINGLE PHASE & DC OUTPUTS - PER CHANNEL RELATIONSHIPS.....	46
4.2.3	MULTI-PHASE AC OUTPUTS - PER CHANNEL RELATIONSHIPS.....	47
4.3	FRONT PANEL INDICATORS AND CONTROLS .....	48
4.3.1	FRONT PANEL AIR-INTAKE AND BREAKER.....	52
4.3.2	MODULE REAR VIEW .....	53
<b>5.</b>	<b>TOUCH PANEL CONTROL .....</b>	<b>55</b>
5.1	SYSTEM IDENTIFICATION.....	55
5.2	SETTING THE OUTPUT OPERATING MODE.....	56
5.3	TOUCH SCREEN OVERVIEW .....	57
5.4	INDICATORS .....	57
5.5	SYSTEM STATUS .....	59
5.6	SCREEN SELECTION TABS.....	60
5.6.1	MONITOR SCREEN .....	61
5.6.1.1	INSTRUMENT LABELS .....	61
5.6.1.2	SWITCHING BETWEEN LINE-LINE AND LINE-NEUTRAL VIEWS .....	62
5.6.1.3	SCROLLING FOR ADDITIONAL MEASUREMENTS.....	63
5.6.2	WAVEFORM SCREEN .....	63
5.6.3	CONTROL SCREEN.....	64
5.6.3.1	TURNING THE OUTPUT ON/OFF .....	64
5.6.3.2	MEASUREMENTS & SETTINGS PANELS .....	65
5.6.3.3	SWITCHING CONTROL FROM LINE-LINE TO LINE-NEUTRAL .....	65
5.6.3.4	SCROLLING FOR ADDITIONAL SETTINGS.....	66
5.6.3.5	ADJUSTING OUTPUT SETTINGS .....	66
5.6.4	OPTIONS SCREEN.....	70
5.6.4.1	TURNING THE OUTPUT ON/OFF .....	70
5.6.4.2	SCROLLING FOR ADDITIONAL SETTINGS.....	71
5.6.4.3	ADJUSTING OUTPUT OPTIONS.....	71
5.6.4.4	CLEARING ACCUMULATED MEASUREMENTS.....	72
5.6.4.5	PERFORMING A HARDWARE RESET.....	72
5.6.5	SAFETY SCREEN .....	73
5.6.5.1	SCROLLING FOR ADDITIONAL SETTINGS.....	73
5.6.6	MACRO EDITOR SCREEN .....	74
<b>6.</b>	<b>SOFTWARE (PC TOOLS) CONTROL .....</b>	<b>76</b>
6.1	LAUNCHING THE NHR 9400 PANEL.....	76
6.2	CONNECTING THE NHR 9400 PANEL TO SYSTEM .....	77
6.3	NHR 9400 PANEL - OVERVIEW .....	78
6.3.1	SYSTEM IDENTIFICATION .....	78
6.3.2	SYSTEM INFORMATION.....	78
6.3.3	CHANGING THE HARDWARE OPERATING MODE.....	79
6.3.4	LOGGING SCPI COMMUNICATION.....	82
6.3.5	INSTRUMENT CONTROLS & MEASUREMENTS.....	83
6.3.6	NHR 9400 PANEL – OTHER SYSTEM LEVEL CONTROLS .....	83
6.3.6.1	EXTERNAL SCPI COMMAND FILE.....	83
6.3.6.2	MACRO SUPPORT.....	84
6.3.6.3	OTHER CONTROLS .....	85

6.3.7	ERROR MESSAGE QUEUE .....	86
6.4	NHR 9400 PANEL – INSTRUMENT LEVEL CONTROLS .....	87
6.4.1	INSTRUMENT LABELS.....	88
6.4.2	INSTRUMENT OUTPUT CONTROLS .....	89
6.4.3	ADJUSTING SLEW RATES .....	90
6.4.4	ADJUSTING SAFETY .....	93
6.4.5	INSTRUMENT CONFIGURATION OPTIONS.....	94
6.4.6	ESTABLISHING PER PHASE & MULTI-PHASE REGULATION LIMITS .....	96
6.4.7	SELECTING AC OUTPUT WAVE SHAPES .....	98
6.4.8	MEASUREMENTS .....	100
6.4.9	OUTPUT THUMBNAIL WAVEFORM CAPTURE .....	101
6.4.10	EDITING AN OUTPUT WAVE SHAPE.....	102
6.4.10.1	WAVE SHAPE EXAMPLE – LINE SLAP:.....	103
6.4.10.2	WAVE SHAPE EXAMPLE – FORMULA BASED:.....	105
6.4.10.3	WAVE SHAPE EXAMPLE – HARMONICS ENTRY: .....	109
6.4.10.4	WAVE SHAPE EXAMPLE – SIMULATING PHASE JUMP: .....	113
6.4.11	ACCESSING OSCILLOSCOPE VIEW .....	115
6.4.11.1	ADJUSTING VERTICAL SCALE AND POSITION .....	115
6.4.11.2	ADJUSTING THE TIME-BASE & NUMBER OF SAMPLES .....	115
6.4.11.3	CAPTURING THE OUTPUT.....	116
6.4.11.4	CURSORS .....	116
6.4.11.5	STORE WAVEFORM DATA .....	116
6.4.11.6	CLOSING THE OSCILLOSCOPE VIEW.....	116
7.	<b>MACROS &amp; USAGE EXAMPLES.....</b>	<b>118</b>
7.1	MACRO ORGANIZATION .....	119
7.2	MACRO TIMING CONTROL.....	119
7.2.1	AC SYNCHRONIZATION ANGLE .....	119
7.2.2	WAITS.....	120
7.3	MACRO PROGRAMMING –OUTPUT CONTROL .....	121
7.3.1	OPERATION .....	121
7.3.2	OPERATION - AC REGULATION LIMITS .....	122
7.3.3	OPERATION - DC REGULATION LIMITS .....	123
7.3.4	SLEW RATE CONTROLS.....	124
7.3.5	MULTI-PHASE RELATIVE ANGLE ADJUSTMENT .....	124
7.3.6	SUB-CYCLE VOLTAGE NOTCHES .....	125
7.4	MACRO PROGRAMMING – INFREQUENCY USED COMMANDS .....	126
7.4.1	CHANGING THE OUTPUT (ON/OFF) STATE.....	126
7.4.2	CHANGING SET & MEASUREMENT RANGES.....	126
7.4.3	ACCESSING THE MEASUREMENT SYSTEM .....	127
7.5	9410 & 9420 MACRO USAGE EXAMPLES .....	128
7.5.1	SIMULATING VOLTAGE INTERRUPTIONS, SAGS, & SWELLS .....	128
7.5.2	SIMULATING SUB-CYCLE CHANGES .....	132
7.5.3	SWITCHING WAVES SHAPES .....	135
8.	<b>APPENDIX – 9410 HARDWARE MODES .....</b>	<b>140</b>
8.1	9410 (3 CHANNEL VERSION) –PROGRAMMABLE MODES.....	140
8.1.1	9410 (3 CHANNEL VERSION) - MODE 0: ONE 3-PHASE AC .....	141
8.1.2	9410 (3 CHANNEL VERSION) - MODE 1: ONE AC.....	142
8.1.3	9410 (3 CHANNEL VERSION) - MODE 2: ONE DC.....	143
8.1.4	9410 (3 CHANNEL VERSION) - MODE 3: THREE AC.....	144
8.1.5	9410 (3 CHANNEL VERSION) - MODE 4: THREE DC.....	144
8.1.6	9410 (3 CHANNEL VERSION) - MODE 5: ONE 2-PHASE AC AND ONE AC .....	146
8.1.7	9410 (3 CHANNEL VERSION) - MODE 6: ONE 2-PHASE AC AND ONE DC .....	147
8.1.8	9410 (3 CHANNEL VERSION) - MODE 7: TWO AC .....	148
8.1.9	9410 (3 CHANNEL VERSION) - MODE 8: ONE AC AND ONE DC.....	149
8.1.10	9410 (3 CHANNEL VERSION) - MODE 9: TWO AC AND ONE DC .....	150

8.1.11	9410 (3 CHANNEL VERSION) - MODE 10: ONE AC AND TWO DC.....	150
8.1.12	9410 (3 CHANNEL VERSION) - MODE 11: ONE DC AND ONE AC .....	152
8.1.13	9410 (3 CHANNEL VERSION) - MODE 12: TWO DC.....	153
8.2	9410 REDUCED CHANNEL MODELS .....	154
8.2.1	9410-8 (2 CHANNEL VERSION) - MODE 0: ONE 2-PHASE AC.....	155
8.2.2	9410-8 (2 CHANNEL VERSION) - MODE 1: ONE AC.....	156
8.2.3	9410-8 (2 CHANNEL VERSION) - MODE 2: ONE DC.....	157
8.2.4	9410-8 (2 CHANNEL VERSION) - MODE 3: TWO AC .....	158
8.2.5	9410-8 (2 CHANNEL VERSION) - MODE 4: TWO DC .....	159
8.2.6	9410-8 (2 CHANNEL VERSION) - MODE 5: ONE AC AND ONE DC.....	160
8.2.7	9410-4 (1 CHANNEL VERSION) -MODE 0: ONE AC .....	161
8.2.8	9410-4 (1 CHANNEL VERSION) -MODE 1: ONE DC .....	162
<b>9.</b>	<b>APPENDIX – 9420 HARDWARE MODES .....</b>	<b>164</b>
9.1	9420 (3 CHANNEL VERSION) –PROGRAMMABLE MODES.....	164
9.1.1	9420 (3 CHANNEL VERSION) - MODE 0: ONE 3-PHASE AC .....	165
9.1.2	9420 (3 CHANNEL VERSION) - MODE 1: ONE AC.....	166
9.1.3	9420 (3 CHANNEL VERSION) - MODE 2: ONE DC.....	167
9.1.4	9420 (3 CHANNEL VERSION) - MODE 3: THREE AC .....	168
9.1.5	9420 (3 CHANNEL VERSION) - MODE 4: THREE DC .....	168
9.1.6	9420 (3 CHANNEL VERSION) - MODE 5: ONE 2-PHASE AC AND ONE AC .....	170
9.1.7	9420 (3 CHANNEL VERSION) - MODE 6: ONE 2-PHASE AC AND ONE DC .....	171
9.1.8	9420 (3 CHANNEL VERSION) - MODE 7: TWO AC .....	172
9.1.9	9420 (3 CHANNEL VERSION) - MODE 8: ONE AC AND ONE DC .....	173
9.1.10	9420 (3 CHANNEL VERSION) - MODE 9: TWO AC AND ONE DC.....	174
9.1.11	9420 (3 CHANNEL VERSION) - MODE 10: ONE AC AND TWO DC.....	174
9.1.12	9420 (3 CHANNEL VERSION) - MODE 11: ONE DC AND ONE AC .....	176
9.1.13	9420 (3 CHANNEL VERSION) - MODE 12: TWO DC.....	177
9.2	9420 REDUCED CHANNEL MODEL.....	178
9.2.1	9420 (2 CHANNEL VERSION) - MODE 0: ONE 2-PHASE AC .....	179
9.2.2	9420-8 (2 CHANNEL VERSION) - MODE 1: ONE AC.....	180
9.2.3	9420-8 (2 CHANNEL VERSION) - MODE 2: ONE DC.....	181
9.2.4	9420-8 (2 CHANNEL VERSION) - MODE 3: TWO AC .....	182
9.2.5	9420-8 (2 CHANNEL VERSION) - MODE 4: TWO DC .....	183
9.2.6	9420-8 (2 CHANNEL VERSION) - MODE 5: ONE AC AND ONE DC.....	184
<b>10.</b>	<b>SERVICE.....</b>	<b>186</b>
10.1	FIRMWARE UPDATES.....	186
10.1.1	UPDATING THE NETWORK PROCESSOR.....	186
10.1.2	UPDATING THE INTERNAL PROCESSORS .....	188
10.2	PERIODIC MAINTENANCE .....	192
10.2.1	PERIODIC CLEANING.....	192
10.2.2	PERIODIC CALIBRATION .....	193
10.2.3	SCPI PROGRAMMERS REFERENCE.....	193
<b>11.</b>	<b>ERROR CODES .....</b>	<b>194</b>
11.1	COMMAND ERRORS (-100 TO -199).....	194
11.2	NHR COMMON DEVICE ERRORS (-1200 TO -1299) .....	195
11.3	NHR CHANNEL DEVICE ERRORS (-1300 TO -1399).....	196
<b>12.</b>	<b>DEVICE ERRORS REQUIRE RESET TO CLEAR (100 TO 199).....</b>	<b>200</b>
<b>13.</b>	<b>FATAL ERRORS THAT REQUIRE SERVICE (200 TO 299).....</b>	<b>208</b>

## 1. GENERAL

---

### 1.1 Models

This manual applies to the following hardware modules provided by NH Research. See the product comparison matrix in the following sections for more information about the different product series.

9410 – Regenerative Grid Simulator

9420 – ATE AC Power Source

**BOLD** – Standard Models

Non-standard models available with longer lead times.

9410 Regenerative Grid Simulator			
Model	Maximum Power <sup>1</sup>	Channel Count	Footprint
9410-4	4kW / 10.5 kVA	1 Channel	9U Module 19" Rack-mountable
9410-8	8kW / 21 kVA	2 Channels	
<b>9410-12</b>	<b>12kW / 31.5kVA</b>	3 Channels	
<b>9410-24</b>	<b>24kW / 63kVA</b>	3 Channels	43" Tall Cabinet
<b>9410-36</b>	<b>36kW / 94.5kVA</b>		78" Tall Cabinet
<b>9410-48</b>	<b>48kW / 126kVA</b>		78" Tall Cabinet
9410-60	60kW / 157.5kVA	3 Channels	Dual Bay 78" Cabinet
<b>9410-72</b>	<b>72kW / 189kVA</b>		
9410-84	84kW / 220.5kVA		
<b>9410-96</b>	<b>96kW / 252kVA</b>		




<sup>1</sup> Requires DSP Firmware Revision 6.3 or later.

9420 AC Power Source			
Model	Maximum Power	Channel Count	Footprint
9420-8	8kW / 21 kVA	2 Channels	9U Module 19" Rack-mountable
<b>9420-12</b>	<b>12kW / 31.5kVA</b>	3 Channels	
<b>9420-24</b>	<b>24kW / 63kVA</b>	3 Channels	43" Tall Cabinet
<b>9420-36</b>	<b>36kW / 94.5kVA</b>		78" Tall Cabinet
<b>9420-48</b>	<b>48kW / 126kVA</b>		78" Tall Cabinet
9420-60	60kW / 157.5kVA	3 Channels	Dual Bay 78" Cabinet
<b>9420-72</b>	<b>72kW / 189kVA</b>		
9420-84	84kW / 220.5kVA		
<b>9420-96</b>	<b>96kW / 252kVA</b>		

This manual will also apply to new product variations released by NH Research.

## 1.2 Symbols Used

Warnings, cautions, & notes will be highlighted within this document with the following symbols.

	<b>Failure to observe warning(s) may cause life threatening danger. Please use extreme caution.</b>
	<b>General safety warnings - Failure to observe warning(s) may cause bodily harm or equipment damage.</b>
	<b>General notes or keys for operation.</b>


## 1.3 Warranty

NH Research provides a standard one (1) year.

Details, limitations, and other information are included within the general terms and conditions provided with the product quote.



## 1.4 Intended Usage

The 9410 & 9420 Series provides AC or DC voltage control and measurement. It is primarily used in the evaluation, performance, functional, & endurance testing for either AC or DC products. Usage for other purposes outside of this manual's description which result in product failure may be considered as customer abuse and therefore may not be covered under warranty.

	<b>Operators of the equipment should be trained in safety procedures. Any damage caused by non-intended usage is not covered under warranty.</b>
---	--



### 1.5 Safety Notice – No User Serviceable Parts Inside

The 9410 & 9420 series contains no internally replaceable or serviceable parts.

	<b>Internal adjustment or component replacement is only permitted by qualified NH Research personnel. No internal adjustments or system access should be attempted by non-NH Research personnel.</b>
	<b>Safety Notice For Qualified Technician:</b> <ul style="list-style-type: none"> <li>• Remove all external voltage sources</li> <li>• Disconnect power cord</li> <li>• Wait a minimum of 1 minute to discharge internal circuits</li> <li>• Verify circuits are fully discharged</li> </ul>

### 1.6 General Safety Notices

The following are general notices which should be observed by the operator.

	<b>Potential for Mortal Hazard:</b> <ul style="list-style-type: none"> <li>• Internal access should be avoided – No serviceable parts</li> <li>• All connections should be carried out under OV conditions</li> <li>• All connections should be properly terminated leaving no exposed wires which could present an electrical shock hazard</li> <li>• Always assume the output has potential even when “OFF”</li> </ul>
	<b>Additional Notes</b> <ul style="list-style-type: none"> <li>• The test equipment should only be used by trained personnel or under the direct supervision of trained personnel.</li> <li>• Do not insert any object through the air intake</li> <li>• Avoid use of liquids near the test equipment when possible</li> <li>• Ensure proper polarity is observed when connecting the equipment to the unit under test. Reverse polarity can damage either the equipment or the UUT.</li> </ul>

## 1.7 Important Terminology

### 1.7.1 General Terms

The following general terms are used throughout this document.

#### *Unit-Under-Test (UUT)*

The Unit-Under-Test (or UUT) is the device which is being tested.

#### *Input*

Input is a generic term applied to the connection from the facility to either a 9410 or 9420. The use of the term Input does not imply the direction of power flow.

#### *Output*

Output is a generic term applied to the connection from the 9410 or 9420 to the UUT. The use of the term Output does not imply the direction of power flow.

#### *Channel*

A channel is comprised of a master output and the corresponding auxiliary output. Each channel may be configured for AC or DC operation as well as be configured to operate together to produce a single larger channel.

#### *Module or Power Module*

A Module is the generic name for one chassis within either a 9410 or 9420 system. There are two primary module versions including a “Master” and an “Auxiliary”.

#### *Auxiliary (Module) or Auxiliary (Power Module)*

An auxiliary module contains the power electronics needed to supplement a master modules power. It does not contain the control and communications components needed to operate as a standalone system. These output channels are controlled by a master module and are to be wired in parallel with the output channels of the controlling master.

#### *Master (Module) or Master (Power Module)*

A master module contains the control and communications hardware along with one or more output channels. Master module current as well as power is expanded by connecting a compatible auxiliary module.

#### *Instrument*

The instrument is an abstraction term allowing one or more channels to be treated as a logical group. For example, when the 9410 or 9420 is configured for single 1-phase or configured for 3-phase operation, all of the channels will be grouped together into a single instrument. By comparison, if three separate channels are configured the system will address this as three separate instruments.



### 1.7.2 Units

Unless otherwise stated, units are as follows:

Angles	degrees (°)
Apparent power	Volt-Amperes (VA)
Crest Factor	Unit-less and is always calculated as $\text{Current}_{(\text{AC-PEAK})} / \text{Current}_{(\text{AC-RMS})}$
Current <sub>(AC)</sub>	Amperes ( $A_{\text{RMS}}$ ) - calculated as RMS across one cycle
Current <sub>(AC - Peak)</sub>	Amperes ( $A_{\text{PEAK}}$ ) - the maximum instantaneous current value
Current <sub>(DC)</sub>	Amperes ( $A_{\text{DC}}$ ) - calculated as the average current over 3.33ms
Energy	Ampere-Hours (Ah) Kilowatt-Hours (kWh), Kilovolt-Ampere-Hours (kVAh)
Frequency	Hertz (Hz)
Power Factor	Unit-less and always is True Power / Apparent Power
Resistance	Ohms ( $\Omega$ )
Time	seconds (s)
True power	Watts (W)
Voltage <sub>(AC)</sub>	Volts ( $V_{\text{RMS}}$ ) - calculated as RMS across one cycle
Voltage <sub>(AC - Peak)</sub>	Volts ( $V_{\text{PEAK}}$ ) - the maximum instantaneous voltage value
Voltage <sub>(DC)</sub>	Volts ( $V_{\text{DC}}$ ) - calculated as the average voltage over 3.33ms

**This page intentionally left blank.**

## 2. 9410 & 9420 SERIES OVERVIEW

---

### 2.1 Module Front View

The front of the system module includes the series name (9410 Regenerative Grid Simulator or 9420 HiVAR AC Power Source), a touch panel interface, output & status indicators, Digital IO, Trigger ports, and a circuit breaker.

Air intake is from the front and is exhausted to the rear.



9410 Regenerative Grid Simulator Shown


## 2.2 Module Rear View

The rear of the system includes connections for interlocks, power (facility & UUT), communication, and system expansion.



## 2.3 System Description

This system description is provided clarify the technical specifications in the following sections. The number of channels supported by a given system depends on the model selected. For example, a 4-kW model provides one (1) channel, an 8-kW model provides two (2) channels, and models from 12-kW to 96-kW provide three (3) channels. These channels may be configured through software to provide any combination of AC and DC voltage control channels.

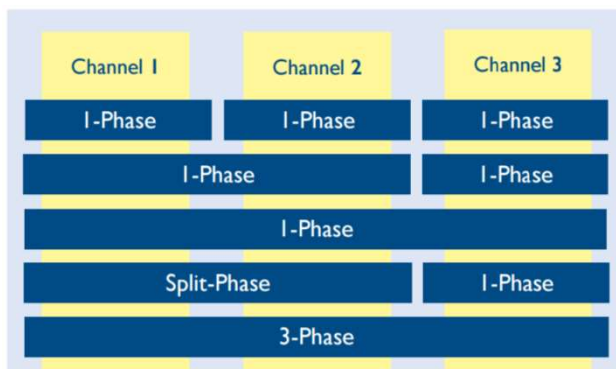

## 2.4 9410 & 9420 Feature Comparison

The 9410 and 9420 models are regenerative and maintain the output voltage allowing for full 4-quadrant current draw from an UUT. To protect the UUT, both systems include a programmable safety trip feature for voltage, current, and power (W/VA).

The major differences between are summarized in the table below.

Feature	9410 Series Grid-Simulator	9420 Series ATE AC Source
Control Mode	Voltage Control 350V <sub>AC</sub> / 400V <sub>DC</sub>	
Max Frequency	Up to 100Hz	Up to 880 Hz
4 Quadrant	✓	✓
Power Sourcing (PF 0 to 1)	✓	✓
Power Sinking (PF -1 to 0)	✓	-
Bi-Directional DC	✓	Enable in SW
Current Limit	-	✓
Power Limit (kW)	-	✓
Low Current Meas Range	-	✓
Safety (V, A, kW, & Peak)	✓	✓

### Related Products

NH Research also manufactures a 9430 Series Regenerative AC Load. Refer to *9430 User's Manual (NHR P/N: 09-0344)* or the product brochure for details.

## 2.5 9410 & 9420 Series Common Specifications

The following specifications are common to all 9410 & 9420 series modules and list the maximum capabilities only. See the Series-specific specifications for details on programmable features, accuracies, and product-specific features.

### 2.5.1 Common Electrical Output Specifications

All 9410 & 9420 Models								
Model	9410-4	9410-8 9420-8	9410-12 9420-12	9410-24 9420-24	9410-36 9420-36	9410-48 9420-48	9410-72 9420-72	9410-96 9420-96
AC Output Specifications								
Number of channels	1	2	3					
Phases / Output Channels	1	1 or 2	1, 2 or 3					
Max True Power (Total)	4kW	8kW	12kW	24kW	36kW	48kW	72kW	96kW
Max Apparent Power <sup>1</sup>	10.5kVA	21kVA	31.5kVA	63kVA	94.5kVA	126kVA	189kVA	252kVA
Current Ranges (max 1ϕ)	6A, 30A	12A, 60A	18A, 90A	36A, 180A	54A, 270A	72A, 360A	108A, 540A	144A, 720A
Current Ranges (per ch) <sup>2</sup>	6A, 30A/ϕ	6A, 30A/ϕ	6A, 30A/ϕ	12A, 60A/ϕ	18A, 90A/ϕ	24A, 120A/ϕ	36A, 180A/ϕ	48A, 200A/ϕ
Voltage Ranges <sup>1</sup>	175, 350V <sub>rms</sub> l-n							
Peak Current	3x Max RMS Current							
Output Voltage Shapes	Sine, n-Step Sine, Triangle, Clipped-Sine, Arbitrary (user-defined)							
Phase Angle Control	0° to 359° / 1° resolution (<100 Hz)							
DC Output Specifications								
Max Power (Total)	4kW	8kW	12kW	24kW	36kW	48kW	72kW	96kW
Current Ranges (max 1ch)	6A, 30A	12A, 60A	18A, 90A	36A, 180A	54A, 270A	72A, 360A	108A, 540A	144A, 720A
Current Ranges (per ch) <sup>2</sup>	6A, 30A/ch	6A, 30A/ch	6A, 30A/ch	12A, 60A/ch	18A, 90A/ch	24A, 120A/ch	36A, 180A/ch	48A, 200A/ch
Voltage Ranges	200, 400V <sub>dc</sub>							

<sup>1</sup> Requires DSP Firmware Revision 6.3 or later

<sup>2</sup> In DC & single phase modes, multiple channels may be used to increase current / power. These ranges therefore are multiplied by the number of parallel channels configured for use.

## 2.5.2 Common Measurement Specifications

All 9410 & 9420 Models								
Model	9410-4	9410-8 9420-8	9410-12 9420-12	9410-24 9420-24	9410-36 9420-36	9410-48 9420-48	9410-72 9420-72	9410-96 9420-96
AC & DC Measurements								
Peak Voltage	260V, 520V							
Accuracy (AC <sub>rms</sub> )	0.1% reading + 0.06% range (< 100 Hz)				0.2% reading + 0.12% range (≥ 100 Hz) <sup>1</sup>			
Accuracy (Peak)	0.5% reading + 0.20% range (< 100 Hz)				1.0% reading + 0.40% range (≥ 100 Hz) <sup>1</sup>			
Accuracy (DC)	0.1% reading + 0.10% range							
Resolution	0.005% range							
Peak Current (per ch) <sup>2</sup>	20A / 100A	20A / 100A	20A / 100A	40A / 200A	60A / 300A	80A / 400A	120A / 600A	160A / 800A
Accuracy (AC <sub>rms</sub> )	0.1% reading + 0.1% range (< 100 Hz)				0.2% reading + 0.2% range (≥ 100 Hz) <sup>1</sup>			
Accuracy (Peak)	0.5% reading + 0.20% range (< 100 Hz)				1.0% reading + 0.40% range (≥ 100 Hz) <sup>1</sup>			
Accuracy (DC)	0.2% reading + 0.1% high range				0.2% reading + 0.3% low range			
Resolution	0.005% range							
Peak Power	V range * I range							
Accuracy (kW / kVA)	0.3% reading + 0.025% range (< 100 Hz)				0.6% reading + 0.05% range (≥ 100 Hz) <sup>1</sup>			
Resolution	0.005% range							
Additional Measurements	Energy (Ah, kWh, kVAh), AC Crest Factor, AC Power Factor, Waveform Capture							
Waveform Digitizer	Output Voltage & Current							
Sample Rate	125k Samples / Second							
Memory Depth	64k Samples							
Aperture Time	1 cycle to 64 seconds (For DC, Minimum aperture time is 3.334mS)							
Accuracy	0.5% reading							
Resolution	0.05% range							

<sup>1</sup> Applies only to models which support > 100Hz operation.

See the Series-specific specifications for details on programmable features, accuracies, and product-specific features.

<sup>2</sup> In DC & single phase modes, multiple channels may be used to increase current / power.

These ranges therefore are multiplied by the number of parallel channels configured for use.

### 2.5.3 Common Facility & Mechanical Specifications

All 9410 & 9420 Models								
Model	9410-4	9410-8 9420-8	9410-12 9420-12	9410-24 9420-24	9410-36 9420-36	9410-48 9420-48	9410-72 9420-72	9410-96 9420-96
Physical Characteristics								
Output Connections	Terminal Block			Bus Bar				
Form Factor	Single Module			Single Cabinet			Double Cabinet	
Dimensions (WxDxH)	19" x 24" x 15¾" (9U) 9420-4 (short) 19"x24" x 10.5" (6U)			23"x30"43"	23"x30"x78"		46"x30"x78"	
Weight	105 lbs.	120 lbs.	135 lbs.	370 lbs.	505 lbs.	855 lbs.	1340 lbs.	1610 lbs.
Operating Temp	0°C to 35°C							
Isolation	Facility to Chassis – 1000V, Output to Chassis – 1000V, Facility to Output Internal Isolation – 2000V							
Input Characteristics								
Voltage	Universal Input – 380V to 480V ± 10% (L-L, 3 Phase, 50/60Hz)							
Efficiency	Greater than 85% (typical)							
Facility Power Factor	Greater than 0.99							
Power Utilization	Energy (Ah, kWh, kVAh), AC Crest Factor, AC Power Factor, Waveform Capture							
Input per φ @ 380V	9A	17A	25A	49A	73A	97A	144A	192A
Input per φ @ 400V	9A	17A	24A	47A	69A	92A	137A	183A
Input per φ @ 480V	8A	14A	20A	39A	58A	77A	114A	152A



**Input rating refers only to the amount of power drawn or returned during operation. See the installation section for breaker and facility wiring recommendations.**



## 2.6 9410-Series Specific Specifications

### 2.6.1 9410 Programmable Features

9410 Regenerative Grid Simulator Models								
Model	9410-4	9410-8	9410-12	9410-24	9410-36	9410-48	9410-72	9410-96
Frequency	30 – 100Hz							
Accuracy	0.1% setting							
Resolution	0.01Hz							
AC Voltage Ranges	175, 350V <sub>rms</sub> (Split Phase Operation up to 250V <sub>rms</sub> L-L)							
Accuracy	0.2% setting + 0.2% range							
Resolution	0.005% range							
Voltage Distortion	< 1% @ 50/60Hz (full power into resistive load @ 480V <sub>rms</sub> L-L)							
Wave-shape Control	Sine, n-Step Sine, Triangle, Clipped-Sine, Arbitrary (user-defined)							
Phase Angle Control	0° to 359° / 1° resolution							
DC Voltage Ranges	+200, +400V <sub>dc</sub>							
Accuracy	0.2% setting + 0.2% range							
Resolution	0.005% range							
Voltage Noise	< 800mV <sub>rms</sub>							
Safety	Separate programmable values and trip-times for voltage, current, power and direction of power flow							

### 2.6.2 9410 Operating Mode

9410 Regenerative Grid Simulator Models								
Model	9410-4	9410-8	9410-12	9410-24	9410-36	9410-48	9410-72	9410-96
Control Mode	Voltage & Frequency							
Supported Load PF	-1 (unity-sink) to 1 (unity-source)							
Power Flow	AC and DC channels are always Bi-Directional							

## 2.7 9420-Series Specific Specification

### 2.7.1 9420 Programmable Features

9420 AC Source Models								
Model	9420-4	9420-8	9420-12	9420-24	9420-36	9420-48	9420-72	9420-96
Frequency	30 – 880Hz							
Accuracy	0.1% setting							
Resolution	0.01Hz							
AC Voltage Ranges	175, 350V <sub>rms</sub> (Split Phase Operation up to 250V <sub>rms</sub> L-L)							
Accuracy	0.2% setting + 0.2% range (< 100 Hz)				0.4% reading + 0.4% range (≥ 100 Hz)			
Resolution	0.005% range							
Voltage Distortion	< 1% @ 50/60Hz (full power into resistive load @ 480V <sub>rms</sub> L-L)							
Wave-shape Control	Sine, n-Step Sine, Triangle, Clipped-Sine, Arbitrary (user-defined)							
Phase Angle Control	0° to 359° / 1° resolution							
DC Voltage Ranges	+200, +400V <sub>dc</sub>							
Accuracy	0.2% setting + 0.2% range							
Resolution	0.005% range							
Voltage Noise	< 800mV <sub>rms</sub>							
Current Ranges (per ch) <sup>1</sup>	6A, 30A/ch	6A, 30A/ch	6A, 30A/ch	12A, 60A/ch	18A, 90A/ch	24A, 120A/ch	36A, 180A/ch	48A, 200A/ch
Accuracy	0.4% setting + 0.4% range (DC & < 100 Hz)				0.8% reading + 0.8% range (≥ 100 Hz)			
Resolution	0.005% range							
True Power (per ch) <sup>1</sup>	4kW/ch	4kW/ch	4kW/ch	8kW/ch	12kW/ch	16kW/ch	24kW/ch	32kW/ch
Apparent Power (per ch) <sup>1</sup>	10.5kVA/ch	10.5kVA/ch	10.5kVA/ch	21kVA/ch	30.5kVA/ch	42kVA/ch	63kVA/ch	84kVA/ch
Accuracy	0.4% setting + 0.4% range (DC & < 100 Hz)				0.8% reading + 0.8% range (≥ 100 Hz)			
Resolution	0.005% range							
Safety	Separate programmable values and trip-times for voltage, current, power for energy in Source to UUT direction							

<sup>1</sup> In single phase mode, multiple channels may be used to increase current / power.

These ranges therefore are multiplied by the number of parallel channels used in single phase mode.

### 2.7.2 9420 Low Current Measurement Range

The 9420 includes a low current measurement range for measuring standby, no-load, and similar low current draw from the UUT.

9420 AC Source Models							
Model	9420-8	9420-12	9420-24	9420-36	9420-48	9420-72	9420-96
Current Ranges (per ch) <sup>1</sup>	0.1 / 1.0A	0.1 / 1.0A	0.2 / 2.0A	0.3 / 3.0A	0.4 / 4.0A	0.6 / 6.0A	0.8 / 8.0A
Accuracy (<= 100Hz)	1.0% high range 2.0% low range						
Resolution	0.005% range						
Power Range	V range * I range						
Accuracy (<= 100Hz)	1.0% high range 2.0% low range						
Resolution	0.005% range						

<sup>1</sup> In single phase mode, multiple channels may be used to increase current / power.  
These ranges therefore are multiplied by the number of parallel channels used in single phase mode.

### 2.7.3 9420 Operating Mode

9420 AC Source Models							
Model	9420-8	9420-12	9420-24	9420-36	9420-48	9420-72	9420-96
Control Mode	Voltage & Frequency						
Supported Load PF	0 (inductive / capacitive) to 1 (unity-source)						
Power Flow	Source Only (9420 to UUT) for AC / DC May be enabled for Bi-Directional operation						

## 2.8 System Size (All Models)

Systems up to 12kW are provided as rack mountable modules. Systems between 12kW and 84kW may be expanded up to a maximum of 96kW by ordering and installing auxiliary modules.

Systems larger than 12kW are provided in a cabinet with all of the input and output connections pre-wired thereby providing a single connection point for each.

**BOLD** – Standard Models

Non-standard models are available with longer lead times.

19" Rack Mountable Module (19" x 24" x 15¾")			
Model	Maximum Power	Height	Channel Count
9410-04	4kW / 10.5 kVA	15¾" (9U)	1 Channel
9410-08 9420-08	8kW / 21 kVA	15¾" (9U)	2 Channels
<b>9410-12</b> <b>9420-12</b>	<b>12kW / 31.5kVA</b>	15¾" (9U)	3 Channels

Single Cabinet (28" x 30" x H)			
Model	Maximum Power	Height	Channel Count
9410-24 9420-24	24kW / 63kVA	43" Cabinet	3 Channels
9410-36 9420-36	36kW / 94.5kVA	78" Cabinet	
9410-48 9420-48	48kW / 126kVA		

2-Bay Cabinet (46" x 30" x H)			
Model	Maximum Power	Height	Channel Count
9410-60 9420-60	60kW / 157.5kVA	78" Cabinet	3 Channels
<b>9410-72</b> <b>9420-72</b>	<b>72kW / 189kVA</b>		
9410-84 9420-84	84kW / 220.5kVA		
<b>9410-96</b> <b>9420-96</b>	<b>96kW / 252kVA</b>		

### 3. INSTALLATION

---

#### 3.1 Unpacking the 9410 or 9420 System

Prior to shipment, The 9410 or 9420 System was tested, calibrated, inspected and found to be free of mechanical or electrical defects. Upon unpacking, inspect visible damage or tripped shock watch sensors indicating the unit may have been damaged during transit.

If damage is detected, file a claim with the carrier immediately and notify NH Research Customer Support. Keep all packing materials in case the system needs to be returned.



**Do not proceed with installation if damaged during shipping.**

#### 3.2 Location Mounting and Cooling

This unit is air-cooled and uses fans. The air intake is from the front of the module (or cabinet) and exhausts to the rear of the module (or cabinet).

For all systems, NH Research recommends 24 inches (60cm) of unrestricted air space in front of the unit and 30 inches (76cm) of unrestricted airspace to the rear of the unit.

#### 3.3 Rear of Module or Cabinet

For systems up to 12kW,  
Power and communications  
connections are made on the rear  
of the Module.

For systems larger than 12kW,  
the master module and auxiliary  
modules have been pre-wired for a  
common facility input, UUT  
output, and eStop.





The interlock and sense connection  
are made on the rear of the master  
module located within the cabinet.



##### 3.3.1 Input Cooling

Input cooling air filtration is required if equipment is not in a clean environment.


### 3.3.2 Connecting AC Facility Power

	Connecting the system to a three phase AC line should be made by an electrician or other qualified personnel.
	There is a potential for electrical shock if the system is not properly connected to a safety ground connection.
	NH Research is only able to provide general recommendations. It is the responsibility of the user to ensure that wiring, breaker sizing, and associated power connections meet local ordinances.
	<b>WARNING:</b> Connecting the AC Line input to an AC Line that is unable to absorb energy quickly, (i.e., a “soft” source) may result in an increase in voltage on the line during regeneration. If the voltage rises to the maximum allowed, the NHR equipment will shut down. <b>OTHER EQUIPMENT ON THE SAME LINE MAY BE DAMAGED.</b>

The 9410 and 9420 are powered by a universal input accepting 3-Phase voltages between 380V<sub>L-L</sub> and 480V<sub>L-L</sub>. The connection is 4-wire (3-phase + safety ground) and has no phase rotation dependency. Each module contains a separate 30A breaker protecting itself from internal wiring failures.

For systems up to 12kW,  
three-phase AC power is connected to the terminal block on the rear of the module.

For systems larger than 12kW,  
three-phase AC power is connected to a wiring block in the rear of the cabinet.

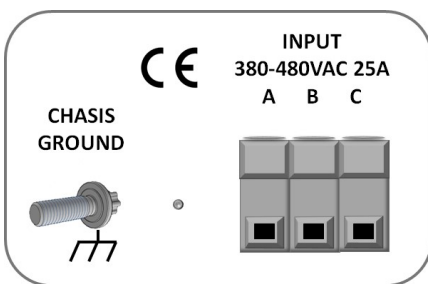

Module Facility Power Connection



Chassis Power Connection

### *Recommended Breaker & Facility Wiring*

---

The recommended wiring is based on 30A facility power per module (counting all master and auxiliaries). The Facility breaker is intended to protect the wiring from the service panel to the unit only. Each module protects itself internally with a separate 30A breaker.



**NH Research can only make general recommendations.  
Please consult local electricians for local wiring ordinances.**



**Breakers and Facility Power should be at least 20% higher than  
the maximum power draw of the unit to prevent trips.**

94xx System	Recommended	
	Panel Breaker	Wire Gauge
9410-4/8/12 9420-8/12	30A	AWG 10
9410-24 9420-24	60A	AWG 6
9410-36 9420-36	90A	AWG 4
9410-48 9420-48	120A	AWG 2
9410-60 9420-60	150A	AWG 1
9410-72 9420-72	180A	1/0
9410-84 9420-84	210A	2/0
9410-96 9420-96	240A	3/0

Note: Additional product variations will be added as they are released to the table above.


**Models 9410/9420-4/8:** Max branch circuit required for 4kW and 8kW devices is **20A**.

**Cabinet Installation:** Units not pre-installed into rack-mount cabinets shall be installed into a rack-mount enclosure during installation.

### 3.3.3 Emergency-OFF Connector Wiring

For 12kW and smaller systems, the user needs jumper pins 1 and 2 of the Emergency-Off connector with either wire or a eStop switch.

For systems larger than 12kW, NH Research provides a pre-wired eStop switch prominently mounted on the cabinet.

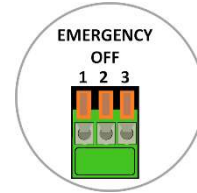


In either case, when pins 1 and 2 are disconnected (open), the 9410 or 9420 responds by opening the input relays, the output relays, stops all power semi-conductor switching, generates an Emergency Off error, and remains in this state until the pins are reconnected and is followed by a power cycle or a hardware reset to clear the error.

### 3.3.4 Interlock & External Sense Wiring

#### *Interlock*

---

The interlock connection is located to the right of the input connector on the master module. This connection must be shorted for normal operation.

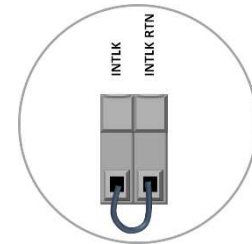

When disconnected (open) during operation, the 9410 or 9420 responds by opening the output relays, stops UUT output semi-conductor switching, and generates an Interlock error.

Unlike emergency off, the interlock connection will allow new operating commands to be accepted once the connection is reestablished.

#### *External Sense*

---

External sense is a required connection located at the output connector. This interface allows the 9410 or 9420 to compensate for voltage drops caused by fixture wiring. The sense leads must be connected at either the UUT or module output connections for proper operation.



**Connecting sense leads at UUT ensures accurate measurements.**




### 3.3.5 UUT Wiring

The UUT Wiring will depend on the operating mode. The outputs are per channel (OUTPUT 1, 2, 3 with associated returns V OUT & V RTN).

The outputs are isolated and generally need to the neutrals to be connected for proper referencing. See examples in appendix section for more information on wiring the output.

A customer supplied external transformer may be used for higher (or lower) Line-Neutral test capability. In this case, the sense leads as well as UUT power connections must be connected to the primary side of the transformer.

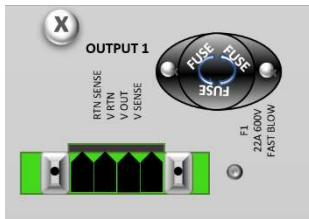

#### OUTPUT MATING CONNECTOR:

NH Research	P/N: 6355968
Phoenix Contact	P/N: 1777859

Output Connector for Channel 1




**Contact NH Research to discuss your application and for additional information before connecting an external transformer.**

### 3.3.6 Terminator Installation

For 12kW and smaller systems, the terminator from the accessory kit must be installed on the control output connection. Only one terminator is required for proper operation.

For systems larger than 12kW, the terminator and paralleling cables are pre-installed.

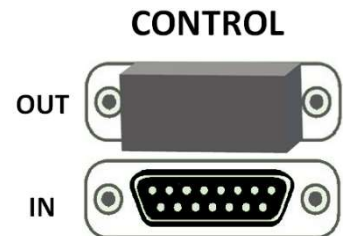


Terminator installed correctly

### In Field Expansion

The paralleling interface is used to add an auxiliary module to a system master in order to expand current capabilities.

Only NH Research supplied cables should be used.

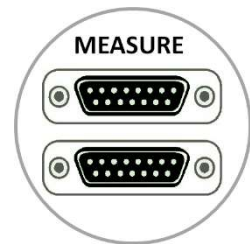

#### Mating Cable Type:

Control P	<b>CONTROL</b>	NHR	P/N: 12-0977-00
Measure I		NHR	P/N: 12-0978-00
Terminator		NHR	P/N: 12-0976-00



**Contact NH Research for more information adding an auxiliary module.**


### 3.3.7 Dip-Switches

#### *Options Dip Switches*

---

For all systems in normal operation, the options dip switches should always be in the OFF position (switched to the right). These switches should not be changed unless specifically instructed to do so by either NH Research customer support or by a programming update procedure (i.e. firmware update).

The only exception to this statement is Switch #1 which may be used to force the IP address of the unit to 192.168.0.2 for configuration purposes.

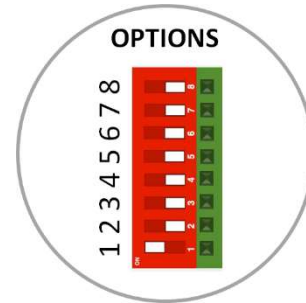

Switch 1 shown as ON




**See Configuring the IP address section for more information about how to use Switch #1.**

#### *Aux Sys Address Dip-Switches*

---

For 12kW and smaller systems, the Aux Sys Address dip switches should always be in the OFF position (switched down) and should not be changed unless specifically instructed to do so by either NH Research customer support or by a programming update procedure.

For systems larger than 12kW, the Aux Sys Address dip switches are used to properly address auxiliary modules and have been pre-set. These switches should not be changed unless specifically instructed to do so by NH Research customer support or by a programming update procedure.

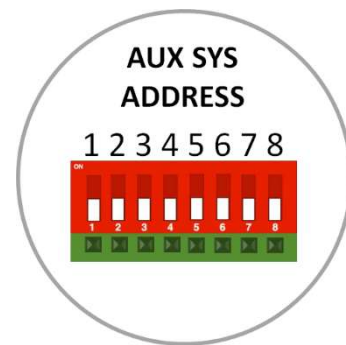

**Contact NH Research before beginning a field installation of an Auxiliary module.**

### 3.3.8 Analog V/I Monitor

For all systems, the analog Voltage (V) and Current (I) monitor is located on the rear of the master module.


This is an uncalibrated output which mirrors the internal Analog-to-digital (ADC) raw readings.

The output may have considerable error (< 5%) and should be used for indication only.

Current sign for V/I Monitor:

Current will be indicated as positive when the instantaneous direction is from the 9410 or 9420 to the UUT.

Note: In all operating modes, these output mirrors per channel voltage and current internal readings. Therefore when channels are operated in parallel, the individual channel current readings must be externally summed.

Pin #	Signal	Connector (DB-9)
1	GND	
2	V1 <sub>(V1-V1RTN)</sub>	
3	V2 <sub>(V2-V2RTN)</sub>	
4	V3 <sub>(V3-V3RTN)</sub>	
5	N/C	
6	I1	
7	I2	
8	I3	
9	GND	

I/V MON

Voltage	Scaling Factor
Low Range	0.047
High Range	0.0235

Current	Scaling Factor
Low Range	0.4945
High Range	0.0989

$$Actual\ Value = \frac{Monitor_{(VOLT)}}{Scale\ Factor}$$



**The Analog V/I monitor is uncalibrated.  
This interface should be used for indication only.**


### 3.3.9 LAN Connection

The 9410 or 9420 use LAN as the primary communication from either the touch controller or an external controller such as a PC, PLC, or a real-time system. This connection supports auto-MDIX allowing either a straight or crossover cable to be used.

Changing the pre-configured IP address will require a PC or other web-browser capable computer. The system, internal touch controller, and any external controller must have a unique IP address in the same domain (192.168.0.xxx). The system is labeled with the IP addresses for the internal touch controller and the system.

For 12kW and smaller systems, the LAN connection is located at the rear of the module.

For systems larger than 12kW, the LAN connection is located at the rear of the cabinet.

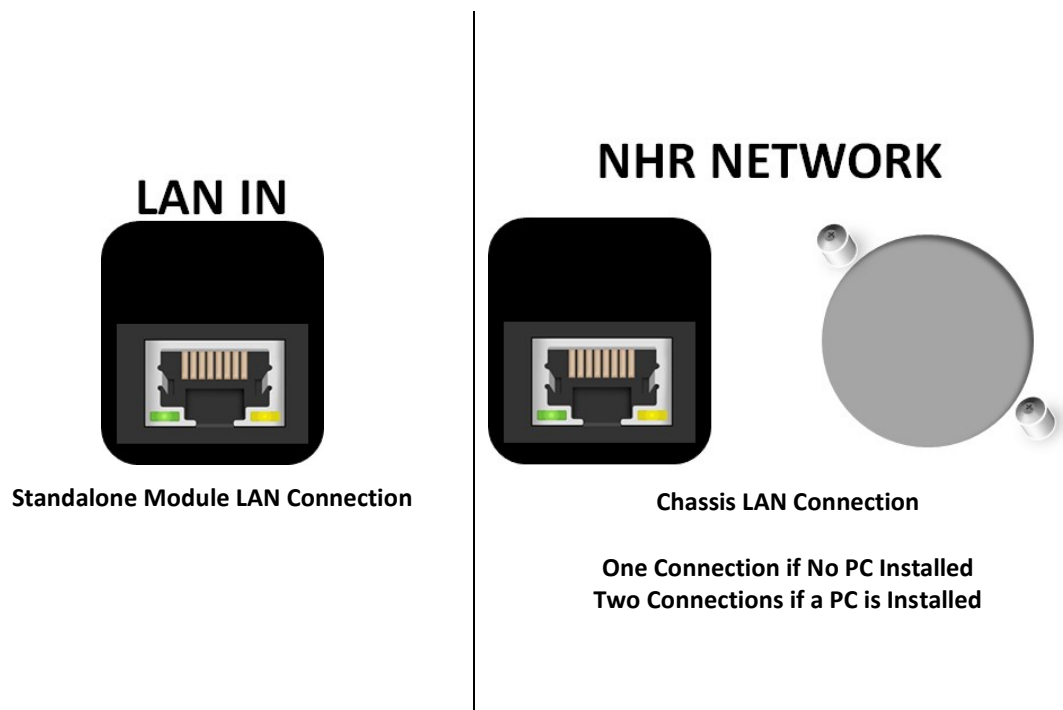


A standard ethernet cable (Belkin A3L791-14 or equivalent) or a crossover ethernet cable may be used.



Systems larger than 12kW may optionally include a blade controller.

When present, a PC LAN connection is also provided which connects only to the blade controller and has no control to the system itself.

PC LAN

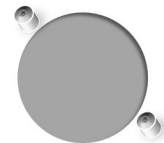

### 3.4 Turn On Checklist

#### 3.4.1 Prior to Applying External Power to the Unit

- Verify external door is closed (if equipped).
- Verify the front/rear have enough spacing for air cooling.
- Verify e-Stop is unlocked and in ready position (if equipped)
- Verify Interlock and sense leads are connected.
- Verify all system breakers are in the “Off” Position (switched to the right).
- Verify all power and communications cable connections are tight.
- Verify terminator is installed.

#### 3.4.2 Powering Up the System

- Turn on facility 3-phase power.
- Switch all auxiliary breakers to the “On” position (switched to the left).
- Switch on the master breaker to the “On” position (module with the touch panel).
- The Touch Panel will automatically start into the monitoring application.
- Ensure Grid-On & LAN LEDs are lit before attempting PC communications.

#### 3.4.3 Powering Down the System

- Turn off the outputs.
- Stop and close any external control software (if used).
- Turn off the master module’s circuit breaker.
- Turn off the remaining auxiliary module(s) circuit breaker(s).
- Turn off external power (optional).



**Never assume that the output terminals are safe to touch even though the system breakers are off.**

**Always verify that all potential sources of power are turned off and connections are carried out under 0V conditions.**



**The modules use internal contactors to isolate themselves from Facility Power when a fault occurs or when the system is powered off.**

### 3.5 Configuring the IP Address

The 9410 and 9420 Series uses standard 100BaseT Ethernet for external control.

There are a large number of potential networking configuration options which should be discussed with your local information technology (IT) department.

NH Research generally recommends either static IP addressing or DHCP where the MAC addresses are assigned to a fixed address to prevent IP addressing conflicts.

Each system is shipped with a label containing the MAC addresses and IP addresses contained in the system. These may be changed by the user.

Each 9410 and 9420 system has an IP address for the master module as well as the touch panel (if equipped). Both of these addresses as well as any controlling PC will need to be in the same broadcast domain. All addresses must be unique.



**If we assume the touch panel was configured with an IP address of 192.168.0.1 and the master module was configured with the IP address of 192.168.0.2. Any additional PC's or modules should have a unique address in the range of 192.168.0.3 to 192.168.0.254.**



**NH Research labels the IP address for the touch controller and 9410 or 9420 on the rear of the system.**


### 3.5.1 Configuring the Master Modules IP Address

#### *If the Module IP address is unknown*

Turn off the master module's breaker and switch the options switch (#1) to the ON position then turn the module's breaker back on. This will force the module to use a fixed IP address of 192.168.0.2. This is a temporary configuration intended to allow the system's IP address to be known for the purposes of configuration. Continue with the known IP addressing setup as follows.


#### *If the Module IP address is known*

Open a web browser and browse to [http://\(IP\\_ADDRESS\)](http://(IP_ADDRESS)) where the IP address is the master modules address (for example <http://192.168.0.246>). This will open the configuration screen as shown.

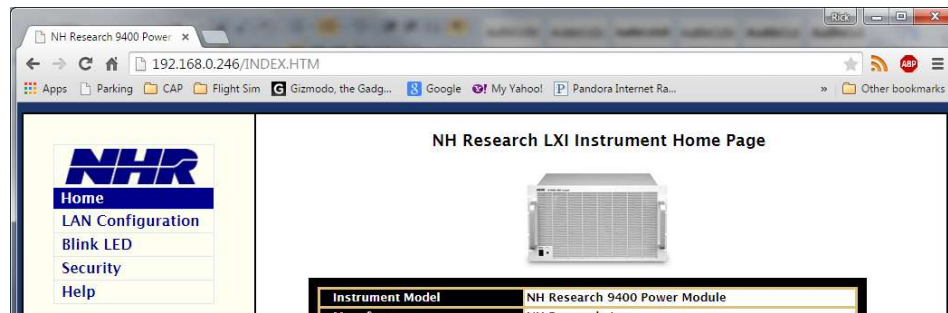

Selecting “Blink LED” in the left menu will cause the module to blink the LAN LED. This may be used to ensure the proper module has been selected before making a change.

Then select LAN Configuration to adjust the LAN configuration.

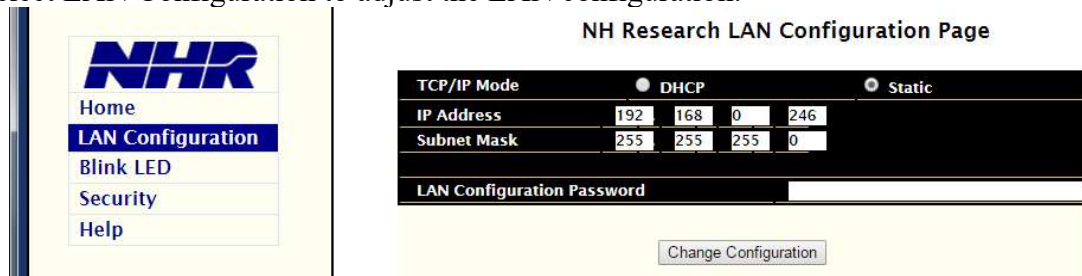

Here a static IP or DHCP configuration may be made. If DHCP is selected, NH Research recommends IT assign the modules MAC address to a static DHCP address for proper operation. Be sure to record the new IP address as it will be required by the touch panel.

The default security password is not set (blank).




If you set the switch on the rear panel to force a 192.168.0.2 address be sure to return this switch to the OFF position before cycling power.


Power Cycle the module and continue with the touch panel configuration.

### 3.5.2 Configure the Touch Controller Software


The following screen may appear after the module reboots.  
Press OK and continue with the following steps to configure the Touch Controller.

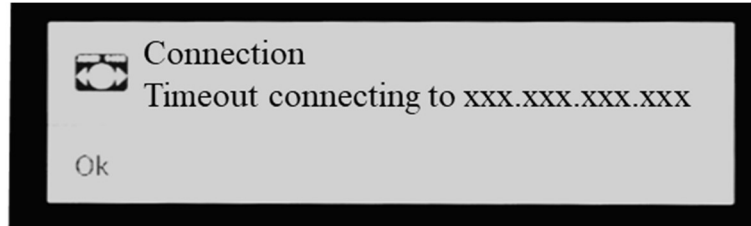

First, click the "Menu" button located at the upper right left of the touch panel. This will open the additional menu options.

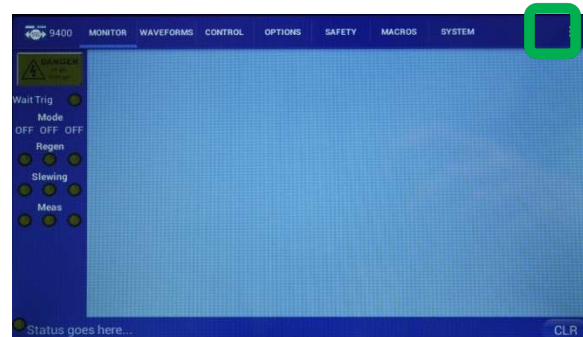


Select "IP Address"

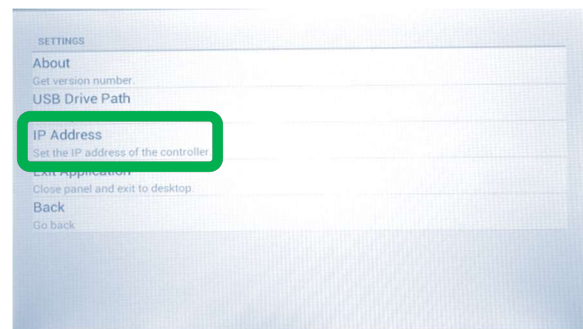

Provide the IP Address set in section 3.9.2.  
Then press OK.


Note: This is not the touch panel's address;  
it informs the touch screen where to look  
for the system on the network.

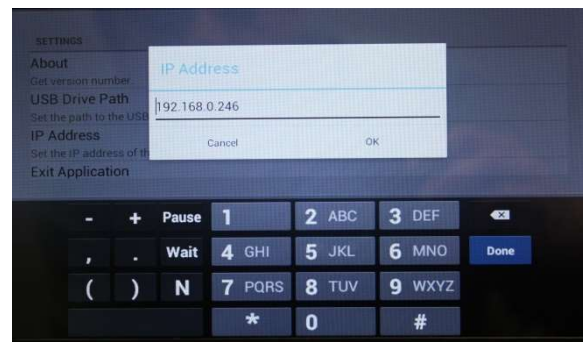




### *Configuring Touch Controller Software Continued*

Select "BACK"

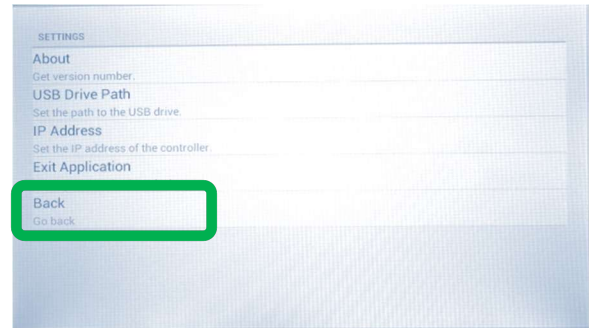

If the module has the same domain (first three numbers of the IP address), the Touch Controller will now load and is ready for use. (No further steps required).

If the domain is different or an IP address conflict is detected, the touch controller will need to be assigned a unique IP address in the same domain.  
Press OK and follow the steps in Section 3.5.3 below.

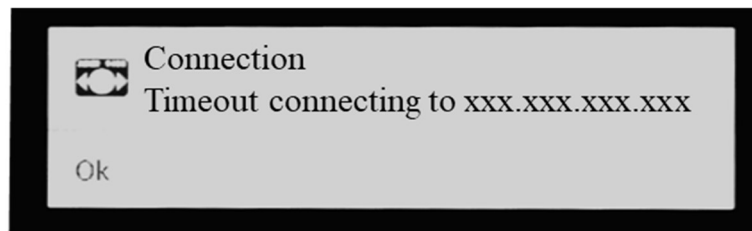


### 3.5.3 Configure the Touch Controller's IP Address


The following screen may appear after the module reboots.

Press OK and continue with the following steps to configure the Touch Controller.

Click the "Menu" button located at the upper right left of the touch panel.  
This will open the additional menu options.

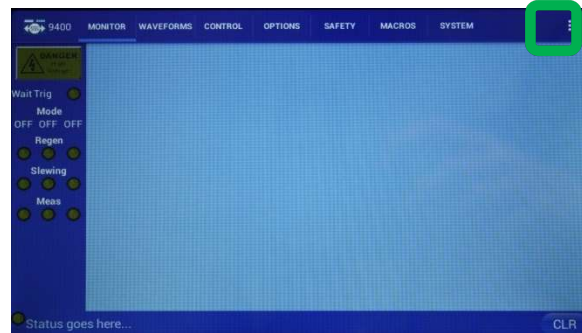

Select "Exit Application"

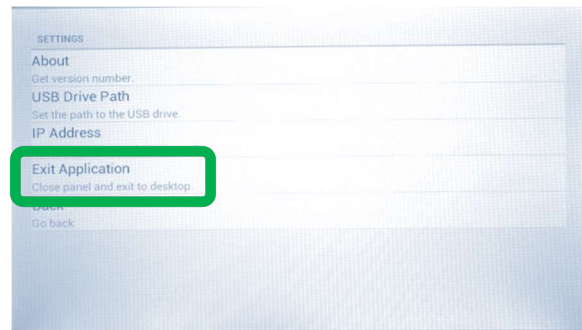



Then Select The Menu Button



This is found in the Upper Left.



Then Select Settings  
from the list of options.

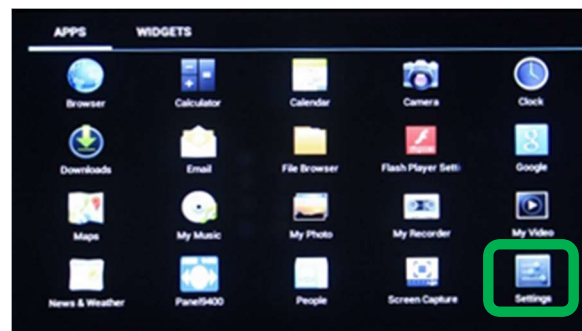


*Configuring Touch Controller's IP Address Continued*

The controller's ethernet IP address settings are located under Ethernet Tab.


Be sure to assign a unique IP address that will be used by the touch panel.

Consult your IT administrator.

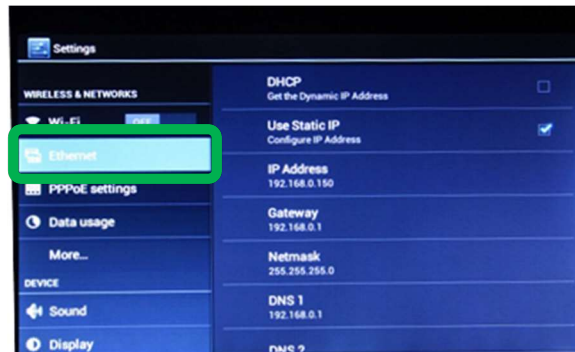

Power Cycle the master module:  
On the module with the touch controller,  
Turn off the breaker (switched to the right). Wait 10 seconds then turn on the same breaker (Switched to the left).

The System will reboot.

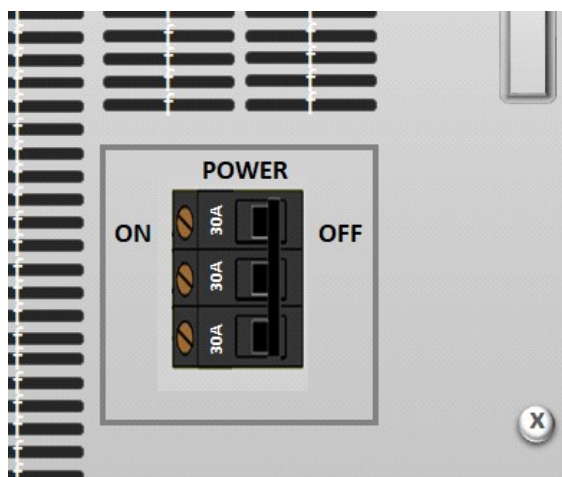

**Never assume that the output terminals are safe to touch even though the system breakers are off.**

**Always verify that all potential sources of power are turned off and connections are carried out under 0V conditions.**

### 3.5.4 Configuring an External Application

External applications will use the Master's IP address and port number 5025.

The resource ID string used for LabVIEW, VISA, and NH Research tools is  
TCPIP::IPADDRESS::5025::SOCKET

Where the IP address is the one configured in section 3.5.1.

**This page intentionally left blank.**

## 4. SYSTEM FEATURES


### 4.1 Theory of Operation

The 9410 and 9420 internally utilizes multiple bi-directional power conversion stages to generate the AC or DC **voltage output** depending on the hardware operating mode. The term output refers only the UUT connection and **not** power flow direction.

When sourcing true power, the power for the **voltage output** is initially drawn from the facility power connection through a bi-directional PFC/Inverter to generate an internal DC rail. This internal rail is then converted to an isolated & calibrated DC voltage by a second DC/DC converter. Finally, this calibrated DC voltage is converted to either an AC or DC **voltage output** depending on the hardware operating mode selected.

When sinking true power, the **voltage output** is maintained and current is being externally supplied from an AC or DC current source. In this case, the output converter supplies the internal bulk DC voltage rail which is then buffered, precisely matched to the facility, and returned to the facility with near-unity power factor. This operating mode applies to all models except for the 9420 with an AC output.

Reactive power (all AC mode\*s) operates out of phase with respect to true power and is internally recirculated without requiring any additional facility power transfers.

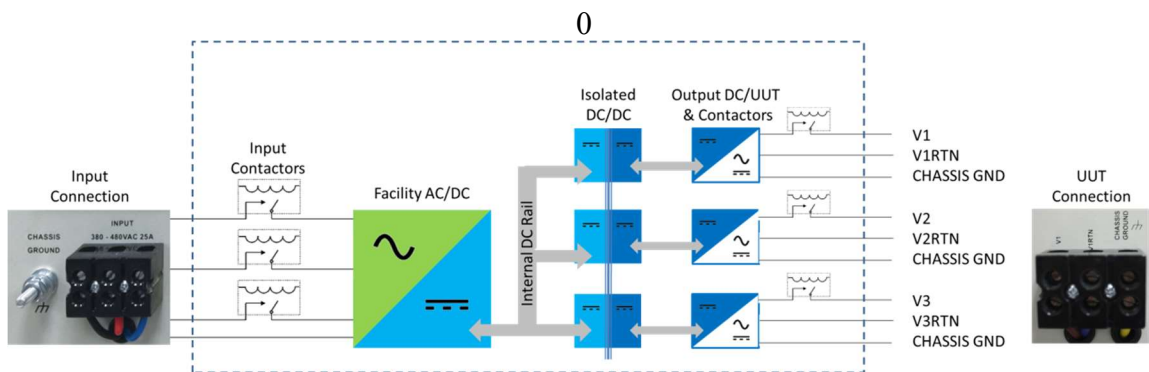


9410 & 9420 Simplified Internal Block Diagram

#### 4.1.1 Multi-Channel Design

As described in the System Features section above, the 9410 & 9420 Series provides up to three (3) **voltage control** channels which are configured through software in order to provide any combination of AC and DC test channels.

Refer to the following sections for more information about model & mode options.

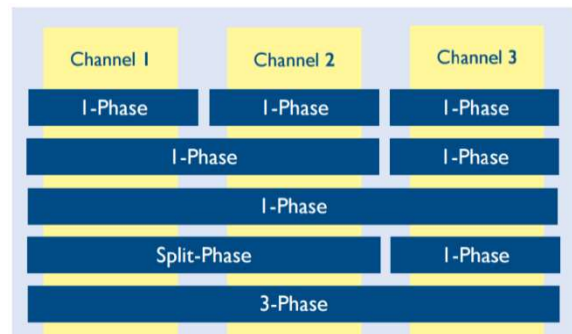

### 4.1.2 Isolated Outputs

Each output channel of the 9410 or 9420 is isolated from the input (facility power), chassis, communications interfaces, and the other output channels. This permits the system to be used with multiple separate ground references and maximizes the configuration flexibility for the system.


### 4.1.3 4-Quadrant AC Operation

When sourcing, the 9410 and 9420 operate similar to most switching AC sources by maintaining a voltage wave-shape, at a specified  $AC_{RMS}$  value, and frequency.

4-Quadrant operation allows instantaneous power to flow in either direction and does NOT imply the direction of true power flows.

True power flows from the system to the UUT when the phase angle between the RMS voltage and current is between  $-90^\circ$  and  $+90^\circ$ . This is supported by both the 9410 & 9420 without any specification derating up to the maximum rated true power.


The 9410 grid simulator is bi-directional and extends this operating range to any relative phase angle from  $-180^\circ$  to  $+180^\circ$ . When less than  $-90^\circ$  or greater than  $+90^\circ$ , the power factor is negative and true power is flowing from the UUT into the system. Common devices which create negative power flow include Vehicle-to-Grid (V2G) and grid tied solar inverters.

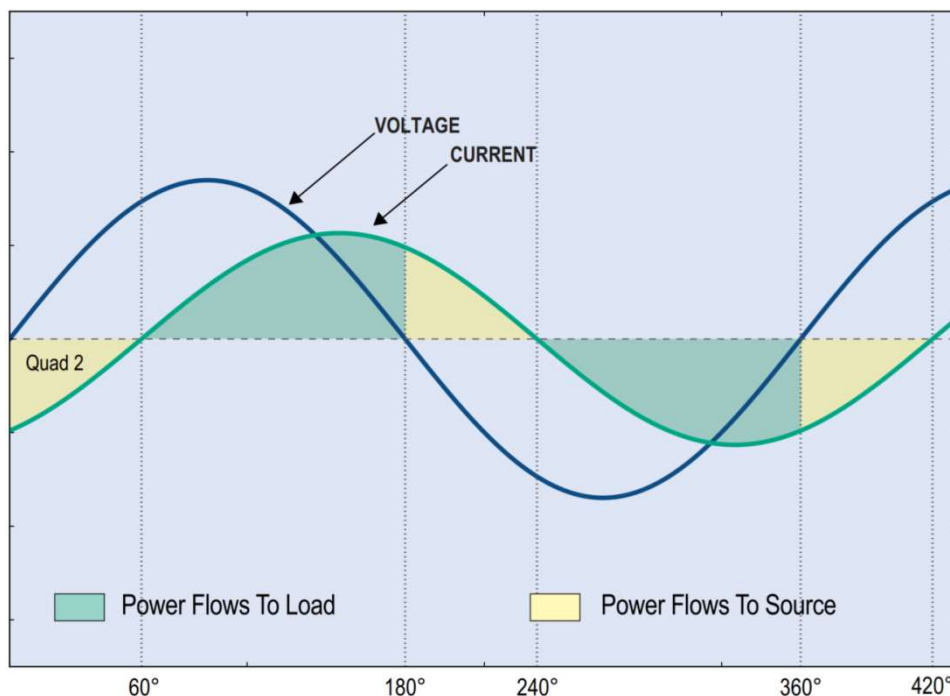

#### 4.1.4 Constant Power Envelope with HiVAR


The 9410 and 9420 support full-time voltage and current ratings up to the true power rating of the system along a constant power curve. This allows the system to operate at any combination of voltage and current without requiring range changes and provides a wider operating envelope especially when compared with traditional AC sources.

The constant power envelope eliminates the need to switch off the source when changing ranges. Range changes are separate and may be switched during operation without affecting the AC or DC output voltage. By comparison, traditional AC sources must be switched off to change from a low-voltage/high-current range and a high-voltage/low-current range.

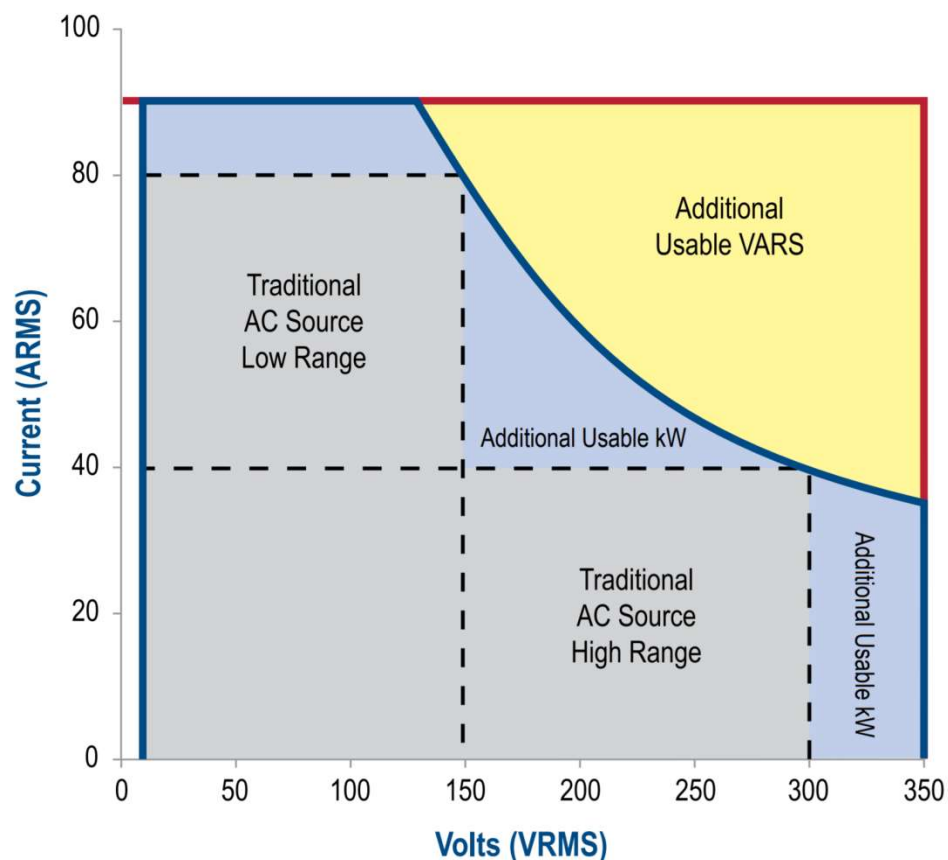

Comparing a Traditional 12kW source with 9420 operating as 12kW 1- $\phi$

Full time current also opens an additional reactive power region which is not commonly found in VA-Only rated sources. Traditional sources derate the true power available partly based on the power factor of the load.

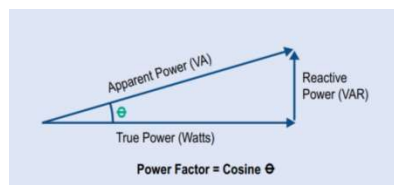

#### 4.1.5 All Digital Control and Firmware Upgradable

The output control is performed by upgradable, onboard DSP devices for fast measurement and command response times. All the micro code for the DSPs and the communication microcontroller is stored in FLASH memory so that firmware upgrades can be performed in the field by downloading over the control interface.

#### 4.1.6 Field Expandable Power

All 9410 & 9420 Series Models may be expanded in the field by adding an auxiliary module. Up to seven (7) auxiliaries may be added to a single master module each of which increase the current and power of each channel by an additional 30A<sub>RMS</sub> and 4kW / 10.5kW.

For example a 9410-12 may be expanded to a 9410-24 by adding a 9410-auxiliary module. In this case, the system would then provide three (3) channels each providing 350V<sub>ACRMS L-N</sub> up to 60A, 8kW/21kVA.



**Contact your local NH Research sales representative for more information.**

#### 4.1.7 Reduced Channel Models

The 9410 & 9420 Series Models may be ordered with a reduced channel count providing only one (1) or two (2) channels. For example, a 9410-4 includes one channel whereas a 9410-8 or 9420-8 includes 2 channels. These product versions still provide the voltage control with the same power and current capability of 350V<sub>ACRMS L-N</sub> up to 30A, 4kW/10.5kVA per channel. A single channel system may be used for one (1) AC or DC channel whereas a two channel system may be used as a single AC output, single DC output, two separate outputs each being either AC or DC, or in Split-Phase in which the two AC channels have a phase angle relationship.



NH Research offers Auxiliary modules for 12kW and higher systems. Reduced channel count systems may not be field expanded.



## 4.1.8 Safety Features

### *Operator Protection Features*

---

- **Interlock Connector:** Each 9410 and 9420 Master Module provides an interlock input. If the interlock signal loop becomes open, the output relay will open immediately and the system will give the interlock error and perform the normal output off sequence.
- **Emergency Off Connector:** There is an Emergency Off connector on all 9410 and 9420 modules. For systems up to 12kW, Pin 1 and 2 of the connector has to be shorted to turn on the unit. For larger systems (>12) NHR supplies a cabinet with an eStop button prominently mounted to the cabinet and the connections are prewired.

### *UUT Protection Features*

---

There are 6 types of safety features available in each power module:

- Protection from an AC grid voltage or frequency excursion beyond preset limits.
- Programmable limits to the output current, voltage and power.
- Programmable safety trip to the output current, voltage and power.
- Protection from a PC or touch-panel failure.
- Ability to shut down based on an outside fault.

## 4.2 Flexible AC & DC Operating Modes

The 9410 and 9420 provide flexible AC operating modes including multi-phase operation, multiple separate AC phases, separate DC phases or combining multiple channels for higher power AC or DC operation. See the appendix sections for “Hardware Modes” for configurations directly supported by a 9410 or 9420 system.

### 4.2.1 9410 & 9420 Specific Programmable Limits

The 9410 & 9420 Series offer differing programmable limits based on the series selected.

Feature	9410 Series Grid-Simulator		9420 Series ATE AC Source	
Control Mode	Voltage & Frequency		Voltage & Frequency	
Output Type	AC	DC	AC	DC
Voltage	Up to 350V <sub>AC</sub>	Up to 400V <sub>DC</sub>	Up to 350V <sub>AC</sub>	Up to 400V <sub>DC</sub>
Frequency	30-100Hz	DC	30-880Hz	DC
Power Sourcing (PF 0 to 1)	✓	✓	✓	✓
Power Sinking (PF -1 to 0)	✓	-	-	-
Bi Directional DC	✓	✓	-	Enable in SW
Current Limit	-	✓	✓	✓
Power Limit (kW)	-	✓	✓	✓
Low Current Meas	-		✓	

### 4.2.2 Single Phase & DC Outputs - Per Channel Relationships

The 9410 and 9420 may have the outputs configured to operate as either single phase AC or DC. Additionally these modes support paralleling multiple channels to create a single larger AC or DC channels. For example, a 9420-12 operating as a 12kW source would use three (3) channels. These settings also apply to per-phase settings for multi-phase outputs in which case the channel count is always equal to 1.

Set & Measurements Relationships DC and AC (1- $\phi$ and per- $\phi$ )			
	Set Points		Measurements
	Set Value	Get value	Get Value
Voltage ( $V_{DC} / V_{RMS\ L-N}$ )	$SET$	$SET_{(CH1)}$	$MEAS_{(CH1)}$
Current ( $A_{DC} / A_{RMS\ L-N}$ ) <sup>1</sup>	$\frac{SET}{\#_{CH}}$	$\sum SET_{(CHn)}$	$\sum MEAS_{(CHn)}$
Power (kW) <sup>1</sup>			
Resistance ( $\Omega$ )	N/A	N/A	$\frac{V_{meas(CH1)}}{\sum I_{meas(CHn)}}$
Apparent Power (kVA)	N/A	N/A	$V_{meas} \cdot I_{meas}$
Crest Factor	N/A	N/A	$\frac{\sum I_{Peak(CHn)}}{\sum I_{meas(CHn)}}$
Power Factor	N/A	N/A	$\frac{Power_{meas}}{Apparent\ Power_{meas}}$
Voltage-Peak <sup>2</sup>	Same as VSET	Programmed Value	N/A
Current-Peak <sup>2</sup>	Same as ISET		

<sup>1</sup> AC set current and power limits apply to 9420 only.

<sup>2</sup> Instantaneous set values used in safety settings as AC Line-Neutral value or DC.

Slew Rates (DC or AC Single Phase Only)		
	Set <sub>ch</sub> per channel	Get value
Voltage (V/s)	$SLEW$	$SLEW_{(CH1)}$
Current (A/s) <sup>1</sup>	$\frac{1}{\#_{CH}} \cdot SLEW$	$\#_{CH} \cdot SLEW_{(CH1)}$
Power (W/s) <sup>1</sup>		
Frequency (Hz/s)	$SLEW$	$SLEW$

<sup>1</sup> AC set current and power slew applies to 9420 only.

Note: Slew rates are set on a per instrument level.  
For multi-phase outputs, refer to the following section.

### 4.2.3 Multi-Phase AC Outputs - Per Channel Relationships

The 9410 and 9420 may have the outputs configured to operate as either three-phase or split-phase output with an additional single phase AC or DC channel. This mode makes it possible to set or measure the output of the multiple phases in a single step.

Multi-Phase Set & Measurements Relationships			
	Set Points		Measurements
	Set Value (Per $\phi$ )	Get value	Get Value
Voltage 2- $\phi$ ( $V_{RMS\ L-L}$ )	$\frac{1}{2} \cdot SET$	$\sum SET_{\phi}$	$\sum MEAS_{\phi}$
Voltage 3- $\phi$ ( $V_{RMS\ L-L}$ )	$\frac{1}{\sqrt{3}} \cdot SET$	$\sqrt{3} \cdot \frac{\sum SET_{(\phi)}}{3}$	$\sqrt{3} \cdot \frac{\sum MEAS_{(\phi)}}{3}$
Current ( $A_{RMS\ L-N}$ ) <sup>1</sup>	$SET$	$\frac{\sum SET_{(\phi)}}{\#_{\phi}}$	$\frac{\sum I_{meas(\phi)}}{\#_{\phi}}$
Power (kW) <sup>1</sup>	$\frac{1}{\#_{\phi}} \cdot SET$	$\sum SET_{(\phi)}$	$\sum P_{meas(\phi)}$
Apparent Power (kVA)	N/A	N/A	$\sum (V_{meas(\phi)} \cdot I_{meas(\phi)})$
Crest Factor	N/A	N/A	$MAX \left( \frac{I_{PEAK(\phi)}}{I_{RMS(\phi)}} \right)$
Power Factor	N/A	N/A	$\frac{Power_{meas}}{Apparent\ Power_{meas}}$
Voltage-Peak 2- $\phi$ <sup>2</sup> Voltage-Peak 3- $\phi$ <sup>2</sup>	Same as VSET	Programmed Value	N/A
Current-Peak <sup>2</sup>	Same as ISET	Programmed Value	N/A

<sup>1</sup> AC set current or power limit applies to 9420 only or as a safety limit setting.

<sup>2</sup> Instantaneous set value used in safety settings as AC Line-Neutral value or DC.

Slew Rates (Multi-Phase)		
	Slew (Per $\phi$ )	Get value
Voltage 2- $\phi$ ( $V_{RMS\ L-L/s}$ )	$\frac{1}{2} \cdot SLEW$	$2 \cdot SLEW_{(CH1)}$
Voltage 3- $\phi$ ( $V_{RMS\ L-L/s}$ )	$\frac{1}{\sqrt{3}} \cdot SLEW$	$\sqrt{3} \cdot SLEW_{(CH1)}$
Current (A/s) <sup>1</sup>	$SLEW$	$SLEW_{(CH1)}$
Power (W/s or VA/s) <sup>1</sup>	$\frac{\sum SLEW_{(\phi)}}{\#_{\phi}}$	$\#_{\phi} \cdot SLEW_{(CH1)}$
Frequency (Hz/s)	$SLEW$	$SLEW$

<sup>1</sup> AC set current and power slew apply only to 9420 models.

### 4.3 Front Panel Indicators and Controls

The following described controls are found on the 9410 or 9420 Master Module only.



9410 Grid Simulator Shown

#### Touch Panel Interface

This interface provides direct manual control of the system without requiring an external PC or control device. In addition, it serves as a monitor for voltage, current, power, frequency, and other measurements while the system is under local control.

For additional details, refer to the using the touch panel control section.



## Output Status Indication

The three indicators in the upper left provide a visual indication:

- Enable – Output Contactors are connected (closed).  
Enable does not imply that voltage is being produced or indicate direction of power flow.
- Source – All channel powers are summed & Net Power is flowing from the 9410 or 9420 to the UUT.
- Sink – All channel powers are summed & Net Power is flowing from the UUT to the 9410 or 9420.



**Always assume electrical connections may have voltage especially when the Enabled light is illuminated.**



The source & sink lights may NOT illuminate when the arithmetic sum of all channel power is near zero. For example, if two channels are sourcing 2kW each and another is sinking 4kW the sum is near zero and neither light will be illuminated even though significant power is flowing on a per channel basis.

Never use Source & Sink as a safety indication.

## System Status Indicators

The six indicators in the upper left provide a visual indication:

- DSP – Status indication for the internal processor.
- Grid On – Illuminates when internal power reaches normal operational levels.
- Multi $\phi$  – Indicates multiple phases are active.
- Single $\phi$  – Indicates a single phase is active.
- Status – Status indication for the communications processor.
- LAN – Illuminated when good network connection is detected.



LED Pattern	DSP Meaning	Status Meaning
Blinking Green	Normal Operation	Normal Operation
Blinking Yellow	Non-fatal error occurred	System Error
Blinking Red	Not Configured, safety limit, or fatal error occurred	Hardware Error

## Digital IO Interface


This interface uses a wire terminal block with release lever.

All signals are reference to “D RTN”.

All output signals are open collector and provide an internal a 1K pull-up to +5V<sub>dc</sub>.

All output signals may source up to 5mA and sink up 50mA.


- AC PRESENT – Output indicating the presence of V<sub>A</sub> at the output terminals.
- UUT EN – Output indicating the output contactor state.
- Multi $\phi$  – Output indicating the output is operating with multi- $\phi$ s active.
- DOUT – Output available as a general purpose Digital Out.
- DIN – Input available as a general purpose digital input.  
The input voltage should not exceed 12V (5V is recommended).  
May be enabled through software as a rising/falling edge trigger source.
- D RTN – Return signal / reference for all digital IO interfaces.  
This return is isolated from chassis ground up to 100V.

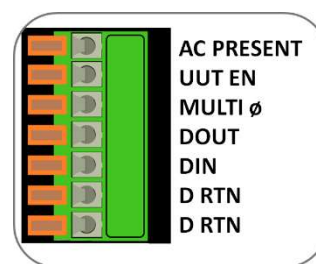

### Trigger In / Out

This interface uses a SMB connector and provides Trigger In and Trigger Out controls. These signals are references to D RTN in the Digital IO Interface section and include a 1k resistor to +5V<sub>dc</sub>.

- Trigger In – Input enabled through software for rising or falling edge generates a trigger which is generally used to advance a Macro. The input voltage should not exceed 12V (5V is recommended).
- Trigger Out – Output enabled through software. Generates a positive pulse for each operating command processed. Generally used to trigger external devices such as an oscilloscope.

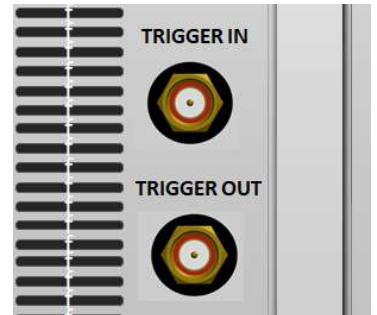

Mating Cable Type:		
Cable Assembly	NHR	P/N: 12-0879-00
Connector Coax Miniature	NHR	P/N: 6000262
Wire Coax RG174/U	NHR	P/N: 8010023

### 4.3.1 Front Panel Air-Intake and Breaker

The following applies to all 9410 and 9420 modules (Both master and auxiliary).

#### Air Intake


The system is cooled with ambient air. Cooling air is drawn from the front of the unit and exhausted out of the rear.



**Never insert tools, metal objects, or allow liquids to be drawn into the air intake slots.**



**NH Research recommends 24 inches (60cm) of unrestricted air space.**

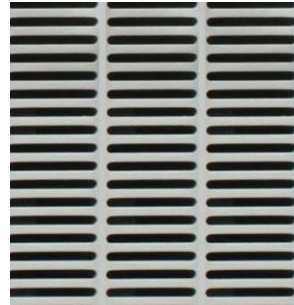


#### Circuit Breaker

Each master & auxiliary module provides a 30A main circuit breaker which is used to protect the internal wiring and power stage against internal failures. See the installation section for recommendations about sizing a breaker to power a 9410 or 9420.



**See the installation section for breaker and facility wiring recommendations.**

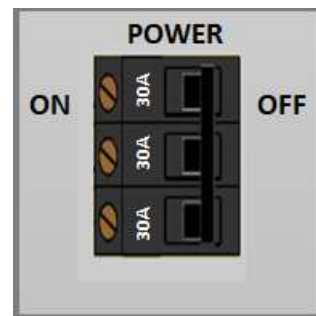




### 4.3.2 Module Rear View

The rear of all module types include: power connections (facility & UUT), an emergency off connection, paralleling address switches, and a paralleling interface connector.

The 9410 or 9420 master module (with a touch screen) includes the remote sense connections (with interlock), communications (LAN), options dip switches, and a voltage/current monitor.

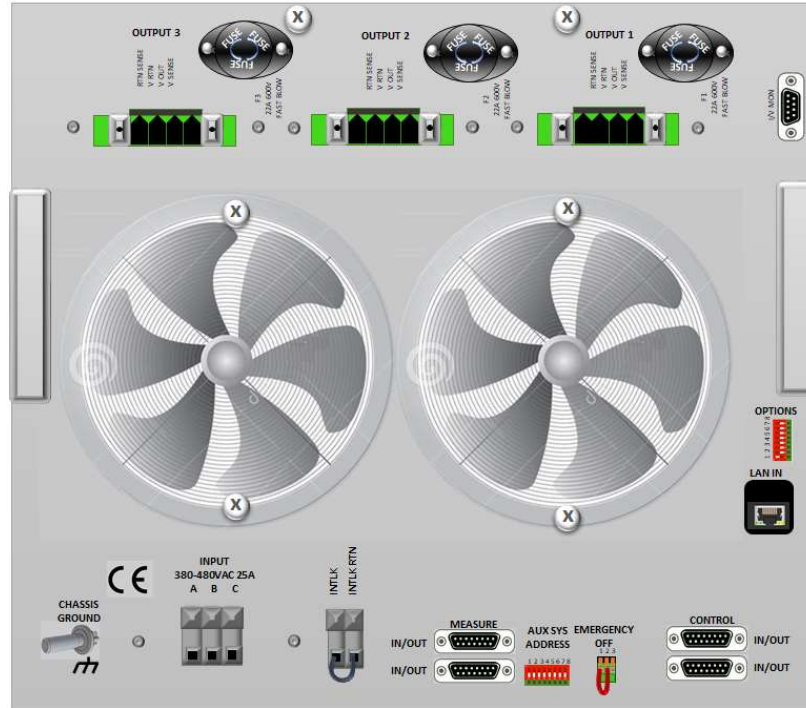

**All power and communications connections are made at the rear of the system and are not typically changed after installation. Refer to the installation section for information about connections.**

**This page intentionally left blank**


## 5. TOUCH PANEL CONTROL

The 9410 or 9420 system may be manually operated through the front touch controller.



### 5.1 System Identification

The upper left hand corner displays the system model number and size. This indication is automatically updated based on the model detected as well as the number of detected auxiliary modules at power up. See the troubleshooting section if the reported system size is not correct.

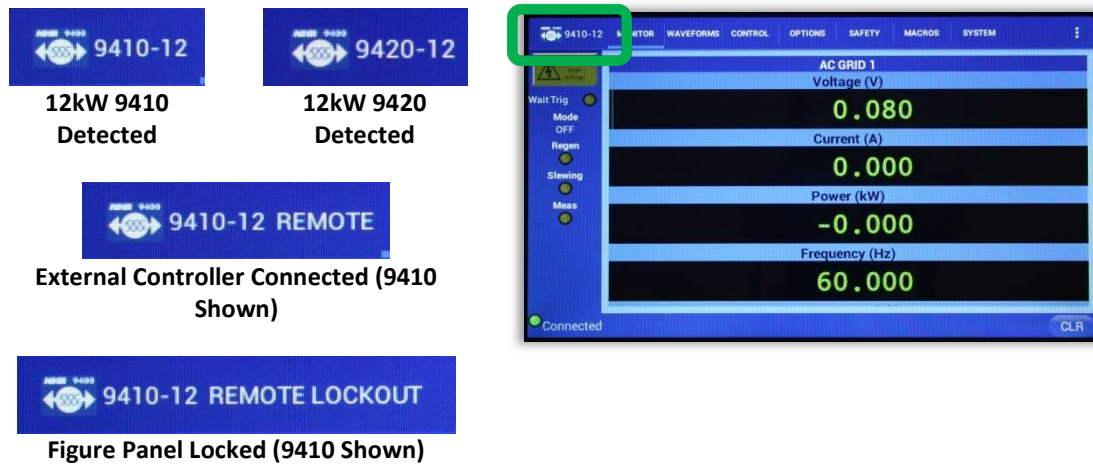

This field also indicates if the system has detected an open remote communication port or has been remotely locked out by a remote application (i.e. PC Tools: NHR 9400 Panel).



## 5.2 Setting the Output Operating Mode

The 9410 and 9420 series contains a number of hardware operating modes. The System tab on the main screen is used to review and select a hardware operating mode.



Changing the operating mode will likely require a change in fixture wiring. Please review this selection process carefully.


Then select the System tab.

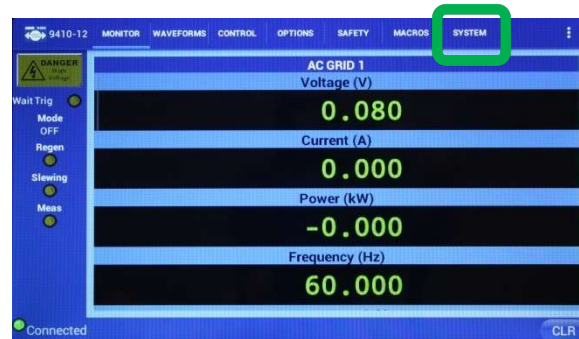

In this screen, any operating mode and recommended fixture wiring may be viewed. The new mode will not take effect until the Apply button is pressed.



The active hardware mode is circled.

Any selected hardware operating mode as well as the wiring associated with this mode is indicated with a dot icon .

Pressing Apply will send the configuration commands to the hardware.



Current Mode (Circled)

Selected Mode (Dot Icon)



Changes to the operating mode may require output wiring changes.

Changes to operating mode will disable previous safety limit settings.

### 5.3 Touch Screen Overview

The touch screen includes a number of tabs and indicators. The touch panel may be locked out preventing manual changes when the system is being operated remotely such as the with NHR 9400 panel. The monitor tab and the error clear buttons are the only active fields when the panel has been locked by a remote application.



Panel is Primary Controller (9410 Shown)



Panel is Locked Out (remote controller)

### 5.4 Indicators

The touch screen (if equipped) supplies a number of indicators which are displayed to the left regardless of the tab selected.

The number of indicators shown will depend on the number of logical instrument as configured by the hardware operating mode. For example a 3- $\phi$  AC output is a single logical instrument whereas three separate 1- $\phi$  AC outputs would be three channels.

These are ordered left to right.



Examples  
1x 1- $\phi$  AC or DC  
3- $\phi$  AC



Examples  
2- $\phi$  + AC or DC  
2x AC or DC



Examples  
3x 1- $\phi$  AC  
3x DC


*Indicators below are described from top to bottom*




When lit, the output of one or more channels is active.  
This button may be pressed to turn all channels off.  
This feature is locked out in remote lockout mode.



Always assume voltage may be present at the output.



Indicates one or more instruments are waiting for a trigger before performing the next action such as taking a measurement or macro step.



Indicates logical instrument is on/off or the current regulation mode.




Indicates the logical instrument indicated is converting UUT power to into internal DC power.



Indicates a slew to a new set value is occurring on the logical instrument indicated.



Indicates a measurement is in progress on the logical instrument indicated.




Indicates the macro is executing (i.e. local high-speed control is active).

Only displayed when a macro has been downloaded to the system.

A macro run button may also appear when the system is under touch panel control.

More information about building and using macros can be found in later sections.


## 5.5 System Status

The lower portion of the screen includes a status bar including an indicator . The indicator shows a communications status (heart beat) as well as error status.


- Blinking Yellow – Normal status & communicating with system
- Blinking Red – An Error has been detected
- Solid (any color: on or off) – Communication with the system has failed  
(A reset or power cycle may be required)

Immediately to the right of this indicator is a status message.


This message shows either “Connected” or an error message (if present).



**No Error and Communicating**




**Error Detected**

The displayed error (if present) may be cleared by pressing  found to the right.



## 5.6 Screen Selection Tabs

The multiple control screens are selected using the tabs at the top of the touch panel. The current selected tab is indicated by a blue underline as shown below.



All control screens are available when the system is under touch panel control.

The monitor tab is the only screen available when the touch screen is locked out. The other tabs (circled below) are removed thereby preventing local changes which may affect the testing results.

*Control tabs are described from left to right*

### MONITOR

The monitor tab provides digital measurements for each instrument. For multi-phase instruments, tap any measurement to switch between per phase (l-n) and multi-phase (l-l) views.

### WAVEFORMS

Provides a waveform view of the current output (voltage & current).

### CONTROL

Provides set control for single values (voltage, current, frequency, etc.)

Like the monitor tab, tap the measurements to switch between per phase (l-n) and multi-phase (l-l) control views.

### OPTIONS

Provides access to additional set controls (ranges, wave-shapes, etc.)

### SAFETY

Provides access to the safety limit settings.

### MACROS

Provides access to the internal local high-speed control system.

### SYSTEM

Used to set up the operating mode of the device.

Note: This will likely require a wiring change.

For more information see "Setting the operating mode" section.



Used to access setup menus for installation.

For more information see the "installation section."



### 5.6.1 Monitor Screen

The Monitor screen provides measurements for each configured instrument. For 1- $\phi$  and DC these measurements are always referenced to neutral (l-n). For multi- $\phi$  modes, the measurements are available as line-line or per-phase (l-n).

This monitor screen is available at all times even when the system is being controlled externally with another application (such as the NHR 9400 Panel software).




Monitor Screen showing a 9410 in split phase (2- $\phi$ ) + 1 AC (1- $\phi$ ) Configuration

#### 5.6.1.1 Instrument Labels

The monitor screen provides the instrument names based on the hardware configuration. These are placed atop of the measurements as shown.

The background of the instrument label changes to YELLOW when the output is active. This indication is in addition to the left indicators which are displayed across all screens.

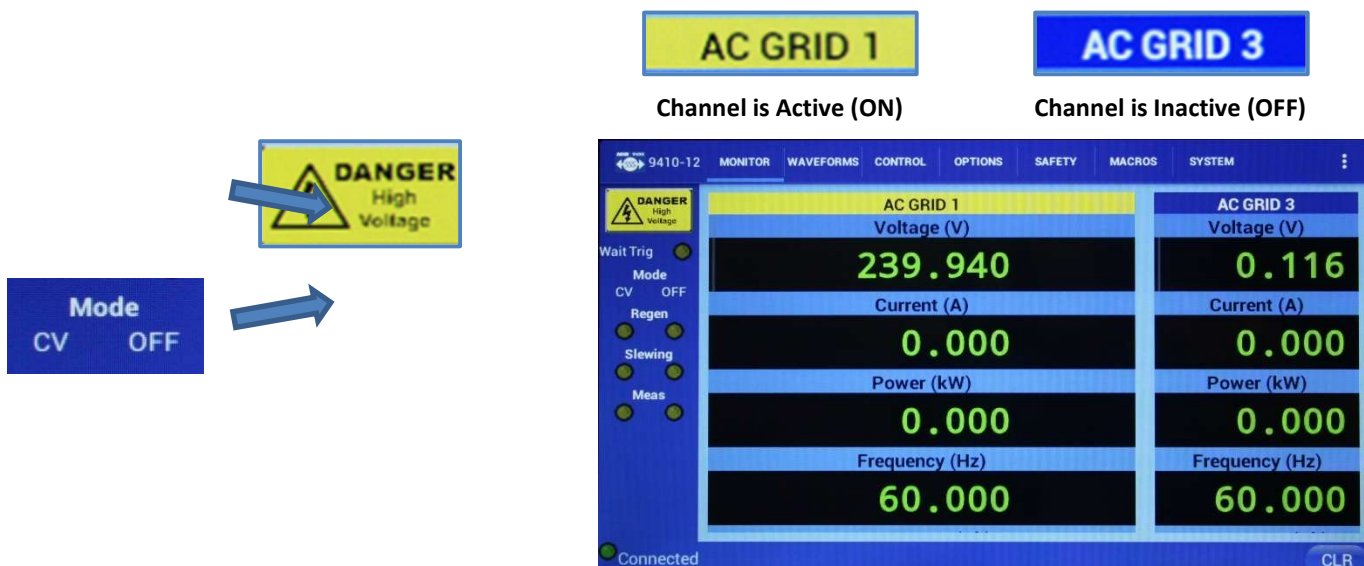

### 5.6.1.2 Switching between Line-Line and Line-Neutral Views

For multi-phase outputs, tap any measurement toggles between multi- and per-phase views.



9410 Line-Line view for AC Grid 1 Shown



9410 Per Phase (L-N) view AC Grid 1 Shown

Multi-Phase view takes into account the operating mode to correctly display an equivalent multi-phase voltage, current, and power. The following table provides some additional details on the calculations used to display Multi-Phase monitored values.

Hardware Mode	Per Phase View (only)
<b>DC Output</b>	Voltage Shown as L-N
<b>Single Phase (1-<math>\phi</math>)</b>	Actual line currents
	Power (kW)
	Energy (Ah)
	Energy (kWh)
	Apparent Power (VA)

Hardware Mode	Multi-Phase View	Per Phase View
<b>Three Phase (3-<math>\phi</math>)</b>	Voltage shown as $V_{A\phi L-n} \cdot \sqrt{3}$ Average of line currents $A_{RMS}$	Voltage Shown as L-N per $\phi$ Actual line currents per $\phi$
<b>Split Phase (2-<math>\phi</math>)</b>	Voltage shown as $V_{A\phi L-n} + V_{B\phi L-n}$ Average of line currents $A_{RMS}$	Voltage Shown as L-N per $\phi$ Actual line currents per $\phi$
<b>Common Multi-<math>\phi</math></b>	Total Power (kW) Total Energy (Ah) Total Energy (kWh) Total Apparent Power (VA)	Power (kW) per $\phi$ Energy (Ah) per $\phi$ Energy (kWh) per $\phi$ Apparent Power (VA) per $\phi$

+Peak and –Peak voltage, current, & power are always displayed per  $\phi$ .

Frequency is indicated for instruments configured for AC outputs.

### 5.6.1.3 Scrolling for Additional Measurements

The system reports more measurements than can be shown on the screen at one time. The touch screen takes advantage of Android's swipe capability allowing the entire list of measurements to be viewed. To see the additional measurements, keep touching the screen and scroll up and down to see the additional available measurements.



Scrolling for more measurements on AC GRID 3



Scrolling for more measurements on AC GRID 3

### 5.6.2 Waveform Screen

The waveform screen provides a graphical representation of the voltage & current for any or all of the configured instruments. The displayed waveform synchronizes to the 0° start angle of the output and displays one cycle (AC) or 10mS (DC).

To access this feature, select the waveforms tab then check the desired instruments.



Split Phase (2- $\phi$ ) shown with A-Phase using a n-Step sine output

### 5.6.3 Control Screen

The control screen allows single value updates to any instrument. In single phase, this may be voltage, frequency, or any other single parameter. In multi-phase, the adjustment can be to all phases (such as returning to a balanced voltage) or on a per-phases basis.


Macros (described later) are available to adjust multiple phases simultaneously as well as provide timed or cycle count based changes to settings.



9410 Control Screen for a split phase (2-φ) + 1 AC (1-φ) Configuration

#### 5.6.3.1 Turning the Output On/Off

An output is turned on/off by taping the check box directly above the instrument label. This check-box is in addition to the left indicators which are displayed across all screens as well as the active measurements directly below.

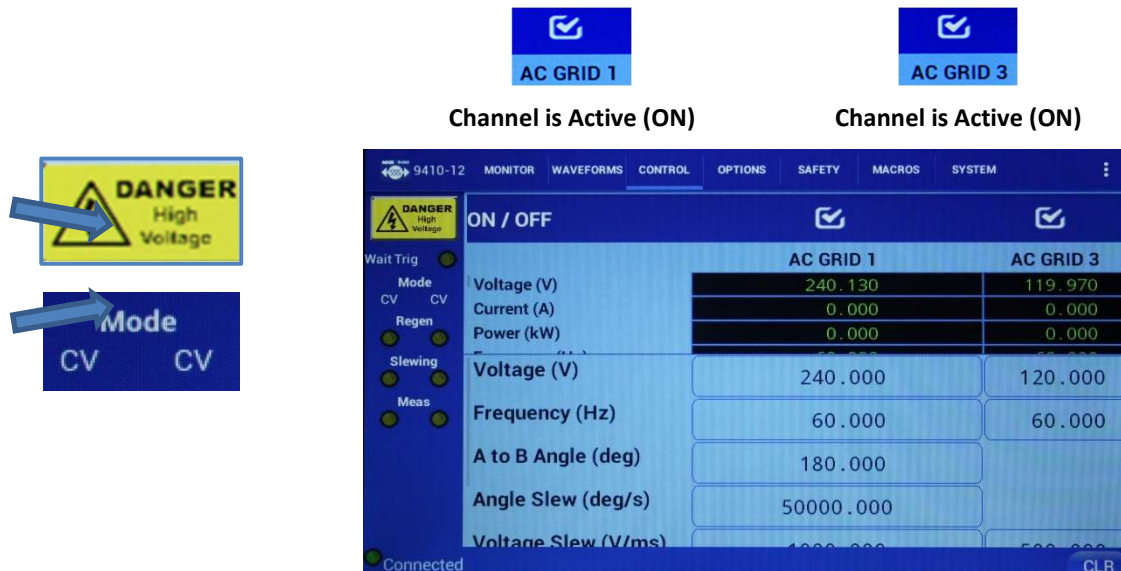



### 5.6.3.2 Measurements & Settings Panels

Directly below the On/Off checkbox control is a measurements panel. This provides similar functionality as the monitor screen including taping for multi- versus per-phase views as well as scrolling the measurements to see other values which do not fit on the screen. The only significant difference is both instruments will scroll together rather than separately as is available in the monitor screen.

The settings panel is used to select which setting will be adjusted.



### 5.6.3.3 Switching Control from Line-Line to Line-Neutral

Similar to the monitor panel, a single tap in the **measurements panel** switches between multi- & per-phase views. The control options in the **settings panel** also switch between multi- or per-phase setting controls as shown below.



9410 Line-Line control for AC Grid 1

9410 Per Phase (L-N) control for AC Grid 1

Multi-Phase programming uses a fixed line-neutral relationship for all phases whereas per-phase and single channels permit individual line-neutral programming values.

The example above shows a  $240\text{VAC}_{\text{rms(l-l)}}$  split phase in multi-phase control which results in  $240 / 2$  or  $120\text{VAC}_{\text{rms(l-n)}}$  per phase with an A to B phase angle of  $180^\circ$ . By comparison, the single phase channel (AC GRID 3) is programmable with its own Line-Neutral setting. For more information about the 9400 multi-phase calculations used, see the multi-phase calculation section.

### 5.6.3.4 Scrolling for Additional Settings

Similar to the monitor panel, the number of possible settings is greater than the number that can be shown on the screen at one time. The touch screen takes advantage of Androids swipe capability allowing the entire list of settings to be viewed or selected. To see the additional settings, keep touching settings area and scroll up & down to see the additional available set options.



Scrolling up for more 9410 settings (3- $\phi$  shown)



Scrolling up for more 9410 settings (3- $\phi$  shown)

### 5.6.3.5 Adjusting Output Settings

Tapping on a setting opens a control allowing the setting to be changed.

The setting may be adjusted by direct value entry or using a live-update feature.




Tap a setting to change the value



Only the available settings will be displayed which are appropriate for the hardware operating mode selected.

For example: in Split- $\phi$  + 1 AC the single AC channel

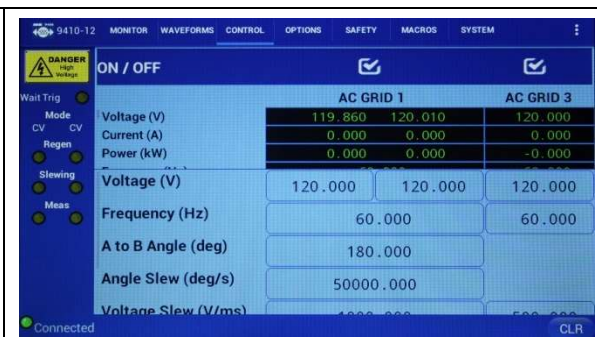

has no phase angle relationship.

### Adjusting through direct value entry

Tapping the value field opens a control panel allowing for direct numerical entry.

Tap on the measurement value  
That is to be adjusted.

Click on 208V.





Note: for multi- $\phi$ , this is line-line (voltage)  
for single- $\phi$  & per- $\phi$ , this is line-neutral.



Enter the new setting  
using the numeric keypad.



Then select close, apply, or Ok.

-  Deletes last digit entered.
-  Close (No Setting Change).
-  Apply Setting (Keep control open).
-  Apply Setting and close control.



**Switching between Multi-Phase and Per phase views occurs before selecting the setting to be adjusted. For more information, see the previous “Switching control from line-line to line-neutral” section.**



**Single phase and per phase view settings are always entered as line-neutral.**



**Multi-phase settings (such as voltage) are generally entered as line-line.  
See the multi-phase calculations section for more information.**


### *Adjusting using a Live-Update (Up/Down value) modification*

The NHR 9400 Panel allows a value to be adjusted using an up/down button approach.

Tap on the measurement value  
that is to be adjusted.

Click on 208V.


Note: For multi- $\phi$ , this is line-line (voltage)  
for single- $\phi$  & per- $\phi$ , this is line-neutral.

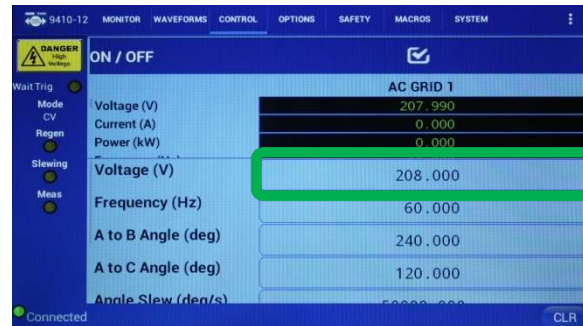

Check the Live Update Checkbox.



Use the left & right arrows to  
select which digit will be adjusted.

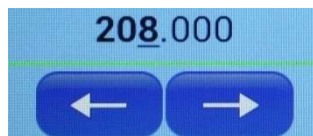

Use the up & down arrows to  
increase or decrease the selected digit.





Note: Settings are sent to the hardware with each increase or decrease of value.

### 5.6.4 Options Screen

The options screen provides settings which accept one or more fixed values rather than user-specified values like the control screen. This screen operates in a similar way as the control screen except that a selected value provides a menu choice rather than a value entry screen.


All of these settings may also be adjusted using macros similar to the control screen.



Options Screen for 9410 in split phase (2-φ) + 1 AC (1-φ) Configuration


#### 5.6.4.1 Turning the Output On/Off

Similar to the control screen, an output is turned on/off by tapping the check box directly above the instrument label. This check-box is in addition to the left indicators which are displayed across all screens as well as the active measurements directly below.

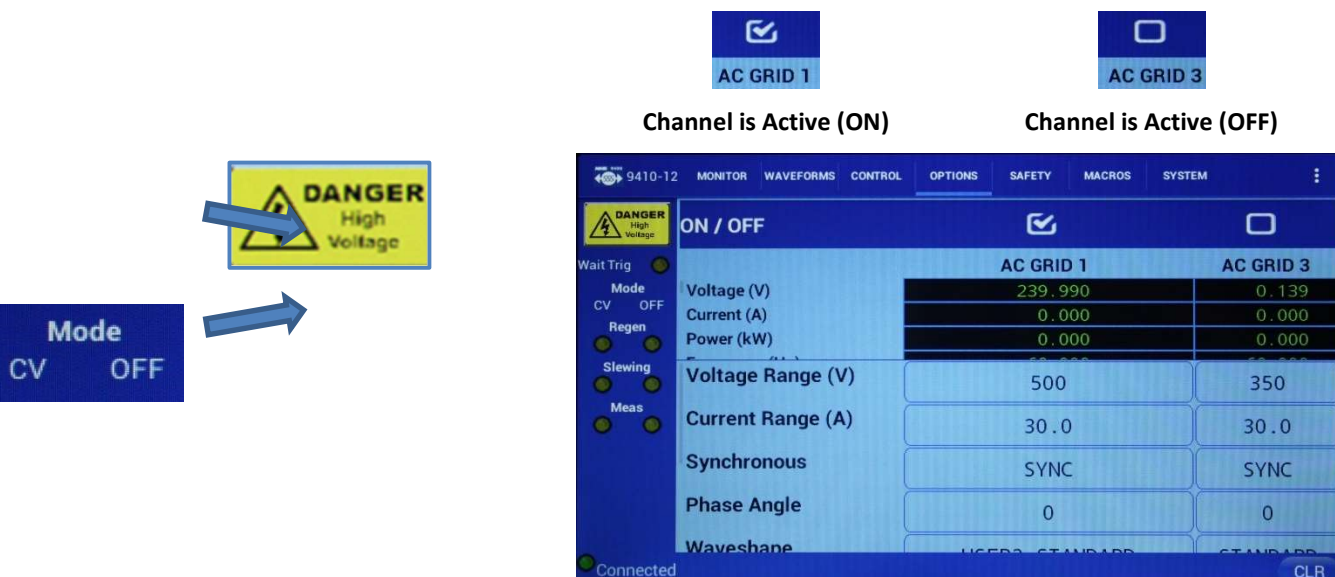

### 5.6.4.2 Scrolling for Additional Settings

Similar to the control panel, the number of possible settings is greater than the number that can be shown on the screen at one time. The touch screen takes advantage of Androids swipe capability allowing the entire list of settings to be viewed or selected. To see the additional settings, keep touching settings area and scroll up & down to see the additional available set options.

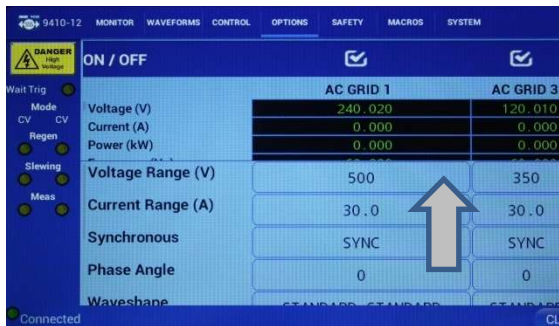

Scrolling up for more settings (2- $\phi$  + AC shown)



Scrolling up for more settings (2- $\phi$  + AC shown)

### 5.6.4.3 Adjusting Output Options

Similar to the control screen, Tapping on a setting opens a control allowing the setting to be changed. When selected, a menu option will pop up providing a selection option.



Tap a setting to change the value.



Voltage Range is always displayed as line-line for multi- $\phi$  instruments and line-neutral for single- $\phi$  instruments. The panel does permit switching between multi- $\phi$  and per- $\phi$  views (similar to the control screen) which is useful for applying a user-wave shape to an individual phase.

#### 5.6.4.4 Clearing Accumulated Measurements


Options to clear accumulated measurements such as peak voltage, current, power as well as energy is found at the bottom of the options screen.



When pressed, the touch panel requests confirmation before clearing the measurements.

#### 5.6.4.5 Performing a Hardware Reset

A hardware reset may be requested from the options screen.

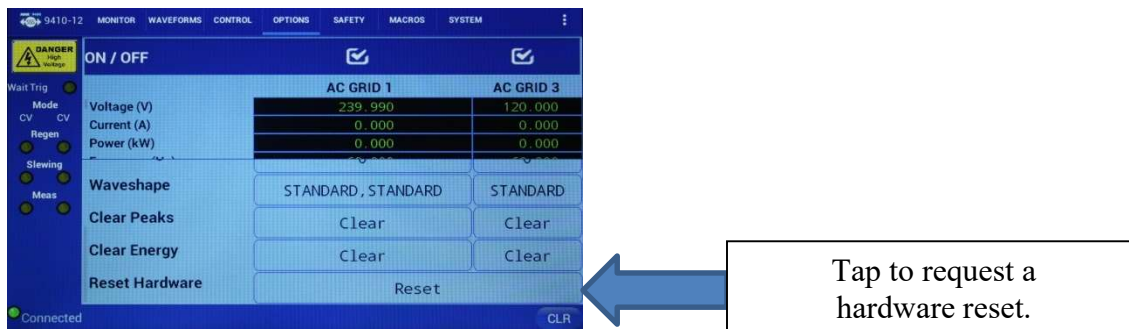

When pressed, the touch panel requests conformation before applying a hardware reset.

Hardware resets will turn off all outputs and return the system to a power up state. This sets all wave shapes back to the pre-programmed wave shapes, ranges to default, and settings to default.


Safety limits are preserved through reset. It is generally advised to ensure the system is fully prepared including ranges, safety limits, and operating modes before turning on the output again.



**Always assume the voltage is present at the output even after performing a hardware reset.**

### 5.6.5 Safety Screen

The safety screen provides programmable safety limits intended to limit UUT damage due to operator errors. Safety limits act like a programmable fuse and will disable and disconnect the system from the UUT when the programmed level is exceeded for the time specified. Like a fuse or circuit breaker, the setting value should be greater than the nominal expected and will trip faster when the actual value exceeds the threshold by a larger value.

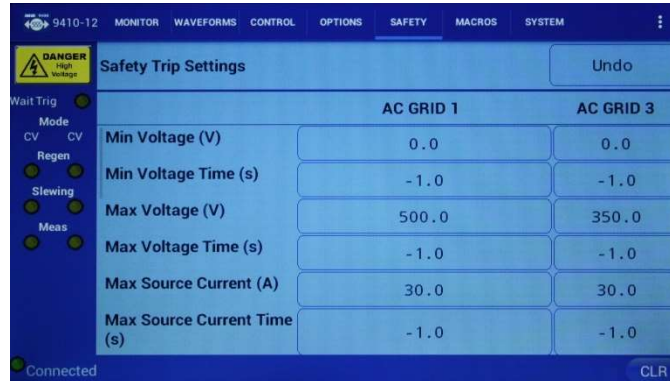

**Safety limits are sent to the hardware when another screen is selected.**

**Provide the desired changes and then select another screen.**



**Changing hardware operating modes disables all safety limits values. Ensure safety limits are implemented before turning on the output.**

#### 5.6.5.1 Scrolling for Additional Settings

Similar to other screens, the number of possible settings is greater than the number that can be shown on the screen at one time. The touch screen takes advantage of Android's swipe capability allowing the entire list of settings to be viewed or selected. To see the additional settings, keep touching settings area and scroll up & down to see the additional available set options.



Scrolling for more settings (9410 Split- $\phi$  + 1AC)




Scrolling for more settings (9410 Split- $\phi$  + 1AC)







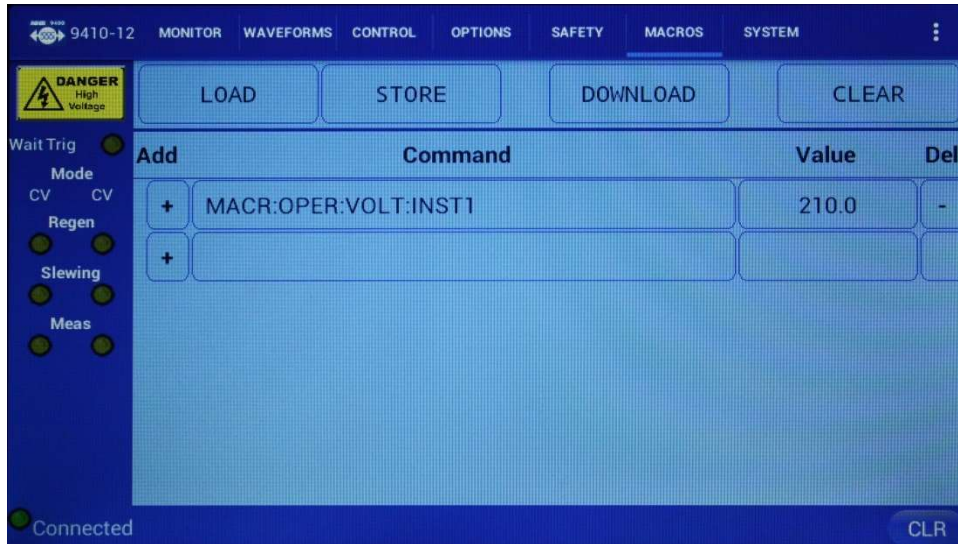


### 5.6.6 Macro Editor Screen

Macros are pre-programmed sequences which are downloaded and executed locally on the hardware in order to provide direct cycle and sub-cycle control. Macros provide deterministic cycle-based and time-based changes to settings across all instrument channels, to any phase, to wave-shape selection, and any other programmable setting.



*Button Options below are described from left to right*

-  Retrieves a previously generated and stored macro file.
-  Saves the current macro file for later use.
-  Downloads the current macro file to the hardware.
-  Clears the macro editor screen (and macro loaded in hardware).
-  Inserts a new macro step above the current step.
-  Selectable entry field.
-  Deletes the selected macro step.

More information and usage examples can be found in the “MACROS & USAGE EXAMPLES” section below.

**This page intentionally left blank.**

## 6. SOFTWARE (PC TOOLS) CONTROL

NH Research provides a number of PC-Based tools along with each 9410 or 9420 System. One of these is the NHR 9400 Panel which permits manual control of the hardware. Alternatively, the Power Module can be controlled through communications terminals (like HyperTerminal) using SCPI commands, or through any software package which is able to issue SCPI commands, VXI-11, or LabVIEW VIs.

On Windows 7, the provided utilities and documentation is found under  
Start → All Programs → NH Research → 9400 Series

On Windows 10, the provided utilities and documentation is found under  
Start → All Programs → NH Research

Or on the local hard drive under  
"C:\Program Files (x86)\NH Research\NHR 9400 Utilities\"



**The LabVIEW VIs and SCPI language are supported for non-windows control including PLCs and real-time systems.**


### 6.1 Launching the NHR 9400 Panel

On Windows 7, The 9400 Panel software is found under  
Start → All Programs → NH Research → 9400 Series

On Windows 10, The 9400 Panel software is found under  
Start → All Programs → NH Research



After selecting the NHR 9400 Panel, the program will open with the following screen.

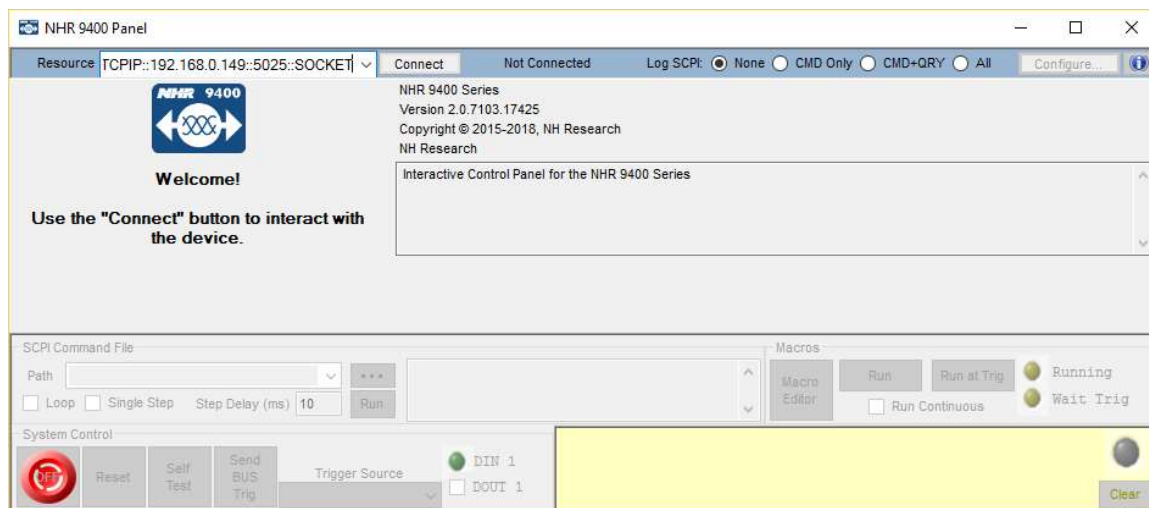



## 6.2 Connecting the NHR 9400 Panel to System

The panel software will require the IP address for the system.


This IP address is provided on a label on the rear of the system and may be changed as needed following the “Configuring the Master Module” section in the installation section.

Supply the IP address using the form of “TCPIP::(IP\_ADDRESS)::5025::SOCKET”

Press the connect button.

The application connects to the system and displays the active hardware operating mode as well as the active settings.

Connection of the application does NOT reset the hardware.

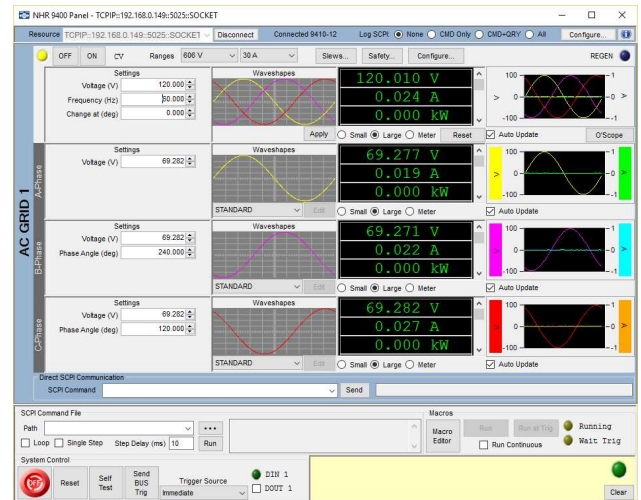

**NHR 9400 Connected to 9410-12 in 3- $\phi$  Mode**

## 6.3 NHR 9400 Panel - Overview

### 6.3.1 System Identification


The system connected to is displayed in the upper portion of the NHR 9400 Panel.

Connected to 9410-12

This displays:

- Model number (9410 shown)
- Maximum power level (-12 for 12kW)

See the troubleshooting section if the reported system size is not correct.

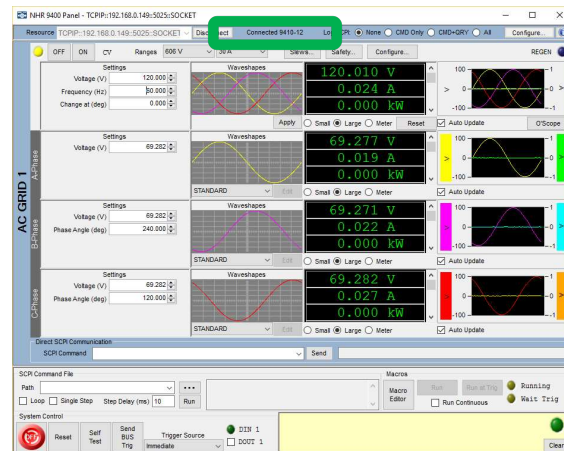

### 6.3.2 System Information

System information can be displayed by pressing the information button located in the upper right.





An information screen will display:

#### System Information

- Manufacturer Name
- System Model
- Serial Number
- Firmware versions

#### Instrument Specific Information

- Instrument Type
- Device Capabilities

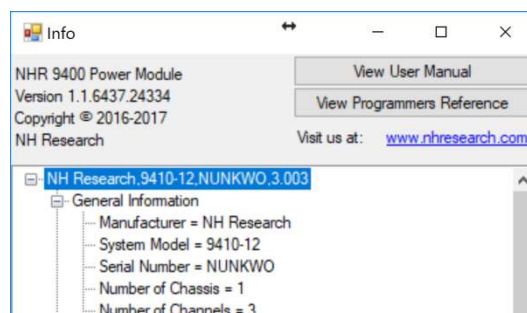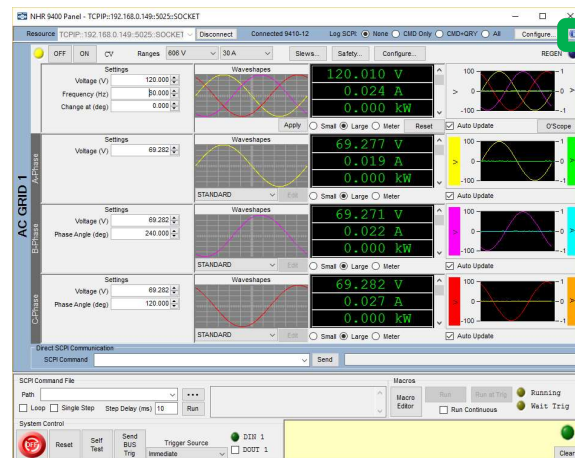

### 6.3.3 Changing the Hardware Operating Mode

Changing the output hardware operating mode will affect the entire system.




**Changing the operating mode will typically require changes in the output connections to the UUT. Please read this section completely before proceeding.**

The 9410 and 9420 provide a number of operating modes which are intended to simplify programming and overall user experience.


The Appendix provides a complete list of hardware operating modes as well as recommended UUT wiring for each output hardware operating mode.

Press the Configure button.

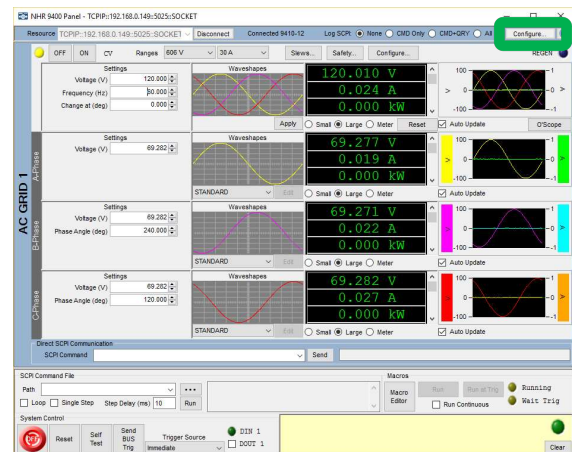

Changes the the output configuration requires a hardware reset.


Review this section completely along with wiring changes before procceding.

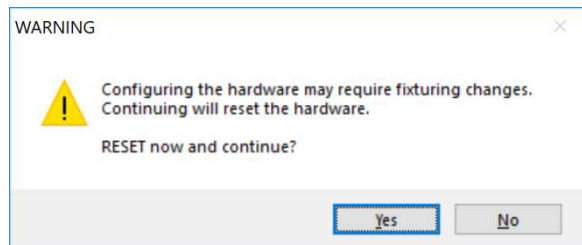

**Wiring and Configuration should always be done in an OFF state with no external UUT power applied.**


## Changing the Hardware Operating Modes (Cont'd)

NH Research recommends keeping the following options enabled.


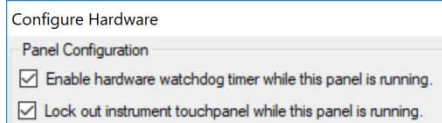


Option: Enable hardware watchdog  
- Reset if communication is interrupted.

Option: Lock out instrument touchpanel  
- On system touchscreen is locked out.

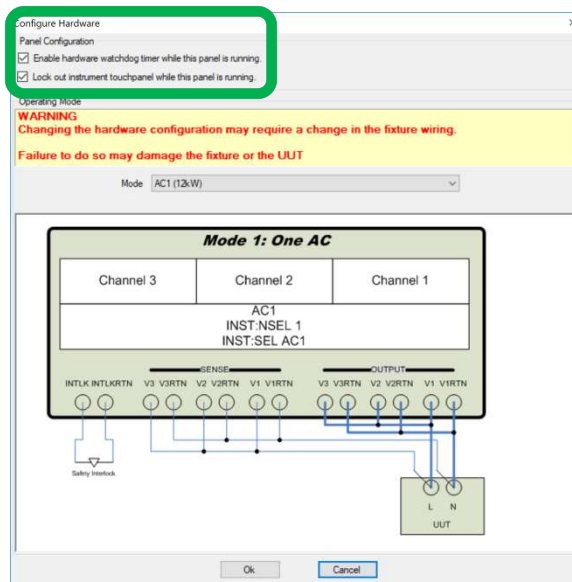

Use the drop down list to select the desired mode then press "OK".

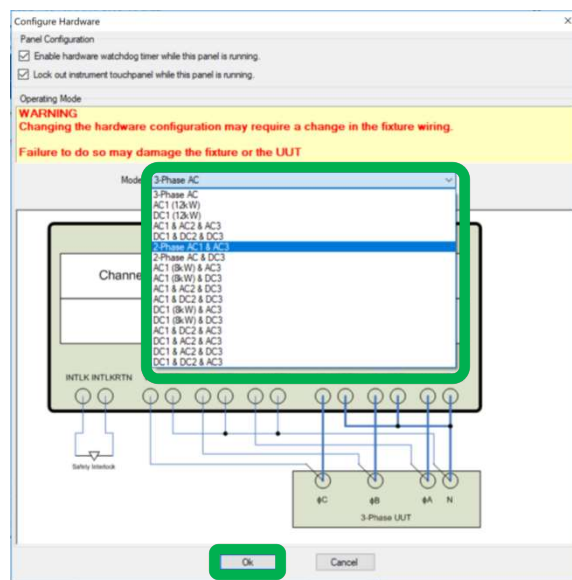


Changes to the operating mode may require output wiring changes.



Changes to the operating mode will disable any previously established settings including safety limits.

### Changing the Hardware Operating Modes (Cont'd)

Pressing OK will select the new operating mode and apply the changes to hardware. The NHR 9400 Panel will automatically adjust their views to the new operating mode.

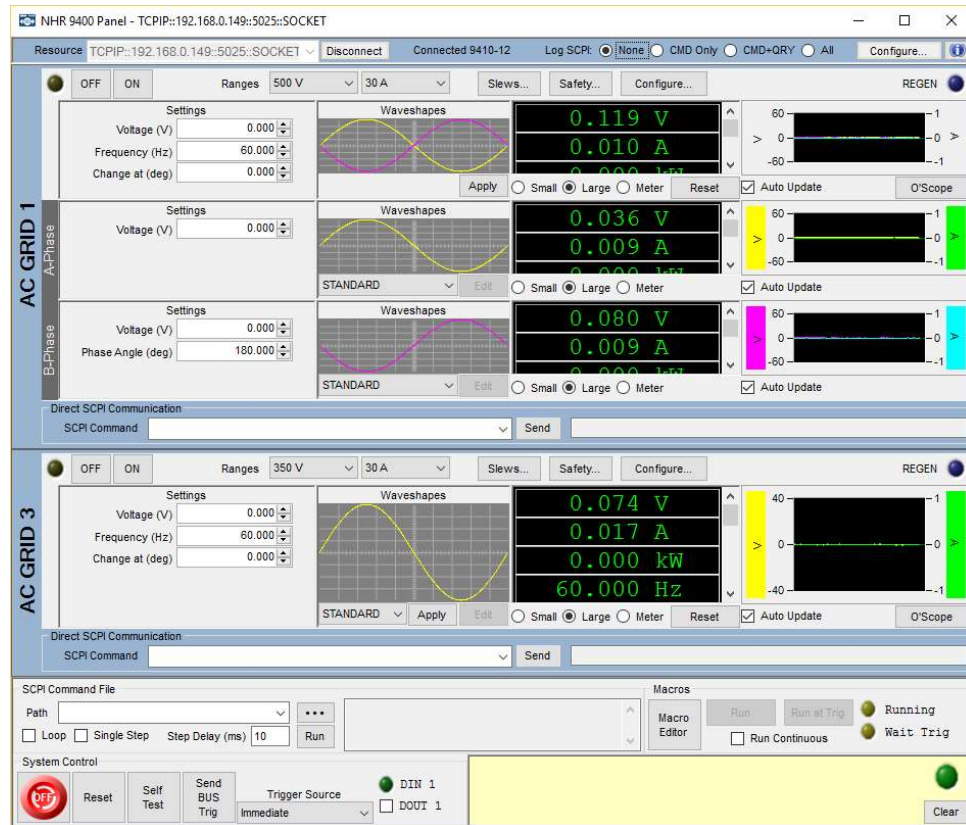


The on-system touch screen will automatically adjust to the new operating mode as well.



Changing the operating mode will typically require changes in the output connections to the UUT. Previously established safety limits are also cleared.

### 6.3.4 Logging SCPI Communication



Any interaction between the panel and the instrument can be recorded. When a Log SCPI mode other than “None” is selected. You will be prompted for a file name used to record the information.

After returning to “None”, the file can be opened in any text editor or played back as a SCPI command file.

**CMD Only:** Records all SCPI commands sent but does NOT record queries or the responses to queries. This is the most compact form and is most useful for generating command scripts.

**CMD+QRY:** Records all SCPI commands and queries but does NOT record the responses to queries. This can be useful if you want to see the results of queries when the file is played back.

**All:** Records all SCPI commands and queries along with the responses to queries.

This feature is most often used to:


- Create a script to preset the instrument as desired. For example, select “CMD Only” or “CMD+QRY” and then interact with the unit using the panel. Everything you do will be recorded. When complete, select “None”. Then, in the SCPI Command File section, load the file and run it and it will play back what you recorded.
- Create a log that can be viewed to help diagnose an issue. In this case, select “All” to record the commands and queries with the responses. When complete, select “None” and view the file with a text editor to review. Note, this file format can also be played back as a SCPI command file.



### 6.3.5 Instrument Controls & Measurements


The instrument controls comprise the majority of the NHR 9400 Panel.

These controls will be discussed in further detail in the instrument control section below.

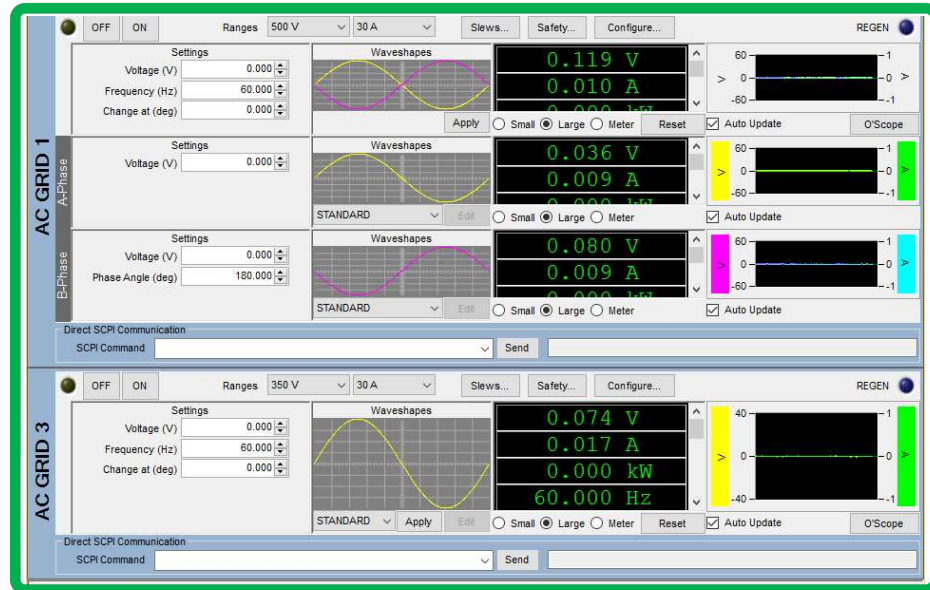

### 6.3.6 NHR 9400 Panel – Other System Level Controls

The 9400 Panel includes a number of controls which apply to all instruments.

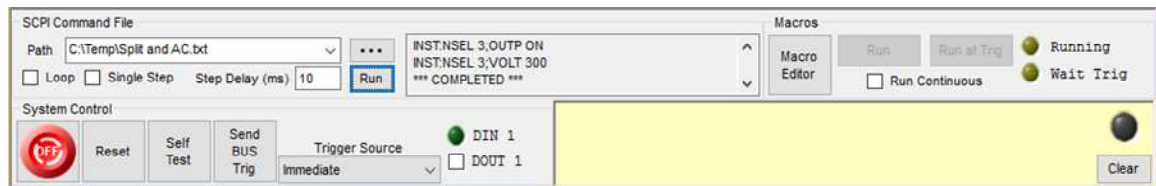

#### 6.3.6.1 External SCPI Command File

The NHR 9400 panel allows a plain text (.txt) file containing SCPI commands to be read and executed. The executed commands and query responses are printed in the status window to the right.






The plain text file should be explicit in addressing the instruments.




Refer to NHR 9400 Programmers Reference (NHR P/N: 09-0335 for a list of commands appropriate for the 9410 and 9420.

### 6.3.6.2 Macro Support




Macros are predefined sequences which are loaded to the hardware and executed locally. This ensures rapid fire timing and accurate cycle counting when needed.



More about macros can be found in the programming with macro's section below.

The "Run" and similar buttons shown are used with macros.




These status indications are associated with Macro's operating state.



### 6.3.6.3 Other Controls


#### *Controls from left to right*

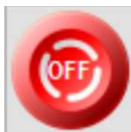


The OFF button provides a quick turn off feature for all output channels. This is different from an e-Stop output as any channel may be turned on again without requiring a reset command to be issued.




The Reset button sends a hardware reset to the system.  
All channels will return to default settings.



The Self-test button instructs the system to perform a hardware self-diagnostic. Feature is used for troubleshooting issues by NHR Customer support.



Sends the command \*TRG to the system. That will cause the hardware to trigger if it is waiting for a BUS Trigger.

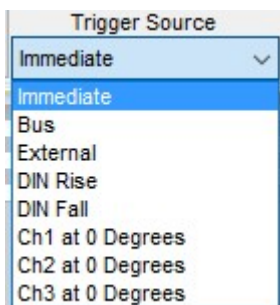

Sets the trigger source used when starting a macro triggered and when capturing a waveform triggered.


Immediate does NOT wait

BUS – Triggers on receipt of \*TRG command

Others as named.



Digital Input Indicator.





Digital Output Control.

### 6.3.7 Error Message Queue

The lower right corner provides an Error Message Queue. This area under normal operation should be blank. When an error is observed, the associated error message (along with additional instructions as needed) are added to this display window.

When there is an Error, the indicator above the “Clear” button will flash red.

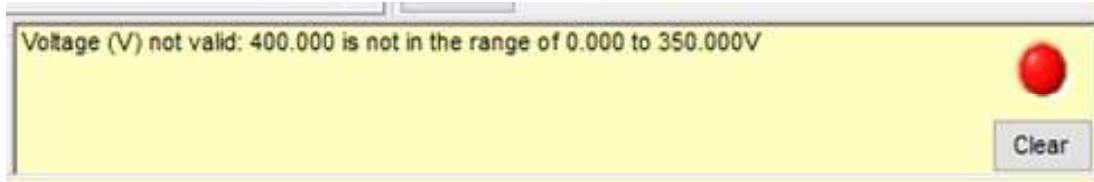


Pressing Clear  will clear most error messages.


Safety trips as well as internal fault detections require additional user intervention such as providing a reset after the issue has been resolved.

## 6.4 NHR 9400 Panel – Instrument Level Controls


The output channels may be configured into groups resulting in one or more virtual instruments. For example, a 9410-12 includes three channels which may be configured as a single 3-phase, three separate 1-phases, or a split-phase + an additional AC channel.

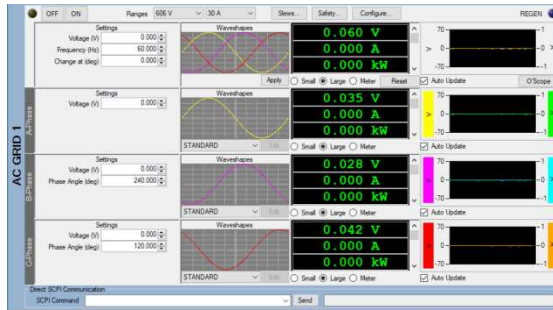

9410-12 Three Phase View (with per phase)

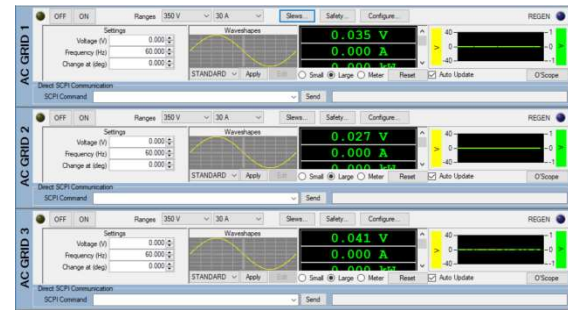

9410-12 Three 1 Phase Channels

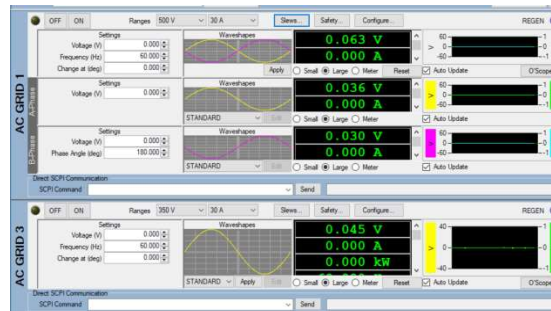


9410-12 One Split Phase Channel + One AC Channel




The 9410 and 9420 have many similar instrument control features. As such, they will be explained in the following sections denoting any specific difference where appropriate.



Refer to Section 4 for more details about series specific features.

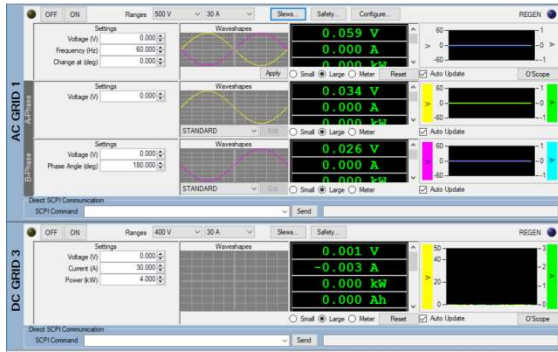


Connected to 9410-12

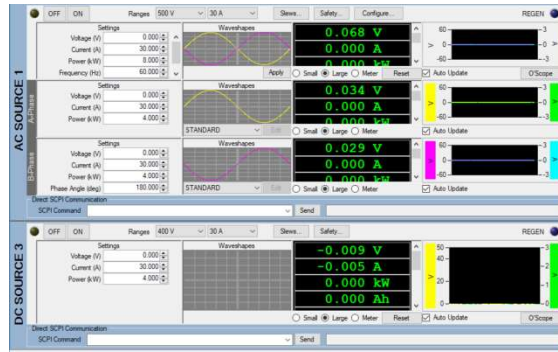

Connected to 9420-12


## 6.4.1 Instrument Labels

The vertical column on the left has the logical name of the instrument and, if multi-phase, the phase name.

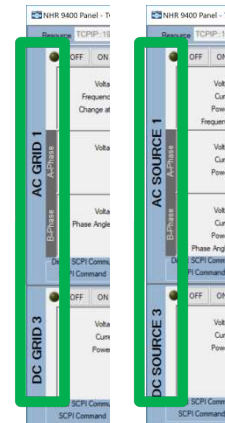

## 6.4.2 Instrument Output Controls

Each instrument provides multiple control features including safety, turn on/off, command phase angle triggers, slew rates, ranges, etc.

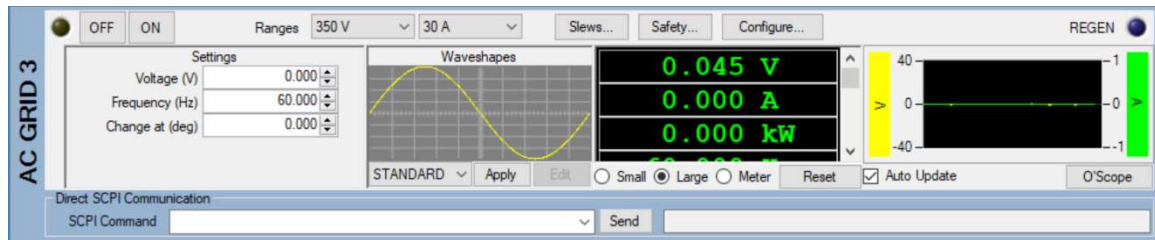


9410 Single Phase channel shown

*Controls from left to right*




On and Off will activate or deactivate the output.

The output state is shown with both in indicator form and current output regulation mode (i.e. CV or OFF).



Voltage ranges are automatically scaled for Line-Line or Line-Neutral depending on the selected hardware mode.




Current ranges are automatically scaled based on system size and the selected hardware mode.



The Slews button provides access to the programmable slew rates. More details in the following sections.



The Safety button provides access to the programmable safety limits. More details in the following sections.



The Configure button provides access to additional options like phase angle trigger behavior.




Busy Icon when present indicates an operation is pending.



The REGEN indication shows power is being absorbed by the UUT and transferred back to the facility.


### 6.4.3 Adjusting Slew Rates

Pressing the “Slews” button  displays the slew rate control panel.

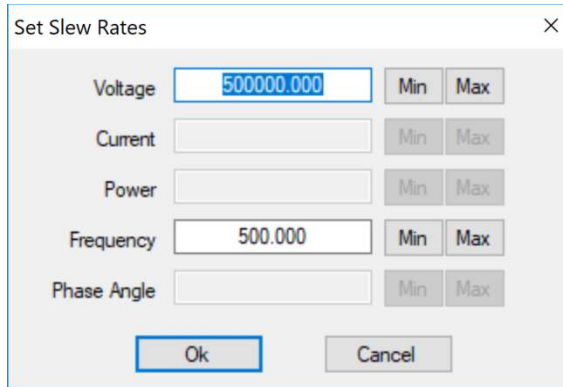


Set Slew Rates dialog for 9410 for 1-φ AC. The dialog contains input fields for Voltage (500000.000), Current, Power, Frequency (500.000), and Phase Angle. Each field has Min and Max buttons. The Ok button is highlighted.

Slew Rate Options – 9410 for 1-φ AC

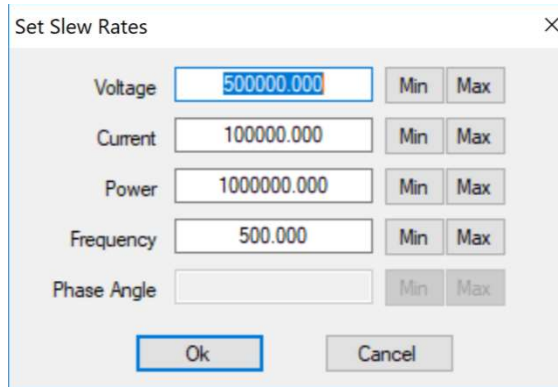

Set Slew Rates dialog for 9420 for 1-φ AC. The dialog contains input fields for Voltage (500000.000), Current (100000.000), Power (1000000.000), Frequency (500.000), and Phase Angle. Each field has Min and Max buttons. The Ok button is highlighted.

Slew Rate Options – 9420 for 1-φ AC

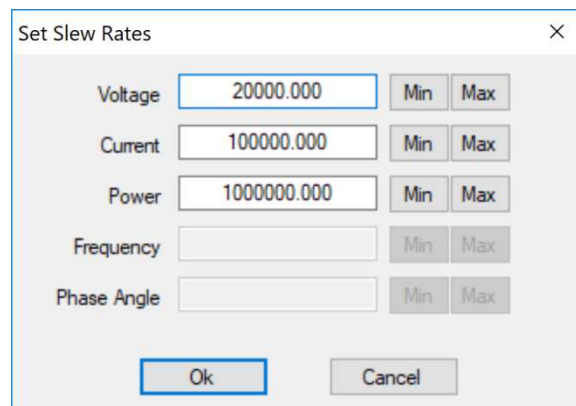

Set Slew Rates dialog for 9410 or 9420 DC Loading. The dialog contains input fields for Voltage (20000.000), Current (100000.000), Power (1000000.000), Frequency, and Phase Angle. Each field has Min and Max buttons. The Ok button is highlighted.

Slew Rate Options – 9410 or 9420 DC Loading



Only slew rates which apply to the active loading mode are enabled.



Refer to section 4 for more information about Multi-phase & parallel channel slew rate definitions and relationships.

Slew rates provide a ramped linear control between two setting values.



### *Slew Rate Example*

A 9410-12 Grid Simulator is operating as a one-phase supplying 120VAC<sub>rms</sub>/60Hz.

The slew rate is set for current to 3600 V<sub>rms</sub> /sec.

The next setting is to apply at 0° phase angle.

If the module is then told to regulate to 60V<sub>rms</sub>, this represents a 60V change which would take 1/60<sup>th</sup> of a second (1 cycle @ 60Hz)

Result: a 1 cycle linear slew from 120V<sub>rms</sub> to 60V<sub>rms</sub>.

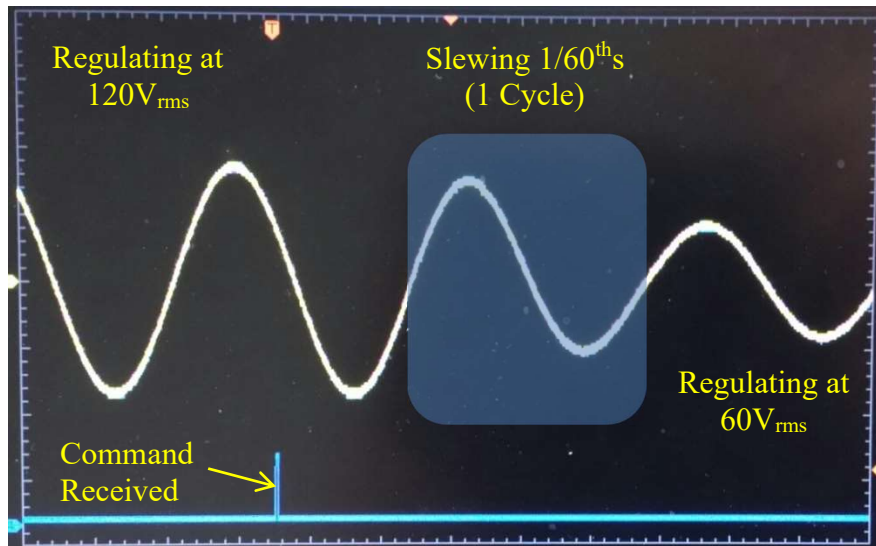


Figure 1 - Scope Capture of 9410 Output showing linear slew



### 6.4.4 Adjusting Safety


Pressing the “Safety” button  displays the safety trip settings panel.

Safety limits can be thought of as a programmable breaker which is aware of the power flow direction. When any of the limits are exceeded the system stops flowing power and opens the UUT side contactor isolating the system from the UUT.

Each limit includes a value and a time field. For example, the maximum source current (from 9410 or 9420 to the UUT) has been shown programmed to 25Arms with a time constant of 1s. Like a circuit breaker or fuse, if the current far exceeds 25Arms the time constant is shortened automatically based on the energy being transferred.

There is also a maximum sink current (from UUT) allowing a separate limit to be set based on the direction of power flow. In this case, this has been shown programmed for 15Arms and a time constant of 2s.

There are additional limits based on voltage, power, and peak values for either voltage or current.

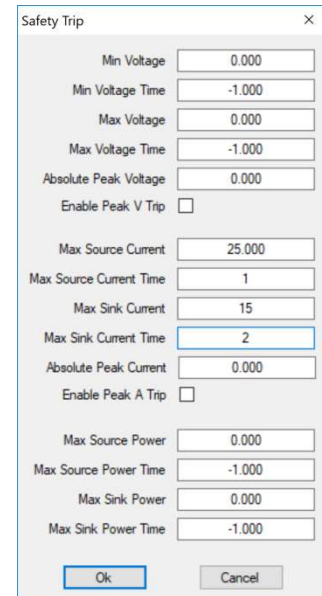

Safety Trip	
Min Voltage	0.000
Min Voltage Time	-1.000
Max Voltage	0.000
Max Voltage Time	-1.000
Absolute Peak Voltage	0.000
Enable Peak V Trip	<input type="checkbox"/>
Max Source Current	25.000
Max Source Current Time	1
Max Sink Current	15
Max Sink Current Time	2
Absolute Peak Current	0.000
Enable Peak A Trip	<input type="checkbox"/>
Max Source Power	0.000
Max Source Power Time	-1.000
Max Sink Power	0.000
Max Sink Power Time	-1.000
<input type="button" value="Ok"/> <input type="button" value="Cancel"/>	

**Setting a time allowed to -1 disables the safety setting.**



**Setting a time allowed to 0 may result in noise causing a safety trip. General recommendations are 0.1 for a fast acting fuse and 0.5 for a slow-blow fuse equivalent.**

Safety limits should be set outside of normal operating parameters and are intended to limit UUT damage due to operator error or UUT failure.



They should be used in the same way that a fuse or circuit breaker would be used in a similar application.




**Safety limits do not affect programming capability. It is therefore possible to inject a noise pulse which exceeds the limits as long as it returns to nominal before safety detection time has elapsed.**

### 6.4.5 Instrument Configuration Options

Immediately to the right of the “Safety Button”, the configure button opens the instrument configuration panel.

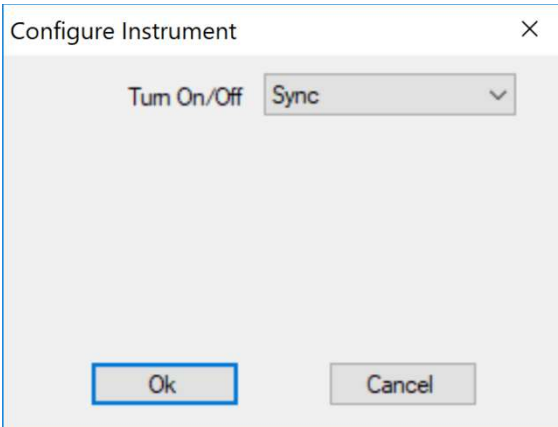


**9410 Output Configuration Panel**

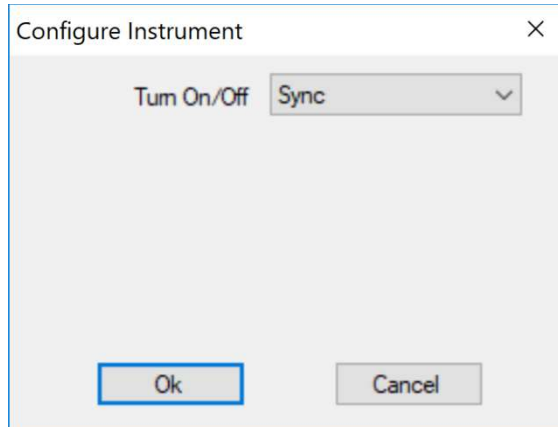


**9420 Output Configuration Panel**

#### *Setting Asynchronous & Synchronous AC settings changes:*

Turn On/Off determines if commanded settings changes are executed immediate or phase angle triggered based on the change at (deg.) angle specified in output controls.

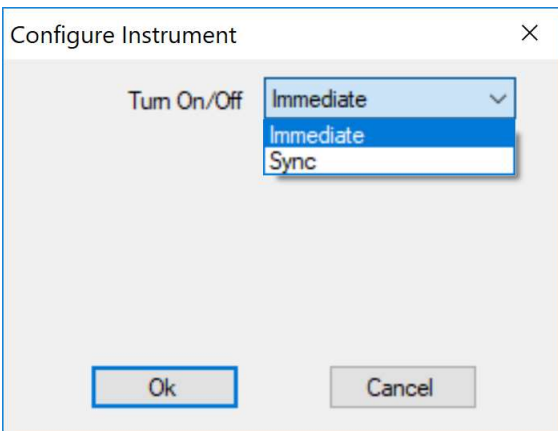

**Settings are applied immediately**



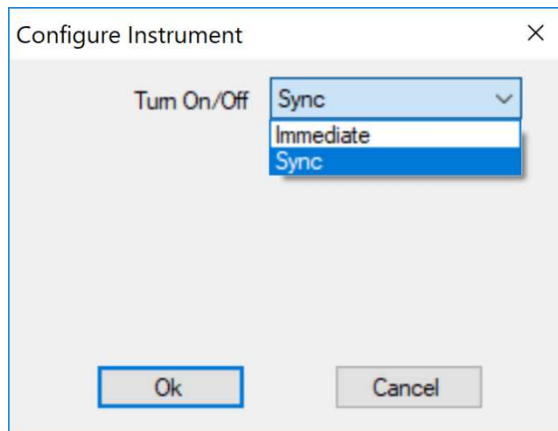


**Settings are applied at phase angle**

The examples on the following page will demonstrate the differences which can be observed between Asynchronous and Synchronous mode.

*Asynchronous & Synchronous Examples:*


All examples show a transition from  $120V_{\text{rms}}$  to  $60V_{\text{rms}}$ .

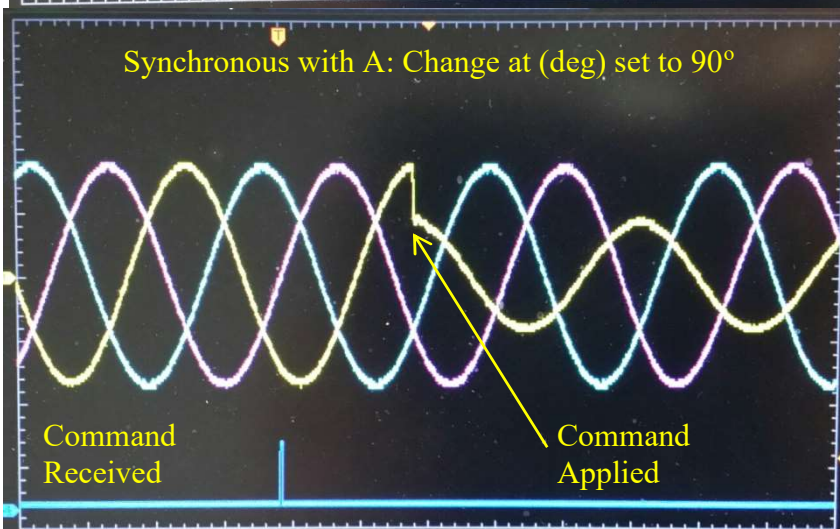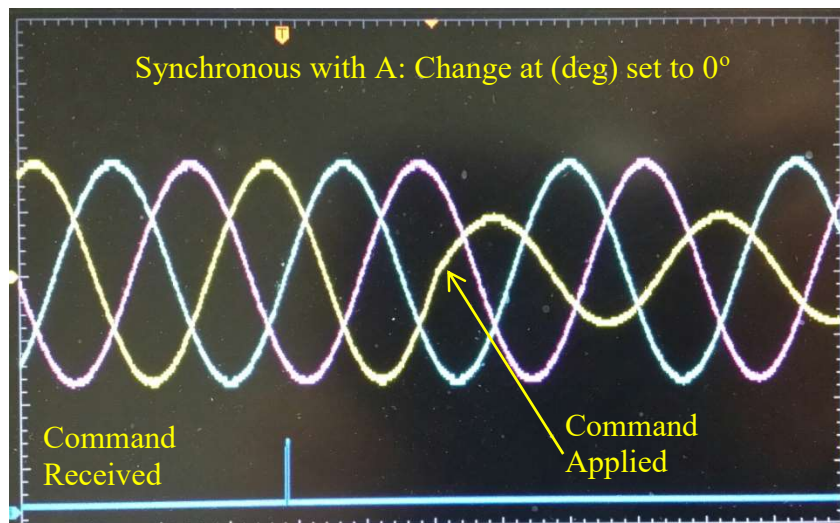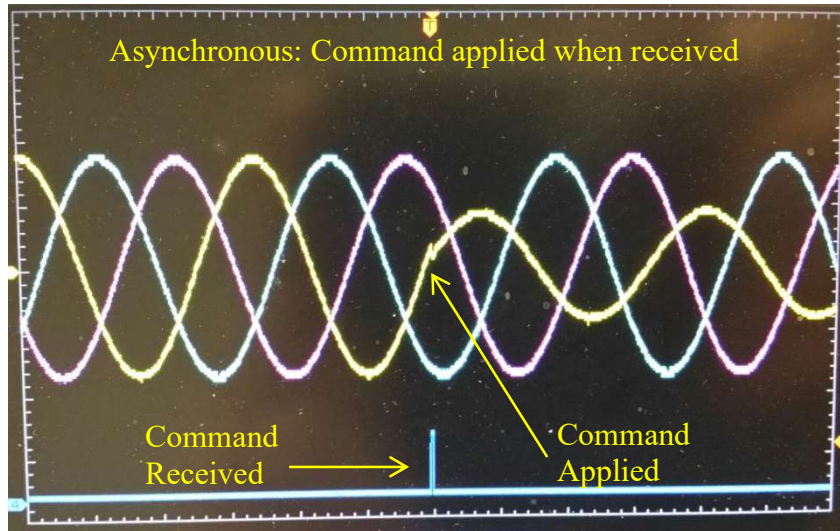

### 6.4.6 Establishing Per Phase & Multi-Phase Regulation Limits

When an instrument is multi-phase (either split- $\phi$  or 3- $\phi$ ), the outputs may be simultaneously programmed using line-line values. Line-neutral values are used when an instrument is single phase, DC, or an individual phase is being programmed.

Note in the example below that a 9410 can be configured for split- $\phi$  (AC GRID 1) with a 240VAC<sub>rms(L-L)</sub>/60Hz (line-line) output where each phase is automatically set to 120VAC<sub>rms(L-N)</sub> and the B-phase has a phase angle of 180°. Any of these settings may be adjusted. In addition, the same system has a second instrument “AC GRID 3” which is programmed as a 1- phase 100VAC<sub>rms(L-N)</sub>/50Hz output.

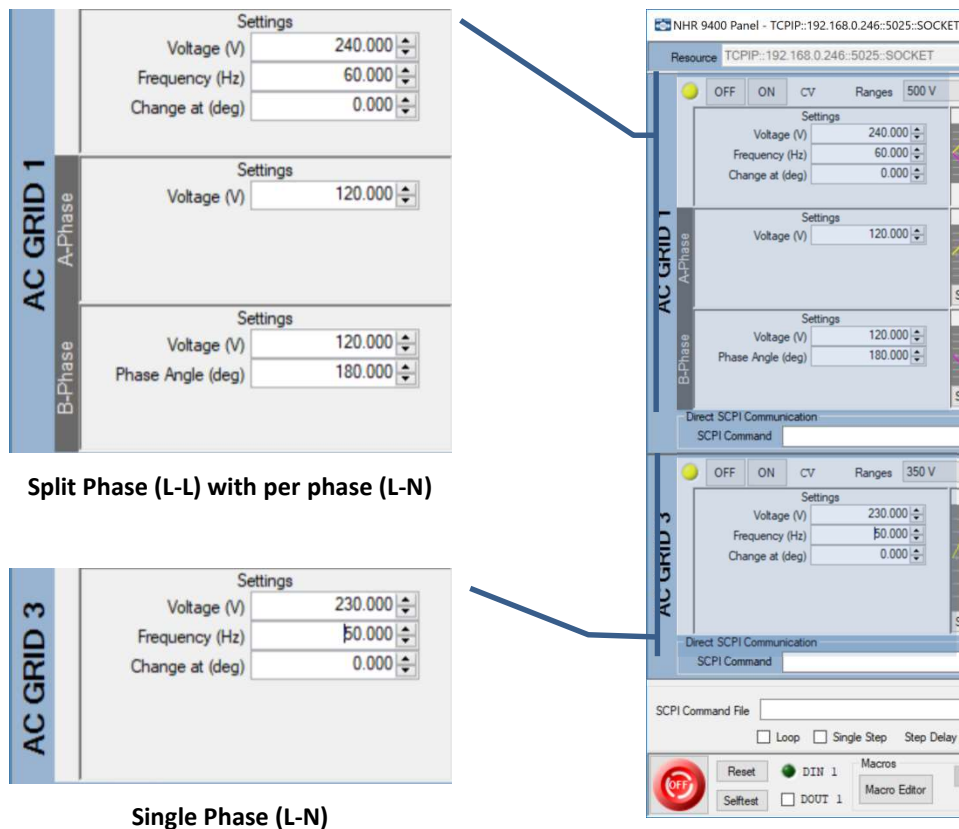

The figure displays three screenshots of the NHR 9400 Panel software interface. The top-left screenshot shows the settings for AC GRID 1, which is configured for split-phase (L-L) output. It has two sections: A-Phase with Voltage (V) at 240.000, Frequency (Hz) at 60.000, and Change at (deg) at 0.000; and B-Phase with Voltage (V) at 120.000 and Phase Angle (deg) at 180.000. The bottom-left screenshot shows the settings for AC GRID 3, which is configured for single-phase (L-N) output with Voltage (V) at 230.000, Frequency (Hz) at 50.000, and Change at (deg) at 0.000. The right screenshot is a larger view of the NHR 9400 Panel interface, showing the same settings for AC GRID 1 and AC GRID 3, along with other controls like OFF/ON buttons, CV, Ranges, and Direct SCPI Communication options. Blue arrows point from the individual settings windows to their respective locations in the main panel view.

**Split Phase (L-L) with per phase (L-N)**

**Single Phase (L-N)**

The panel automatically provides the programmable featured based on the supplied model and hardware operating modes selected.



**For AC outputs, the Change at (deg) is trigger angle when operating in Synchronous Mode. See Instrument Configuration Options for more information about Synchronous / Immediate commands.**

### Programming Single-Phase AC Limits

The 9410 and 9420 maintain the output voltage at the specified frequency. Change at degrees specified the phase angle trigger when operating with in a synchronous mode. Single phase voltages are always expressed as  $VRMS_{L-N}$ .

The 9420 is designed for unidirectional operation similar to traditional AC sources. Like these devices, a programmable current limit and power limit are provided which when exceeded cause the output voltage to be reduced.

Settings	
Voltage (V)	0.000
Frequency (Hz)	60.000
Change at (deg)	0.000

9410 AC Single Phase

Settings	
Voltage (V)	0.000
Current (A)	30.000
Power (kW)	4.000
Frequency (Hz)	60.000
Change at (deg)	0.000

9420 AC Single Phase

### Programming Multi-Phase AC Limits

The 9410 and 9420 supply a multi-phase programming mode simplifying the programming of multiple output channels when a balanced operating mode is desired.

Per phase values (labeled A-Phase, B-Phase, etc.) are programmed using  $VRMS_{L-N}$  similar to single-phase AC.

B-Phase (& C-Phase) additionally permits adjustments to the phase angle relationship between themselves & A-Phase.

Multiphase voltages are always expressed as  $VRMS_{L-N}$ .

For *split-phase* modes, Programming 240 ( $VRMS_{L-L}$ ) programs both A-Phase and B-Phase to 120  $VRMS_{L-N}$  as the phases are assumed to be 180° out of phase. The voltages are always assumed to be 180° out of phase.

For *three-phase* modes, Programming 208 ( $VRMS_{L-L}$ ) programs both A-Phase and B-Phase to 120  $VRMS_{L-N}$  as the phases are assumed to be 120° out of phase.

Settings	
Voltage (V)	0.000
Frequency (Hz)	60.000
Change at (deg)	0.000

A-Phase

Settings	
Voltage (V)	0.000

9410 AC Multi-Phase

Settings	
Voltage (V)	0.000
Current (A)	30.000
Power (kW)	12.000
Frequency (Hz)	60.000
Change at (deg)	0.000

A-Phase

Settings	
Voltage (V)	0.000
Current (A)	30.000
Power (kW)	4.000

9420 AC Multi-Phase



See section 4 for more about multi-phase programming relationships.



### Programming DC Limits

The 9410 and 9420 program instrument channels configured for DC voltage-output in an identical fashion. The unit accepts voltage, current, and power limits.

Settings	
Voltage (V)	0.000
Current (A)	30.000
Power (kW)	4.000

The 9420 is a DC Source and behaves similar to traditional DC sources in so far as it will maintain output voltage up to the current or power limit. When either a current or power limit is reached, the source reduces current (allowing the voltage to fall). The 9420 may optionally be configured as a Bi-Directional source in which it operates similar to a 9410.

The 9410 is a DC Grid and will maintain the output voltage allowing current to flow in either direction. Current may flow to the UUT (sourcing) or may flow from the UUT into the 9410 (sinking). When current limit is reached, the bi-directional DC channel will also reduce current however when sourcing, the voltage is allowed to fall whereas when sinking the voltage is allowed to rise.

### 6.4.7 Selecting AC Output Wave shapes

The 9410 and 9420 provides a standard (sine) and three (3) user programmable voltage wave shapes per channel. These are typically used for harmonics and non-pure sinusoidal output controls. The wave shapes are scaled and slewed using the regulation limits provided in the earlier section. For multi-phase operation, the relative phase angle is also taken into account when using user defined wave shapes.

A thumbnail representation of the wave shape is shown allowing the user to confirm the selection before pressing “Apply”.

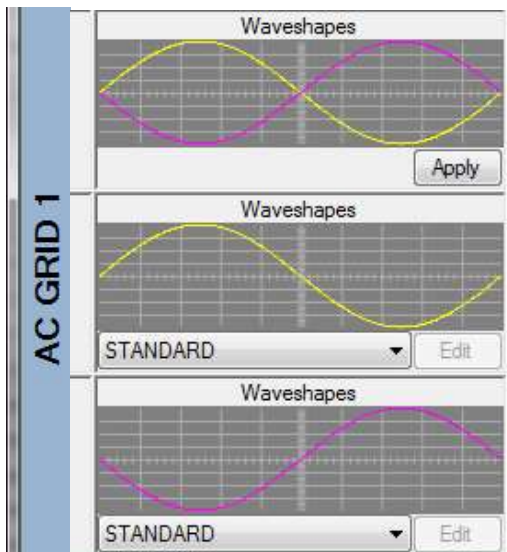


Figure 2 – Wave shape Controls

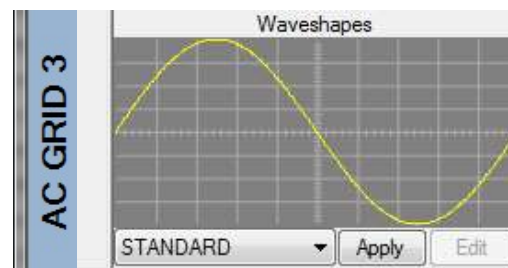



Figure 3 - Single Phase Wave Shape Controls


### *Selecting a wave shape*


To select an alternative output wave shape click on the selection tab below the desired phase and select Standard (sine) or one of the three (3) user definable wave shapes.

At power-up, the following wave-shapes are pre-loaded for use:

- User 1: Triangle
- User 2: n-Step Sine
- User 3: Clipped Sine

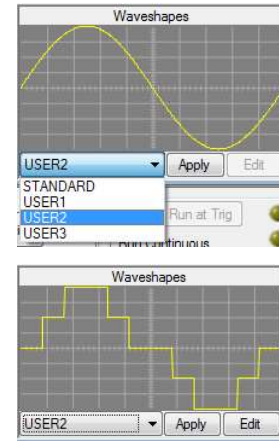

Pressing the apply button  will change the wave shape of the output to the selected wave shape immediately.

The user wave shapes may be edited by pressing the edit button. 

More information about the wave shape editor can be found in the advanced control options sections.

### 6.4.8 Measurements

The 9400 provides a number of last cycle measurements. All of the measurements for any given phase are synchronously captured including voltage, current, power, etc.

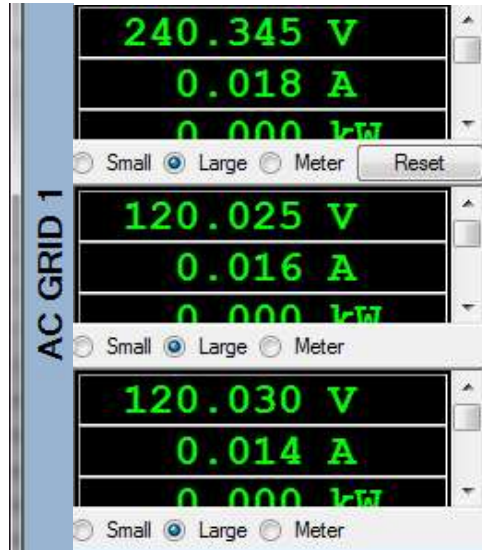


Figure 4 - Split Phase (L-L) with per phase (L-N)

The font size is adjustable and will display as many measurements as the screen size will allow.

Separate font size and meter views are possible on a per phase as well as a multi-phase basis.



Figure 5 - Single Phase (L-N)



See section 4 for more about multi-phase measurement relationships.



### 6.4.9 Output Thumbnail Waveform Capture

The NHR 9400 Panel tool uses the internal digitizer feature to synchronously capture and display 1-cycle for all voltage & current waveforms per instrument. This provides a real-time view of both the voltage and current behaviors of the UUT.

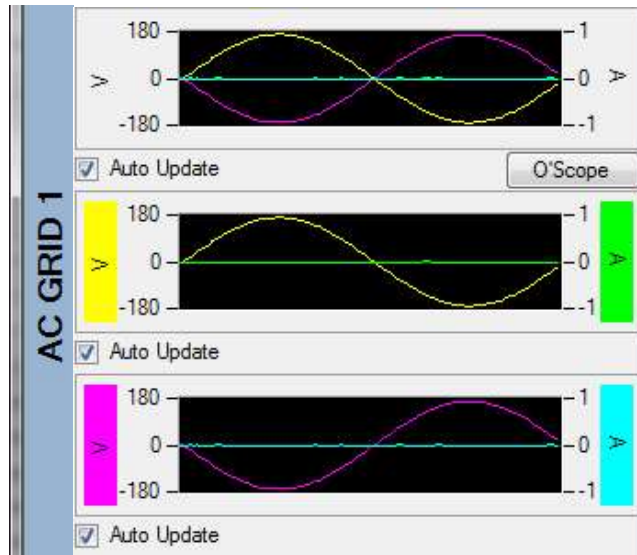


Figure 6 - Split Phase (L-L) with per phase (L-N)

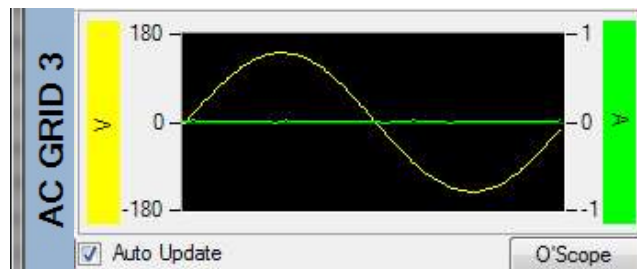


Figure 7 - Single Phase (L-N)

Higher resolution views are possible using the O'Scope panel which is accessed using the O'Scope button. More information about the built in digitizer and O'Scope panel can be found in the following Additional Controls section.



### 6.4.10 Editing an output wave shape

The NHR 9400 Series provides three (3) user definable wave shapes in addition to the standard (sine) output wave shape.

Select the user wave shape to be edited and press the edit button.




This will cause the wave shape editing tool to be displayed.

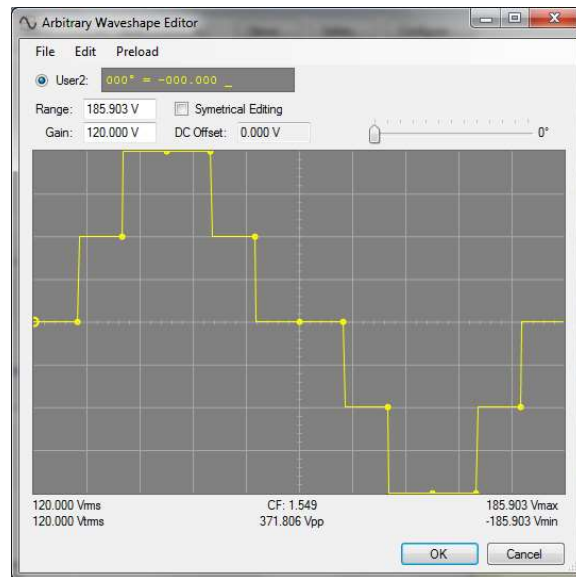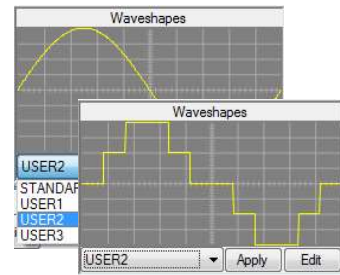


#### Menu Options

The File Menu – Allows a wave shape to be saved or recalled.


This allows the user to save their wave shapes and recall them or to copy the wave shape to other phases.

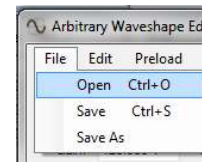

The Edit Menu – allows the wave shape to be edited on a point by point basis using anchors for a graphical approach or by points for direct value settings.

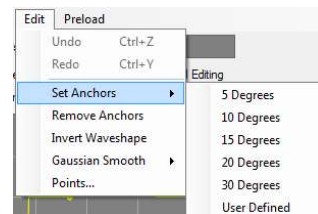

The Preload Menu – Preloads a pre-defined wave shape, use an equation, or generate a wave shape with harmonics.

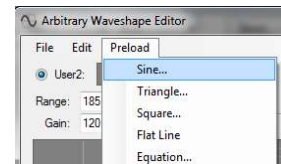


### 6.4.10.1 Wave shape example – line slap:


A line slap is an AC disturbance when two power lines are momentarily shorted together. This is represented by a narrow pulse which may transition across the 0V reference.

This type of wave shape is able to be generated using the NHR 9400 Panel.

Select User 1 and click “Edit” to edit the user wave-shape.  
Then load a sine shape to be modified by selecting  
Preload → Sine...




A dialog will appear with a sine wave shape. The dialog allows other modifiers to be applied such as adjusting the crest factor for the wave shape.

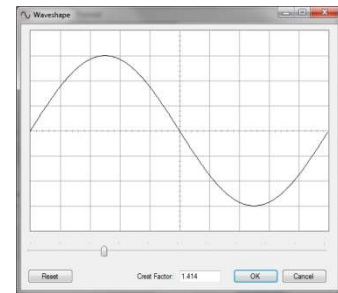


This example uses a standard sine as the starting point.

Click OK to close this dialog.

From the Edit Menu, click set anchors then select 5 degrees. This will place anchors on the wave shape allowing them to be graphically adjusted.



Grab the 90° anchor and drag it down to the desired level.

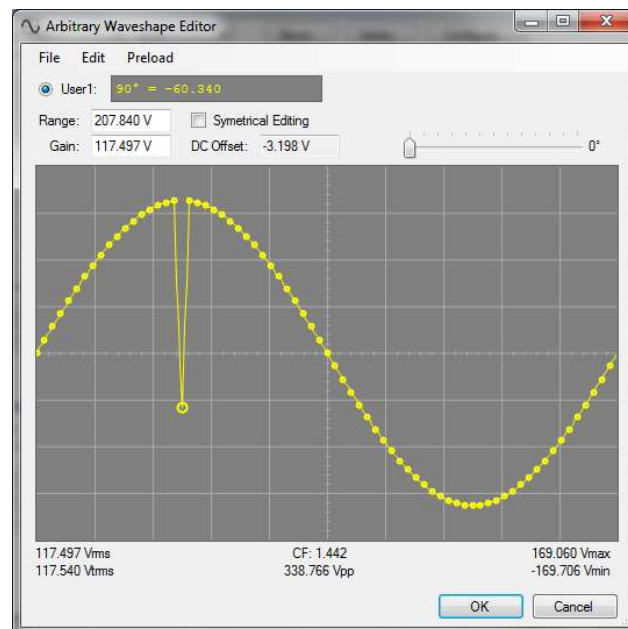

Note: The angle and amplitude are shown in text as well as graphically.

Press OK to load the wave shape into User 1.


*Wave shape example – Generating a line slap simulation (Cont'd)*

The wave shape has been loaded into user one and is now selectable.

To set the output to follow this new wave shape, click the Apply button.



The 9400 Series module will use this new wave shape for every new cycle.

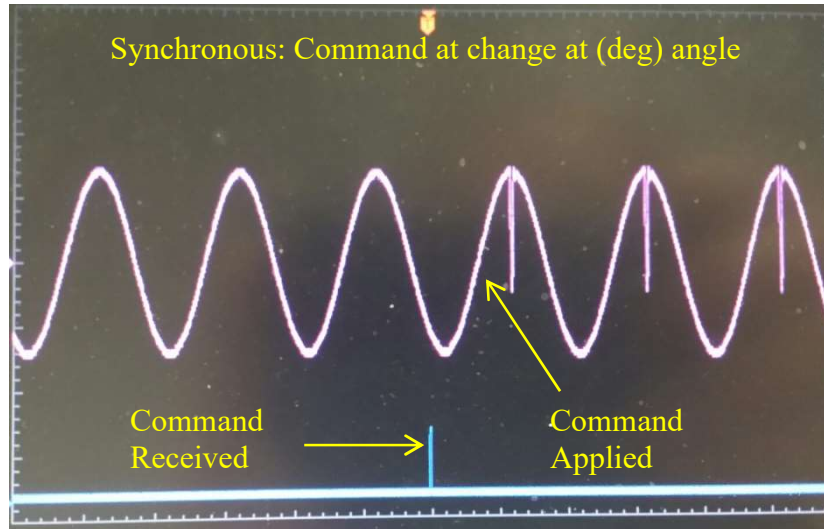

Any arbitrary wave shape can be created, downloaded to, & selected for any output.




**Macros are able to select wave shapes and adjust regulation limits providing single cycle-based or timed output control.**

**This example for timed or cycle-based transitions is provided in the Macro switching wave shapes section below as well**

### 6.4.10.2 Wave shape example – Formula Based:

The NHR 9400 panel permits direct manipulation of a wave-shape formula. This permits the user to specify the exact parameters mathematically. The next section provides a simple harmonic table approach which will automatically generate the mathematical formula needed.


Select User 1 and click “Edit” to edit the user wave-shape.  
Then load a sine shape to be modified by selecting  
Preload → Equation...

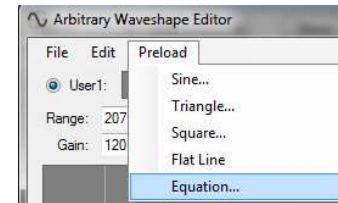


A dialog box will be presented allowing the user to specify a wave-shape formula along with a number of example formulas.


Enter the formula

Enter an equation that defines your waveshape here:  
`sind(1*deg)*100.000+sind(3*deg)*30.000`

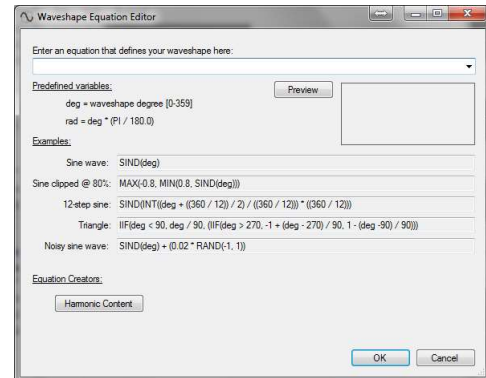

The above formula is equivalent to  $A \cdot \sin(\omega) + 0.3 \cdot A \cdot \sin(3\omega)$


Click the “Preview” button  to see a graphical representation of the newly generated wave-shape.

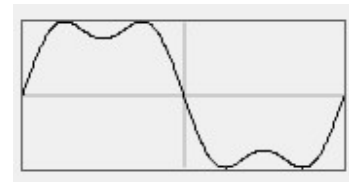

Press “OK” to close the formula editor, the pre-loaded wave-shape is displayed on the wave shape editor allowing further modification such as was described in the line-slap example.

If no further modification is desired,

- Save the wave-shape for later use (File → Save)
- Click “OK” to load this wave-shape to User 1

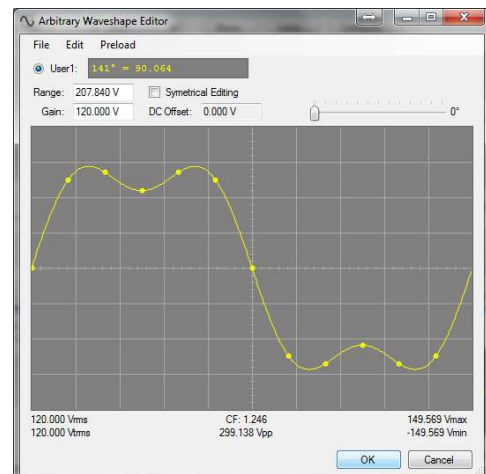

**Wave-shapes are shapes which are automatically scaled for voltage as well as frequency using normal setting controls.**


*Wave shape example – Formula Based (Cont'd)*

The wave shape has been loaded into user one and is now selectable.

To set the output to follow this new wave shape, click the Apply button.



The 9400 Series module will use this new wave shape for every new cycle.

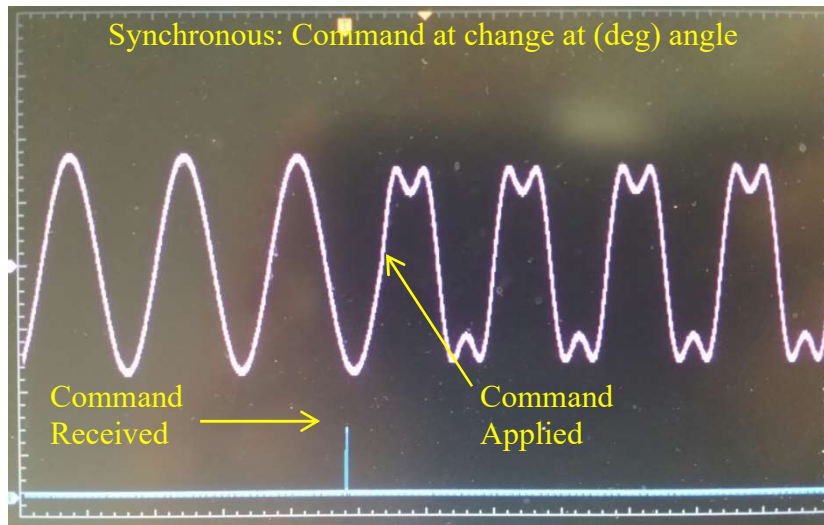

Any arbitrary wave shape can be created, downloaded to, & selected for any output.



**Wave-shapes are normalized and downloaded to the module. The 9400 then uses the RMS of the wave shape compared with the programmed RMS to properly scale the output voltage.**

**This allows the wave shape to follow the output frequency and reach the desired RMS level as well as permitting slew rate control.**

A list of supported formula options is included on the next two (2) pages.

*Wave shape example – Formula Based (Cont'd)*

The NHR 9400 Panel supports a wide range of mathematical operations which may be used to generate a formula-based wave shape. All operators and functions are case insensitive.

**Simple operations**

Symbol	Description	Example	Result
+	Add	1 + 1	2
-	Subtract	9 - 5	4
-	Unary negation	-(5 + 4)	-9
*	Multiply	3 * 6	18
/	Divide	9 / 2	4.5
\	Integer divide	9 \ 2	4
Sqr	Square root	sqr(64)	8
Mod	Modulo (remainder)	7 mod 4	3
^	Raise to power of	4 ^ 5	1024
!	Factorial	5!	120
Sin	Sine (angle in radians)	sin(pi/2)	1
Sind	Sine (angle in degrees)	sind(90)	1
Cos	Cosine (angle in radians)	cos(pi)	-1
Cosd	Cosine (angle in degrees)	cosd(180)	-1
Tan	Tangent (angle in radians)	tan(pi/4)	1
Tand	Tangent (angle in degrees)	tand(45)	1
Atan	Arc tangent (result in radians)	atan(1)	0.7853...
Atand	Arc tangent (result in degrees)	atand(1)	45
Abs	Absolute value	abs(-8)	8
Exp	e to the power of	exp(3)	20.08...
Log	Common log (base-10)	log(100)	2
Ln	Natural log	ln(100)	4.6051...
Ceil	Round up	ceil(6.2)	7
Int	Truncate to integer	int(6.8)	6
Frac	Fractional part	frac(3.125)	0.125
Sgn	Sign (returns -1, 0 or 1)	sgn(-9)	-1
Min	Minimum value	min(10, 3)	3
Max	Maximum value	max(1, 9, 2)	9
And	Bitwise AND	13 and 6	4
Or	Bitwise OR	13 or 6	15
Pi	The ratio of the circumference of a circle to its diameter	Pi	3.14159...



### Wave shape example – Formula Based (Cont'd)

The NHR 9400 Panel supports comparisons as well as random number generation.

#### Comparisons

Symbol	Description	Example	Result
>	Greater than	9 > 2	-1
<	Less than	7 < 4	0
==	Equal	(5 * 4) == (4 * 5)	-1
>=	Greater than or equal	3 >= 3	-1
<=	Less than or equal	10 <= 9	0
<>	Not equal	(9 / 2) <> (9 \ 2)	-1

#### Additional Functions

##### *operand1* **AndAlso** *operand2*

Returns true (-1) if *operand1* is non-zero and so is *operand2*. This is important in situations where *operand2* might evaluate something like a division by zero.

##### Inline If

Syntax: IIF(expr, truepart, falsepart)

- *expr* is the expression that is to be evaluated
- *truepart* is returned if the *expr* evaluates as true
- *falsepart* is returned if the *expr* evaluates as false

Example: iif(1 + 1 == 2, 4, 5) returns 4

##### *operand1* **OrElse** *operand2*

Returns true (-1) if either *operand1* or *operand2* is non-zero. **OrElse** uses short-circuit evaluation, which means that if *operand1* is a non-zero value, then OrElse will return a result without proceeding to evaluate *operand2*.

##### **Rand**([*x*])

##### **Rand**(*a*, *b*)

Example:

rand() No parameters

Returns a floating point random number between 0 and 1.

rand(x) where x > 0

Returns a floating point random number between 0 and 1, using x as seed. The number chosen is the next in a random sequence.

rand(x) where x < 0

Returns the same random number each time, using the parameter as seed.

rand(0)

Returns the same random number as the one previously generated.


`rand(a, b)`

Returns an integer random number between values  $a$  and  $b$ .

### 6.4.10.3 Wave shape example – Harmonics Entry:



The NHR 9400 panel permits direct entry of the value as well as phase angle for individual harmonics. The result is a pre-built wave-shape formula which may be further edited as described in the previous two sections.

Select User 1 and click “Edit” to edit the user wave-shape.  
Then load a sine shape to be modified by selecting  
Preload → Equation...

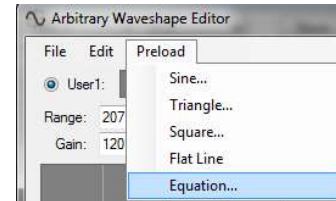

A dialog box will be presented allowing the user to specify a wave-shape formula along with a number of example formulas.

Select the harmonic content button.

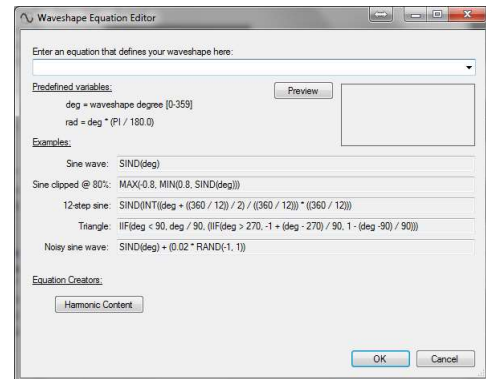

The Harmonics table may be pre-filled using standard shapes or individual harmonics may be provided.


Prefill

Sine Sawtooth Triangle Square

For this example set the 1<sup>st</sup> order harmonic to 100 with a 0° phase angle and the 3<sup>rd</sup> harmonic to 30 with a 25° phase angle by entering these values in the appropriate fields.

Order	Percent	Phase Shift
1	100.000	0
3	30.000	25
5	0.000	0

Finally click Create



Harmonics Content Creator

Prefill

Sine Sawtooth Triangle Square

Order	Percent	Phase Shift	Order	Percent	Phase Shift
1	100.000	0	2	0.000	0
3	0.000	0	4	0.000	0
5	0.000	0	6	0.000	0
7	0.000	0	8	0.000	0
9	0.000	0	10	0.000	0
11	0.000	0	12	0.000	0
13	0.000	0	14	0.000	0
15	0.000	0	16	0.000	0
17	0.000	0	18	0.000	0
19	0.000	0	20	0.000	0
21	0.000	0	22	0.000	0
23	0.000	0	24	0.000	0
25	0.000	0	26	0.000	0
27	0.000	0	28	0.000	0
29	0.000	0	30	0.000	0
31	0.000	0	32	0.000	0
33	0.000	0	34	0.000	0
35	0.000	0	36	0.000	0
37	0.000	0	38	0.000	0
39	0.000	0	40	0.000	0
41	0.000	0	42	0.000	0
43	0.000	0	44	0.000	0
45	0.000	0	46	0.000	0
47	0.000	0	48	0.000	0
49	0.000	0	50	0.000	0

Create Cancel

### Wave shape example – Harmonics Entry (Cont'd)

Note: The input field “Percent” may use percent or actual values from a power meter. The wave-shape is normalized allowing the 9400 to automatically scale the output based on the wave-shape equivalent RMS and the programmed RMS level.



The harmonics equation is displayed in the equation field allowing it to be further edited.

Enter an equation that defines your waveshape here:

`sind(1*deg)*100.000+sind(3*(deg+25))*30.000`

The above formula is equivalent to  $A \cdot \sin(\omega) + 0.3 \cdot A \cdot \sin(3\omega + 25^\circ)$ .


Click the “Preview” button to see a graphical representation of the newly generated wave-shape.

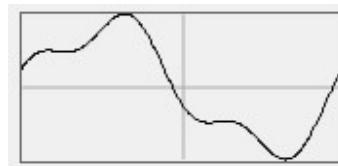

Press “OK” to close the formula editor, the pre-loaded wave-shape is displayed on the wave shape editor allowing further modification such as was described in the line-slap example.

If no further modification is desired,

- Save the wave-shape for later use (File → Save)
- Click “OK” to load this wave-shape to User 1

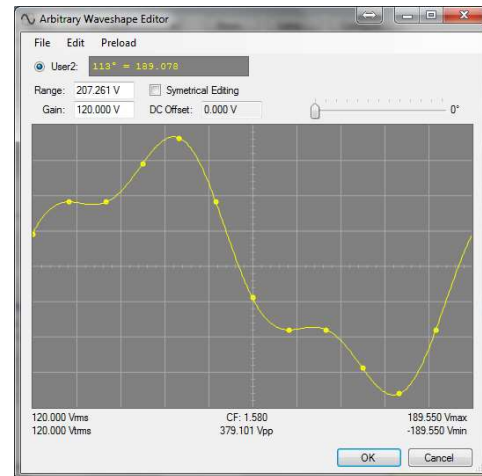


*Wave shape example – Formula Based (Cont'd)*

The wave shape has been loaded into user one and is now selectable.

To set the output to follow this new wave shape, click the Apply button.



The 9400 Series module will use this new wave shape for every new cycle.

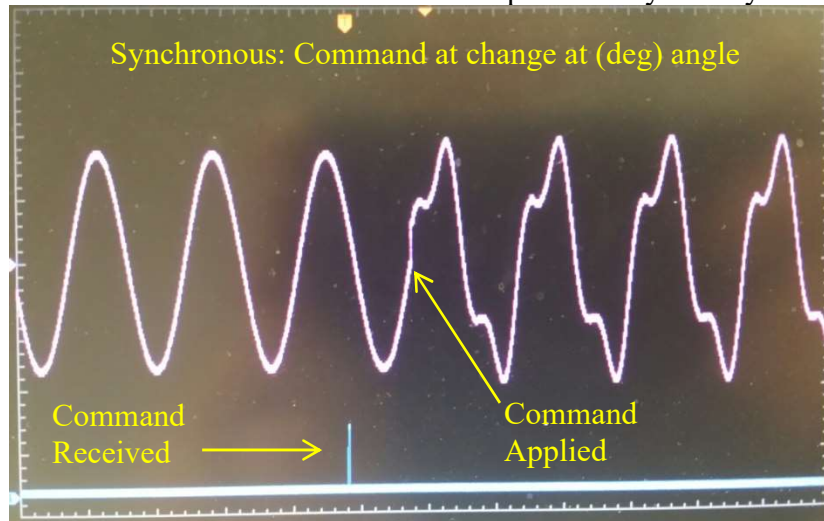

Any arbitrary wave shape can be created, downloaded to, and selected for any output.



**Wave-shapes are normalized and downloaded to the module. The 9400 then uses the RMS of the wave shape compared with the programmed RMS to properly scale the output voltage.**


**This allows the wave shape to follow the output frequency and reach the desired RMS level as well as permitting slew rate control.**

#### 6.4.10.4 Wave Shape Example – Simulating Phase Jump:


The NHR 9400 is able to support a programmed phase-jump allowing for simulations where the frequency is matched but the relative amplitude or phase angles jump.

This is programmed in a similar manor as the harmonics section above where the fundamental has been shifted by a specified phase angle.


Select User 1 and click “Edit” to edit the user wave-shape.  
Then load a sine shape to be modified by selecting  
Preload → Equation...

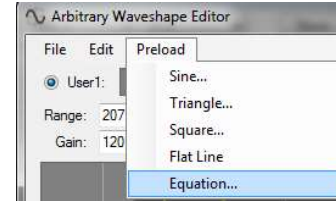

A dialog box will be presented allowing the user to specify a wave-shape formula along with a number of example formulas.

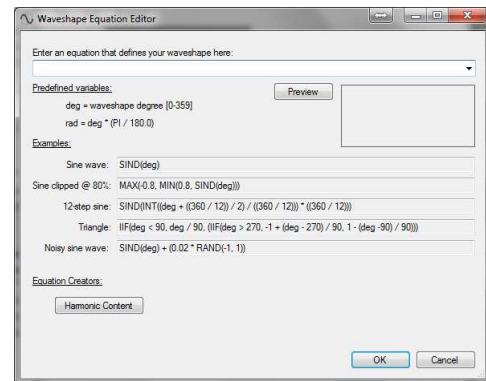

Select the harmonic content button.




The Harmonics table may be pre-filled using standard shapes or individual harmonics may be provided.



For this example set the 1<sup>st</sup> order harmonic to 100 with a -55° phase angle all other harmonics set to 0.

Order	Percent	Phase Shift
1	100.000	-55
3	0.000	0
5	0.000	0

This will generate a phase shifted waveshape in User 1.

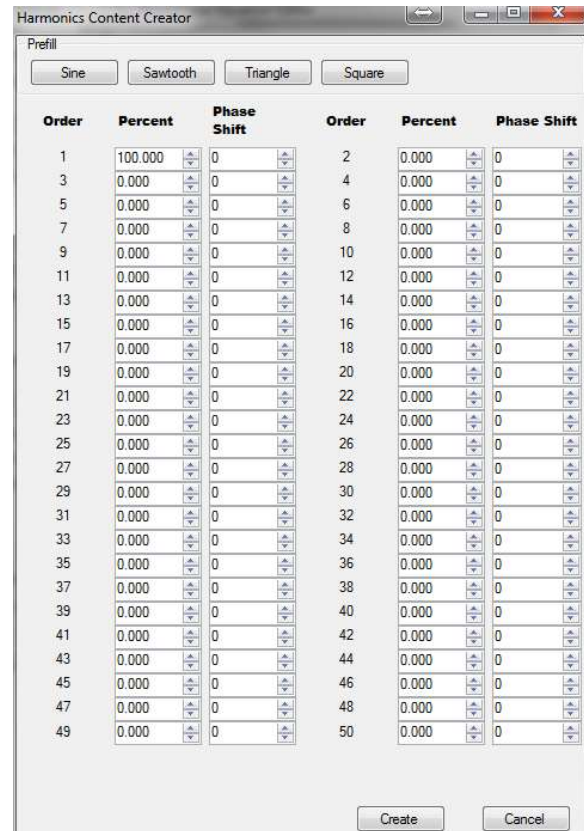


### *Wave Shape Example – Simulating Phase Jump (Cont'd)*

The User 1 now contains a sinusoidal wave-shape which is  $55^\circ$  offset from the standard wave-shape. The main panel may now be used to determine the frequency, amplitude, and the Change at (deg) angle the wave-shape will use.

Note: When the system is in synchronous mode, the new wave shape will be applied at the Change at (deg) angle. When the system is operating in immediate mode the wave shape will change based on when the command was received.

Refer to the Adjusting phase angle trigger section above for more information.

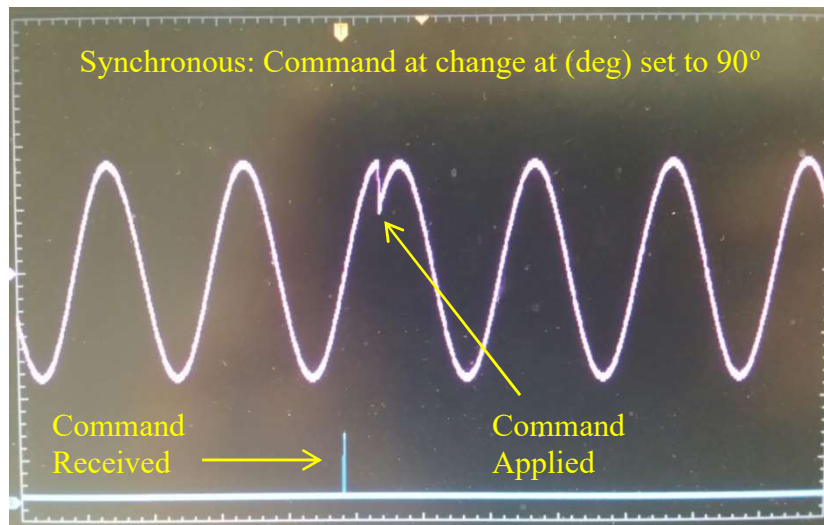

Any arbitrary wave shape can be created, downloaded to, and selected for any output.




**Macros may be used to simultaneously switch amplitude, frequency, wave-shape, and relative phase angles for multi-phase outputs.**



### 6.4.11 Accessing Oscilloscope View

Pressing the “O’Scope” button  opens an oscilloscope panel.

This utility accesses the internal hardware digitizer and provides many similar functions to an oscilloscope including measurement cursors, horizontal control (time) and vertical control (V/Div & A/Div) as well as cursor measurements.

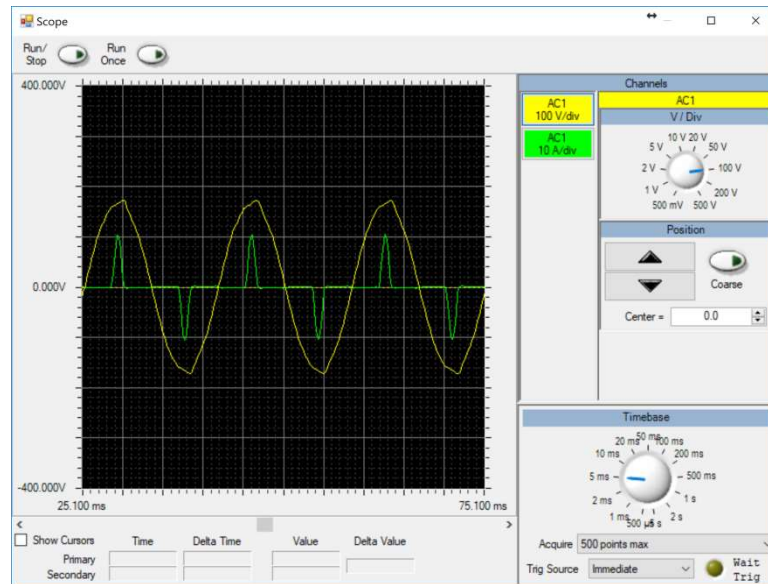


All captures start at the 0° reference phase angle for self-phase (in single phase operation) or the 0° reference phase angle for A-Phase (in multi-phase operation).

#### 6.4.11.1 Adjusting Vertical Scale and Position

The Oscilloscope allows separate scales per measurement channel as well as vertical positioning of each channel.


These are adjusted by first selecting the channel and then adjusting the knob and position as shown to the left.

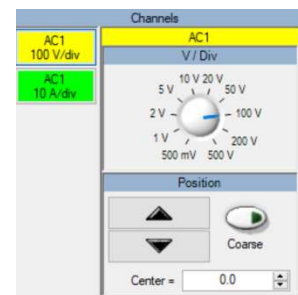

#### 6.4.11.2 Adjusting the Time-Base & Number of Samples


The Oscilloscope function captures between 500uS and 5s per division (1mS up to 50s). It is also possible to specify the maximum number of points between 500 & 50k points which are uniformly distributed across the entire capture time.

Adjusting the time base after a capture provides a waveform “Zoom” feature along with a scroll bar below the displayed waveform to adjust the horizontal view.

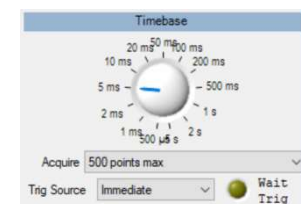

### 6.4.11.3 Capturing the Output


The Run/Stop works similar to an oscilloscope's "normal mode" which arms, triggers at the 0° reference, downloads the waveform data, and re-arms to capture the output again.

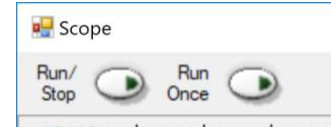

Run once works similar to an oscilloscope's "single sequence mode" which arms, triggers at the 0° reference, and downloads the waveform data one time only.

### 6.4.11.4 Cursors

Cursors are activated by checking on the "Show Cursors" check box in the lower left.

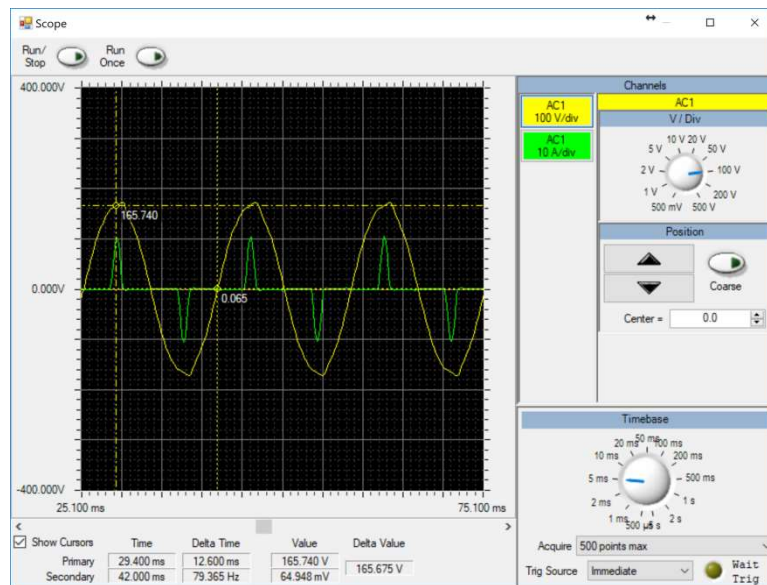

The primary cursor is placed using a left click.

The secondary cursor is placed using a right click.

The time & value of each cursor as well as the delta (in time, frequency, and value) is shown in text in the lower panel. The value of each cursor is also placed near the cursor measurement location on the waveform.

### 6.4.11.5 Store Waveform Data

The "Store" button in the upper-right of the dialog (not shown) will store the waveform data in a .csv file for import into a spreadsheet program like Excel.

### 6.4.11.6 Closing the Oscilloscope View

The oscilloscope view is closed by pressing the close window button.














## 7. MACROS & USAGE EXAMPLES

---

Macros are pre-programmed sequences which are downloaded and executed locally on the hardware in order to provide direct cycle and sub-cycle control. Macros provide deterministic cycle-based and time-based changes to settings across all instrument channels, to any phase, to wave-shape selection, and any other programmable setting.

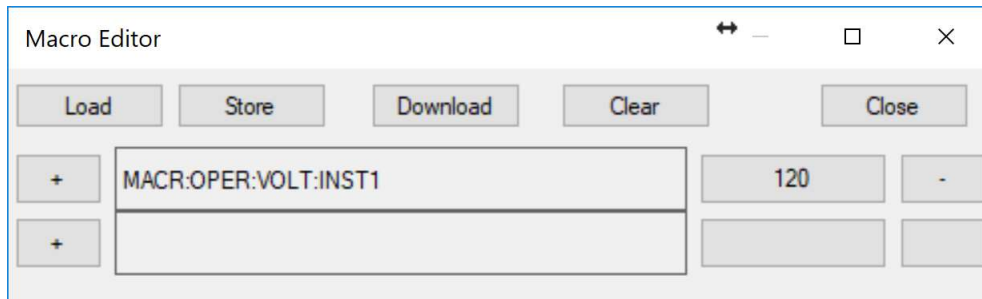

*Button Options below are described from left to right*

- |   |  |
|---|--|
|    | Retrieves a previously generated and stored macro file.        |
|  | Saves the current macro file for later use.                    |
|  | Downloads the current macro file to the hardware.              |
|  | Clears the macro editor screen (and macro loaded in hardware). |
|  | Closes the editor macro editor window.                         |
|  | Inserts a new macro step before current selected step.         |
|  | Editable value entry field.                                    |
|  | Deletes the selected macro step.                               |



**Macros are entered in a similar manor on the touch panel.  
Please ensure you read the following sections about instrument level  
control options before attempting to program a macro.**

## 7.1 Macro Organization

Macros are organized in an identical fashion when implemented on the touch panel, NHR 9400 Panel software, and have a nearly identical structure when programmed using SCPI or LabVIEW VIs. Refer to NHR 9400 Series Programmer's Reference Manual (09-0335) for the appropriate syntax and detailed descriptions of each command.


## 7.2 Macro Timing Control

### 7.2.1 AC Synchronization Angle

The macro permits changing the trigger angle used by the system.

When the channel is configured for immediate execution,  
the cycle counter uses this trigger angle and is commonly used to provide a  
synchronization angle before applying a new time-based regulation limit

When the channel is configured for synchronous execution,  
the cycle counter and regulation limits use the trigger angle.

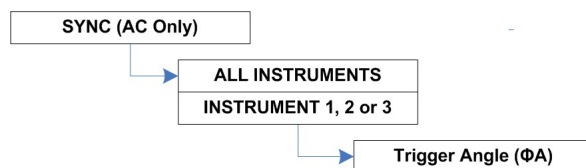

**See the Waits section for more information about cycle counting and the output characteristics based on Synchronous / Immediate modes.**

### 7.2.2 Waits


Macros may be set to wait for a trigger, until the slew is complete, for a specified period of time, or until number of cycles have completed.

**Wait Trigger:** Set externally to the Macro and causes pause until the trigger is received.

**Wait Slew:** Macro pauses until ALL outputs have finished any slew-rate based changes.

**Wait Time:** Macro pauses for a specified amount of time in seconds.

**Wait Cycles:** Macro pauses until the specified number of crossings of the trigger angle.

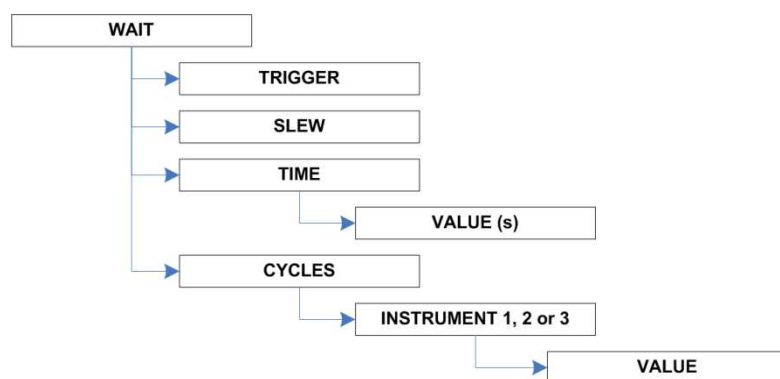

Example: A 9420-12 is configured for single-phase AC outputs, operating at 230V<sub>RMS</sub>/50Hz, and the following sequence is executed:

Sequence Steps	Immediate Execution	Synchronous Execution
WAIT → CYCLE → INSTRUMENT1 1	Waits for Next Angle For example, assume elapsed time after angle is 0mS	
OPERATION → VOLTAGE → INSTRUMENT1 100	Executes Command (Elapsed 0mS)	Executes at Next Angle (Elapsed 20mS)
WAIT → CYCLE → INSTRUMENT1 1	Waits for next Angle (Elapsed 20mS)	Waits for next angle (Elapsed 40mS)
OPERATION → VOLTAGE → INSTRUMENT1 230	Executes Command (Elapsed 20mS)	Executes at Next Angle (Elapsed 60mS)

### 7.3 Macro Programming –Output Control

Sequentially issued Macro **Operations** are merged automatically. This merging occurs until the same output is adjusted a second time or any other Macro command is issued.

Example using the 9420-12 operating in three phase mode:

Sequentially Issued Commands	Command Description	Merged
OPERATION→VOLTAGE→CHANNEL1 120 OPERATION→VOLTAGE→CHANNEL2 60	Sets A Phase to 120V <sub>RMS</sub> Sets B Phase to 60V <sub>RMS</sub>	Yes
OPERATION→VOLTAGE→ALL 208	Sets A/B/C to 120V <sub>RMS</sub>	No
OPERATION→VOLTAGE→CHANNEL1 60 OPERATION→VOLTAGE→CHANNEL2 120	Sets A Phase to 60V <sub>RMS</sub> Sets B Phase to 120V <sub>RMS</sub>	Yes
OPERATION→VOLTAGE→CHANNEL1 120 ????	Sets A Phase to 120V <sub>RMS</sub> ????	Depends on next command

#### 7.3.1 OPERATION


The operation section allows setting operational settings. It is important to understand that the macro language is independent of the hardware connected so it will present options which are not appropriate for all models (like INST3 on a single phase system) or setting frequency in DC.

Normally, operation settings in a macro are applied in the order received. To force the system to apply multiple settings at the same time, the OPERATION / APPLY MODE can be set to WAIT. This will stop ALL operation settings until an OPERATION / APPLY command is received. Once in OPERATION / APPLY MODE = WAIT, you MUST include the OPERATION / APPLY command after any new setting (or group of settings) or NOTHING will be set.

Set OPERATION / APPLY MODE = IMM to automatically apply OPERATION settings.




### 7.3.2 OPERATION - AC Regulation Limits

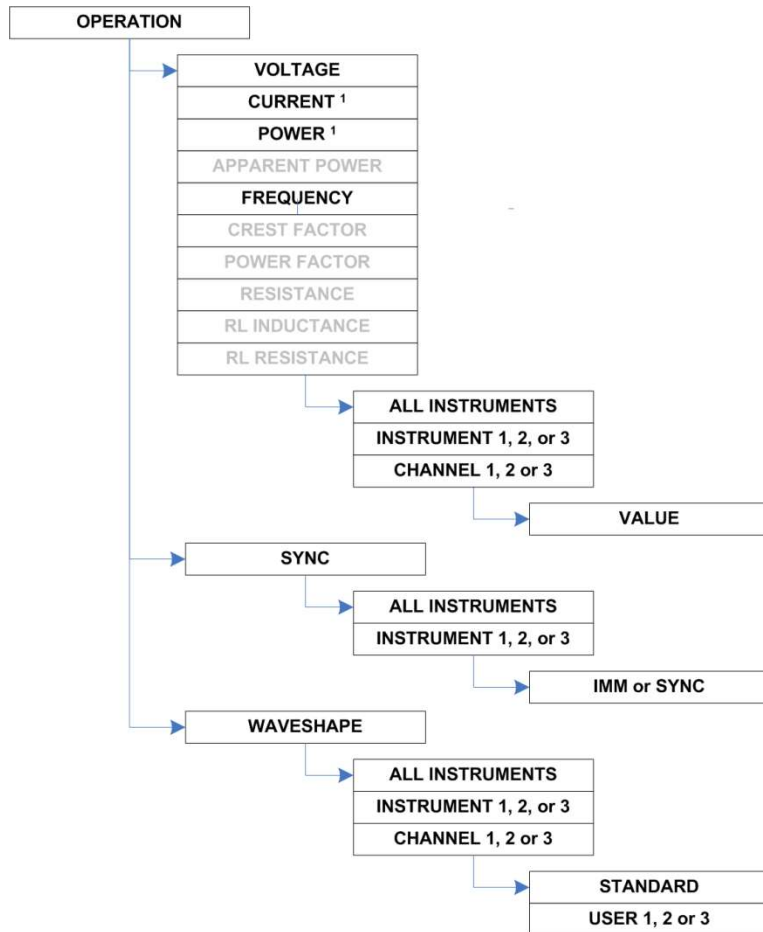

<sup>1</sup> Applies to AC Outputs of 9420


### 7.3.3 OPERATION - DC Regulation Limits

DC Outputs are programmable with Voltage, Current, Power, and Resistance limits.

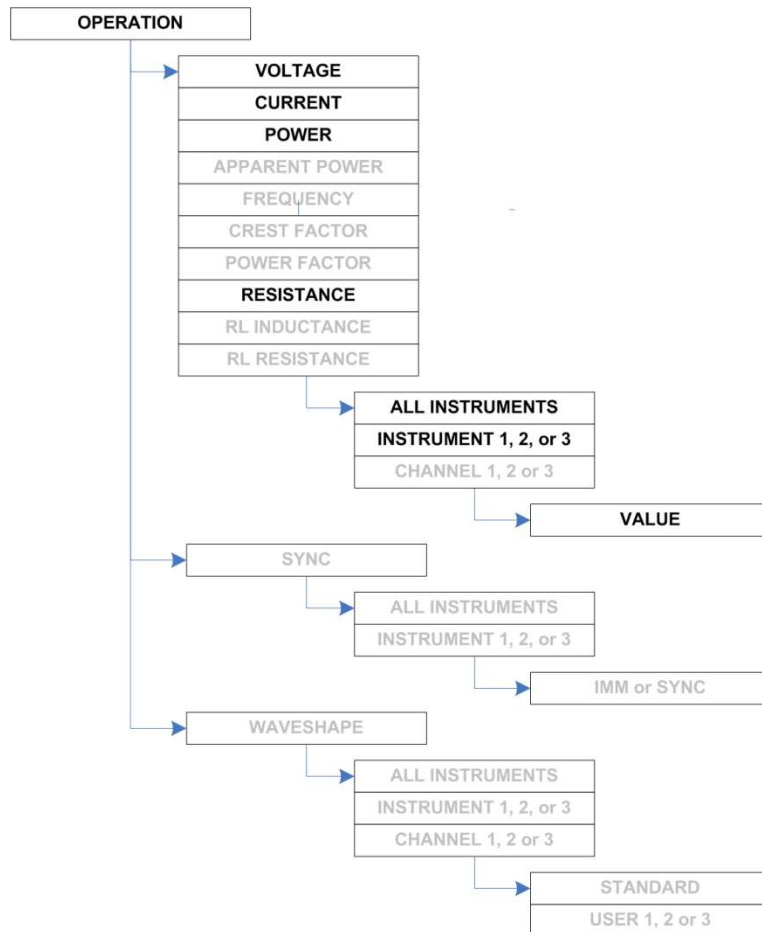


### 7.3.4 Slew Rate Controls

Slew rates may be adjusted and take effect immediately upon execution.

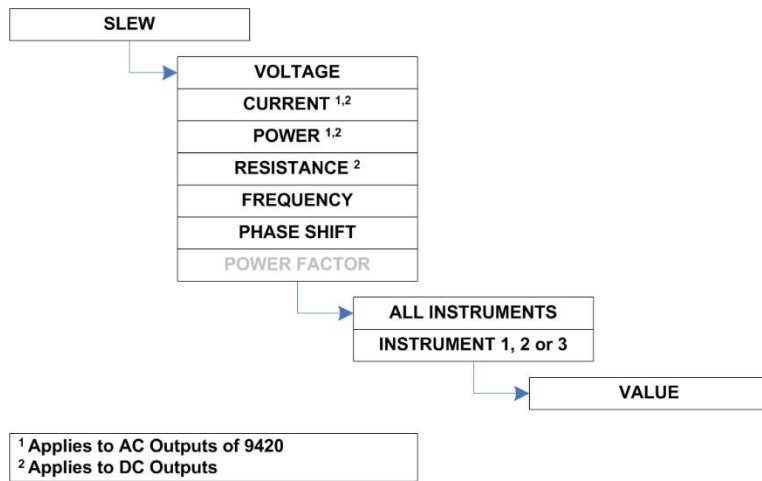

### 7.3.5 Multi-Phase Relative Angle Adjustment

Macros may adjust the relative phase angles for multi-phase AC outputs. These commands act immediately and will start slewing the phase angle relationship of the outputs based on SLEW:PHASE.

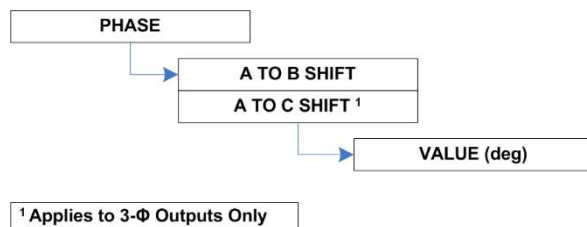


### 7.3.6 Sub-Cycle Voltage Notches

Creating a sub-cycle notch requires four commands to be issued.

```

NOTCH→START→ANGLE
NOTCH→START→VOLTAGE
NOTCH→STOP→ANGLE
NOTCH→STOP→VOLTAGE

```

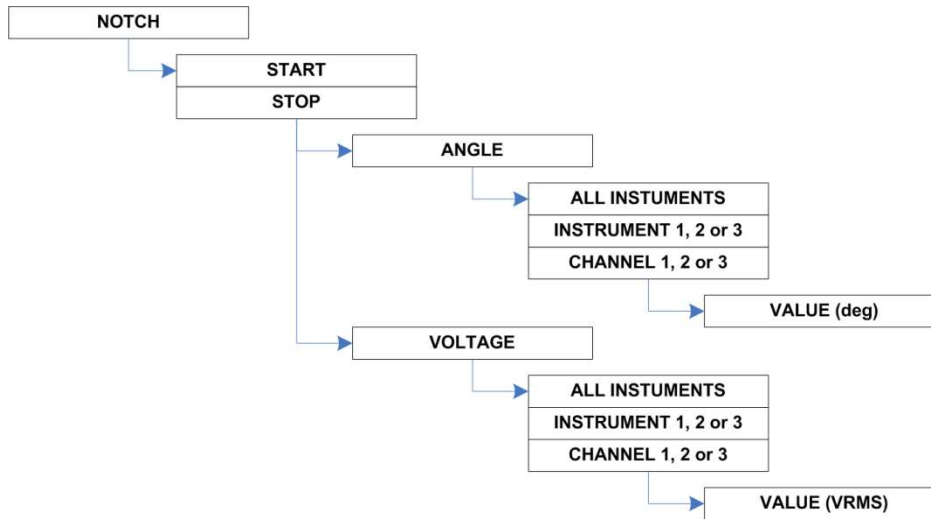

These commands are compressed into a single command and will be executed based on the synchronization mode selected, uses fewer hardware macro command space and provides a higher precision when compared to using an immediate time-based method.


Example assumes Frequency of 50Hz	
Using Notch (1 HW Command)	Using Immediate Mode (6 HW Commands)
NOTCH→START→ANGLE 60 NOTCH→START→VOLTAGE 60 NOTCH→STOP→ANGLE 270 NOTCH→STOP→ANGLE 120	OPERATION→SYNC→INSTRUMENT1 IMM SYNC→ISNTRUMENT1 60 WAIT→CYCLE→INSTRUMENT1 1 OPERATION→VOTLAGE→INSTRUMENTN1 60 WAIT→TIME 0.1 OPERATION→VOTLAGE→INTRUMENT1 120

## 7.4 Macro Programming – Infrequency Used Commands

The commands in this section are supported even though they are not generally implemented within Macros.

### 7.4.1 Changing the Output (ON/OFF) State


The output of the system may be turned on or off on a per channel basis.

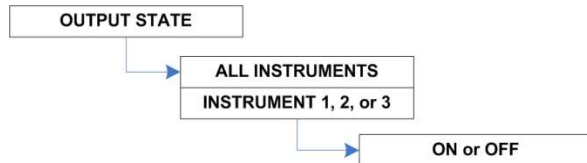

**Output state also controls the UUT side contactors .**

### 7.4.2 Changing Set & Measurement Ranges

Set & measurement ranges may be adjusted within a macro.

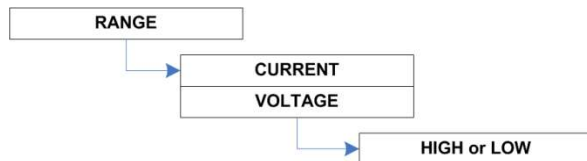

### 7.4.3 Accessing the Measurement System

A Macro may:

**Trigger a measurement** by the internal measurement system.


INIT IMM (Initiate Immediate)

INIT TRIG (Initiate Trigger)

The system takes an internal measurement when instructed (using previously set aperture settings) allowing the results and digitized waveforms to be downloaded by a customer's application.

**Reset** accumulated measurement values.


**Energy Star Measurement** (9420 only)

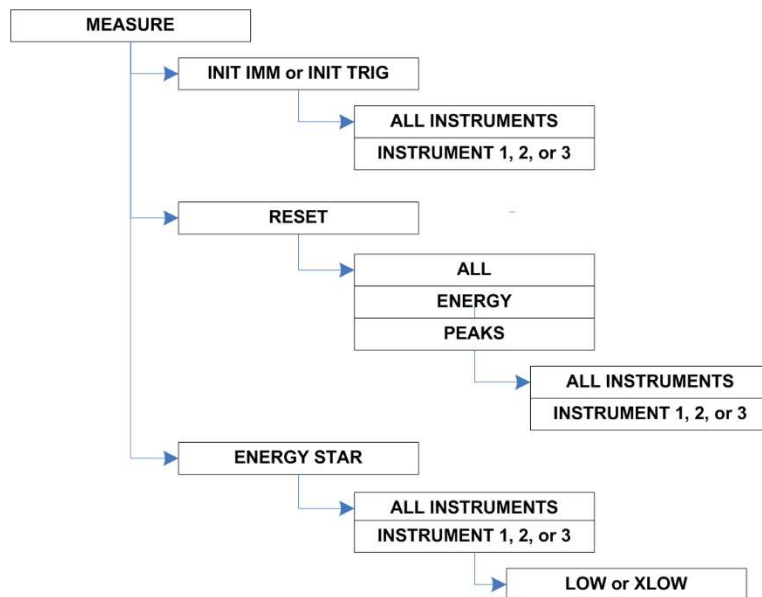


## 7.5 9410 & 9420 Macro Usage Examples

### 7.5.1 Simulating Voltage Interruptions, Sags, & Swells

While the causes of interruptions, sags, swells, and even brown-outs may be different, all of the conditions are similar in so far as they represent a change in voltage levels for a period of time.



To simulate an interruption, sag, or swell for either an amount of time or cycle(s), open the Macro editor and click on the first empty cell to insert the first step.

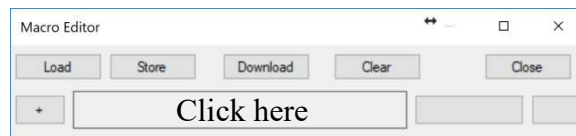

The first step commonly selects if the macro will execute commands immediately or synchronously with the A Phase (or self-phase for 1 phase outputs). This setting applies only the following macro commands and does not affect manual operation.

Step 1: Determine the number of cycles that should occur before the disturbance:  
Select “Wait” → “Cycle” → (Instrument) → & provide the number of wait cycles.

Select	Select	Select	Edit Value
Choose from list.	Choose from list.	Choose from list.	
<input type="checkbox"/> Measure <input type="checkbox"/> Notch <input type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input checked="" type="checkbox"/> Wait	<input checked="" type="checkbox"/> Cycles <input type="checkbox"/> Slew <input type="checkbox"/> Time <input type="checkbox"/> Trigger	<input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3	Wait Cycles <input type="text" value="1"/>
Cancel	Cancel	Cancel	Ok Cancel



Wait cycles always counts the number of transitions at the angle specified by Change at (deg).

The above step serves two functions. First it will ensure that some number of cycles occur before making the change. Second, it will align the following changes based on the change at (deg) angle specified. This angle may also be adjusted in the macro before waiting for the pre-disturbance cycles to complete.



Step 2: Determine if the changes occur immediately or synchronously at the set angle. Select “Operation” → “Sync” → (Instrument) → & Select IMM or SYNC

Select Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait Cancel	Select Choose from list. <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance <input checked="" type="checkbox"/> Sync <input type="checkbox"/> Waveshape Cancel	Select Choose from list. <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 Cancel	Edit Value Synchronize SYNC IMM SYNC Ok Cancel
---	---	---	---

Selecting Immediate (IMM) all the following operation commands are applied immediately after any wait (time or cycles) expires.



Selecting Synchronous (SYNC): The following operation commands are applied at the next changed at (deg) phase after the wait expires. In general, the command is applied on the next cycle.

Step 3: To set the disturbance voltage, click on the next open cell and select: “Operation” → “Voltage” → (Instrument or  $\phi$ ) → & supply the value desired.

Select Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait Cancel	Select Choose from list. <input checked="" type="checkbox"/> Voltage <input type="checkbox"/> Current <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance Cancel	Select Choose from list. <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 Cancel	Edit Value Voltage (V) 60 Ok Cancel
---	--	---	--

Step 4: Specify the time or cycle(s) the disturbance is to occur, Click the next open cell & select: “Wait” → “Cycle” → (Instrument) → & provide the number of cycles.

Select Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input checked="" type="checkbox"/> Wait Cancel	Select Choose from list. <input checked="" type="checkbox"/> Cycles <input type="checkbox"/> Slew <input type="checkbox"/> Time <input type="checkbox"/> Trigger Cancel	Select Choose from list. <input type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 Cancel	Edit Value Wait Cycles 1 Ok Cancel
---	---	--	---



In IMM Mode: Wait time will use actual time.

In SYNC Mode: Wait Time will be rounded up to the next complete cycle.

Step 5: Return the output to nominal, select the next open cell then select:  
 “Operation” → “Voltage” → (Instrument or  $\phi$ ) → & supply the value desired.

Select Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait Cancel	Select Choose from list. <input checked="" type="checkbox"/> Voltage <input type="checkbox"/> Current <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance Cancel	Select Choose from list. <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 Cancel	Edit Value Voltage (V) 120 Ok Cancel
---	--	---	---

The macro is now complete.

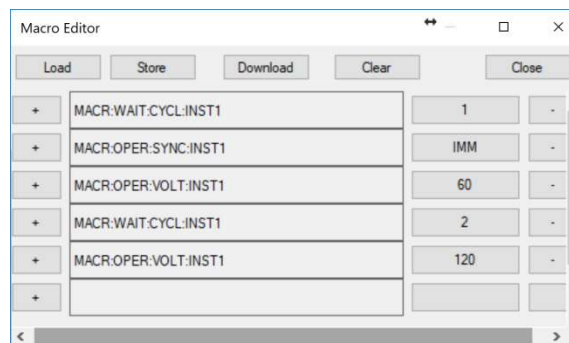


Figure 8 - Immediate Mode


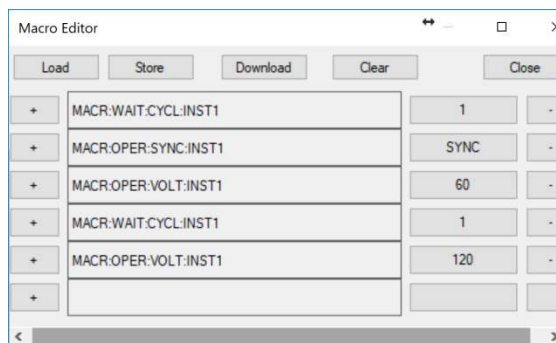


Figure 9 - Synchronous Mode



Running the above macro results in the following output.

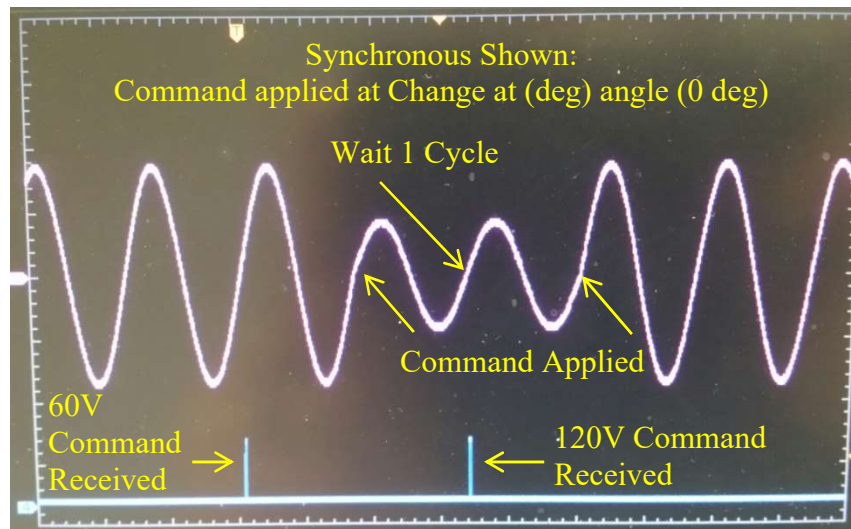



Example shows Sync Mode where the command is applied, Waits for 1 full cycle then releases the next command (120V) which is applied at the next change at (deg) angle.

### *Multi-Phase output interruptions, sags, & swells*



The same process is used to adjust individual phases or all phases of a multi-phase output. Below shows the macro's used to produce a 2-cycle sag on an individual phase, on both phases simultaneously, and on both phases with the sag starting at 90°.

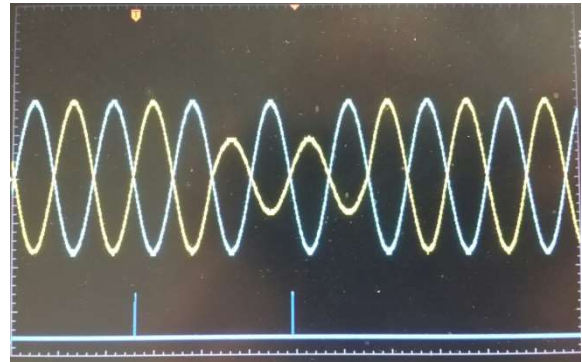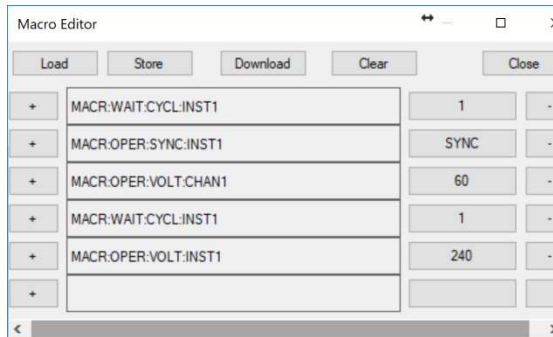

Affecting only one phase (Split Phase Shown)

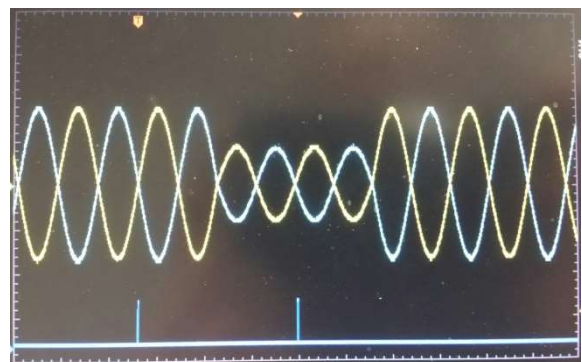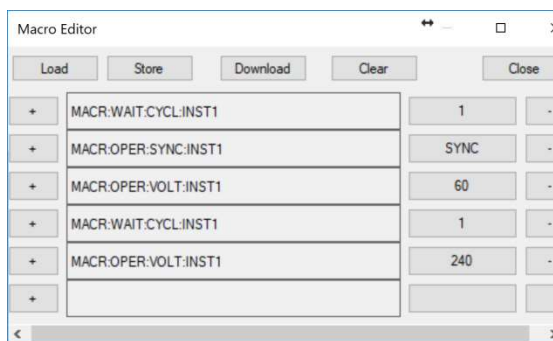

Affecting both phases (Split Phase Shown)

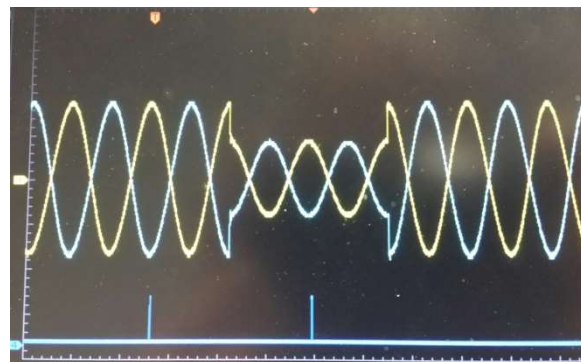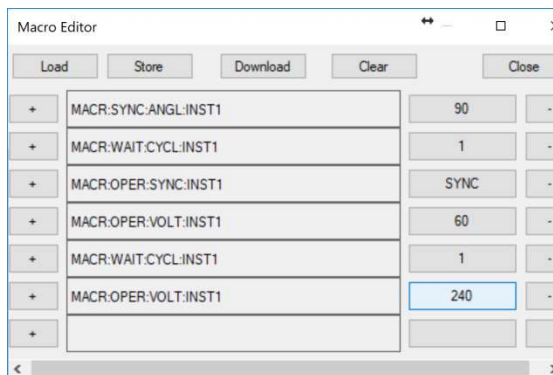

Affecting both phases with 90° change angle

### 7.5.2 Simulating Sub-Cycle Changes

This section will describe how to use a macro-notch to provide precise control of the amplitude, phase angle, and slew rate of a sub-cycle disturbance.

There are multiple methods available for simulating sub-cycle changes. Which method is best depends on the characteristics of the sub-cycle change desired.

#### *Immediate Mode & Wait Time Method*

This approach is similar to the previous section and is best suited for programmed disturbances which cross over the 0° internal reference for the A-Phase in multi-phase operation or the self-phase for single phase operation. To implement this approach use the examples shown in the previous section and replace step 4 with a “WAIT”→“TIME”.

#### *Selecting an alternate (user) wave shape*

This approach is similar to the previous section and is best suited for simulating disturbances with quick changes (such as line slap). This approach will be discussed in the next section “Switching Wave Shapes”.

#### *Macro Notch*


A Notch allows precise and slew-rate controlled sub-cycle changes between the 0° & 360° internal reference for the A-Phase in multi-phase operation or the self-phase for single phase operation. Notch may be used along with any wave-shapes resulting in a precise control the amplitude, phase angle, and slew rate of change making up the disturbance.

A notch consists of four (4) programming steps including:

- Start Angle
- Starting Voltage
- End Angle
- Ending Voltage

As mentioned above, slew rate is applied from the pre-notch voltage to the starting voltage as well as from the starting voltage to the ending voltage.

To simulate a notch, open the Macro editor and click on the first empty cell.

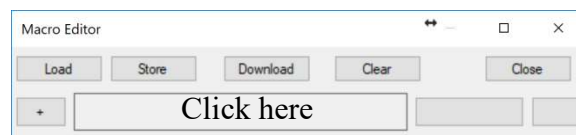

Step 1: Specify the starting angle which will be used to create the notch. Select the first cell then: “Notch” → “Start” → “Angle” → (Instrument or  $\phi$ ) → & the start angle.

Select	Select	Select	Select
Choose from list.	Choose from list.	Choose from list.	Choose from list.
<input type="checkbox"/> Measure <input checked="" type="checkbox"/> Notch <input type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait	<input type="checkbox"/> Start <input type="checkbox"/> Stop	<input checked="" type="checkbox"/> Angle <input type="checkbox"/> Voltage	<input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 <input type="checkbox"/> Channel 1 <input type="checkbox"/> Channel 2 <input type="checkbox"/> Channel 3
Cancel	Cancel	Cancel	Cancel

Edit Value  
 Angle (deg)  
 90  
 Ok Cancel

Step 2: Specify the starting voltage the notch should reach. Select the next cell then: “Notch” → “Start” → “Voltage” → (Instrument or  $\phi$ ) → & the target voltage.

Select	Select	Select	Select
Choose from list.	Choose from list.	Choose from list.	Choose from list.
<input type="checkbox"/> Measure <input checked="" type="checkbox"/> Notch <input type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait	<input type="checkbox"/> Start <input type="checkbox"/> Stop	<input type="checkbox"/> Angle <input checked="" type="checkbox"/> Voltage	<input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3 <input type="checkbox"/> Channel 1 <input type="checkbox"/> Channel 2 <input type="checkbox"/> Channel 3
Cancel	Cancel	Cancel	Cancel


Edit Value  
 Voltage (V)  
 60  
 Ok Cancel

Step 3 & 4: Repeat the above selecting Stop angle and voltage.  
 For this example: 120° & 120VAC<sub>rms</sub>.




Wait cycles always counts the number of transitions at the angle specified by Change at (deg).

The macro is now complete and should look like the one shown below.


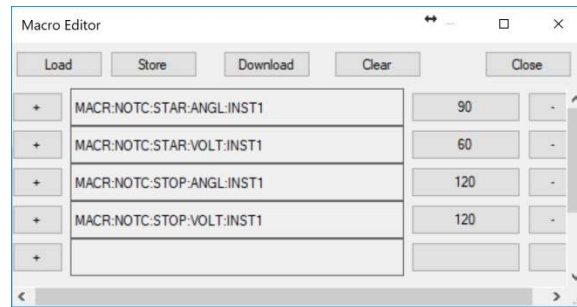


Running the above macro results in the following output.

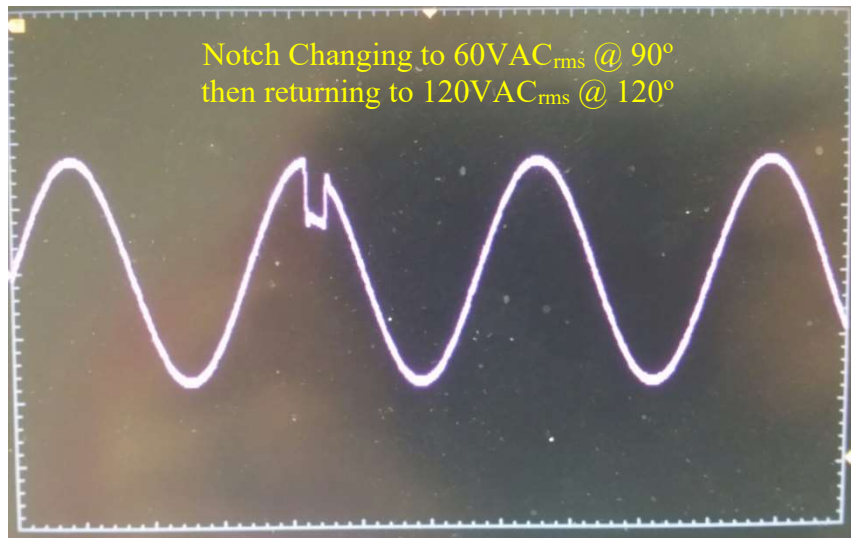

### Multi-Phase notches

The same process is used to notch individual phases of a multi-phase output. Below shows a notch applied to A-Phase of a split phase output similar to the example above.

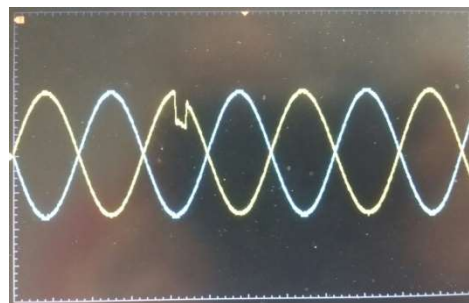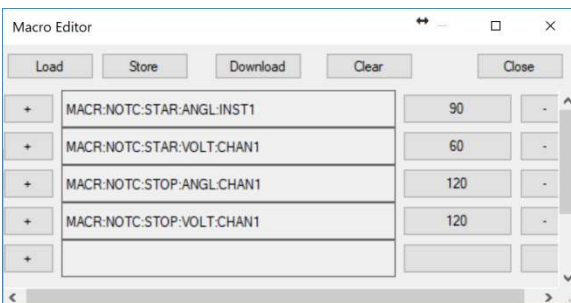



### 7.5.3 Switching Waves Shapes


This section will describe how to use a macro to switch wave shaped either based on cycles or time. Switching wave shapes is commonly used for a line-slap simulation and may also be used to switch in a noisy sin, a harmonics distorted wave shape, or any other wave shape which has been loaded into the module.

Step 1: Ensure the custom voltage wave shape is loaded into USER 1.  
See the “Editing an output wave shape” for information in creating output wave shapes.




This macro will switch between the standard (sin) and a pre-loaded user voltage wave shapes. This technique will allow any of the of the pre-loaded wave shapes to be applied in a similar manor.

To switch between wave-shapes, open the Macro editor and click on the first empty cell.

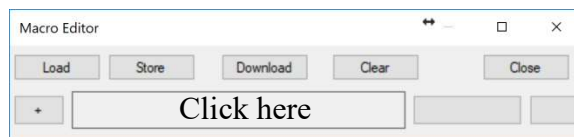

Step 2: Determine the number of cycles that should occur before the disturbance:  
Select “Wait” → “Cycle” → (Instrument) → & provide the number of wait cycles.

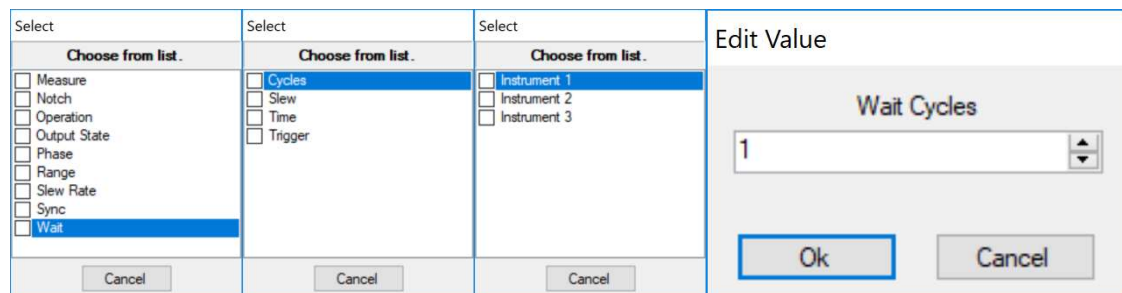



Step 3: Determine if the changes occur immediately or synchronously at the set angle. Select “Operation” → “Sync” → (Instrument) → & Select IMM or SYNC.

Select	Select	Select	Edit Value
Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait	Choose from list. <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance <input checked="" type="checkbox"/> Sync <input type="checkbox"/> Waveshape	Choose from list. <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3	Synchronize SYNC IMM SYNC Ok Cancel

Selecting Immediate (IMM) all the following operation commands are applied immediately after any wait (time or cycles) expires.



Selecting Synchronous (SYNC): The following operation commands are applied at the next changed at (deg) phase after the wait expires. In general, the command is applied on the next cycle.

Step 4: Determine the new output wave shape to be used wave shape. Select “Operation” → “Waveshape” → (Instrument or  $\phi$ ) → select the output shape.

Select	Select	Select	Edit Value
Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait	Choose from list. <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance <input type="checkbox"/> Sync <input checked="" type="checkbox"/> Waveshape	Choose from list. <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3	Waveshape USER1 STANDARD USER1 USER2 USER3

Step 5 (Optional): Specify the time or cycle(s) the disturbance is to occur. Click the next open cell & select: “Wait” → “Cycle” → (Instrument) → & provide the number of cycles.

Select	Select	Select	Edit Value
Choose from list. <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input checked="" type="checkbox"/> Wait	Choose from list. <input checked="" type="checkbox"/> Cycles <input type="checkbox"/> Slew <input type="checkbox"/> Time <input type="checkbox"/> Trigger	Choose from list. <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3	Wait Cycles 1 Ok Cancel




In Synchronous (SYNC) operation: Wave shapes requested for the same phase are applied on sequential cycles and do not need a cycle counter.

Step 6: Determine the next output wave shape to be used wave shape.  
Select “Operation” → “Waveshape” → (Instrument or  $\phi$ ) → select the output shape.

Select	Select	Select	Edit Value
<b>Choose from list.</b> <input type="checkbox"/> Measure <input type="checkbox"/> Notch <input checked="" type="checkbox"/> Operation <input type="checkbox"/> Output State <input type="checkbox"/> Phase <input type="checkbox"/> Range <input type="checkbox"/> Slew Rate <input type="checkbox"/> Sync <input type="checkbox"/> Wait	<b>Choose from list.</b> <input type="checkbox"/> Power <input type="checkbox"/> Apparent Power <input type="checkbox"/> Frequency <input type="checkbox"/> Crest Factor <input type="checkbox"/> Power Factor <input type="checkbox"/> Resistance <input type="checkbox"/> RL Inductance <input type="checkbox"/> RL Resistance <input type="checkbox"/> Sync <input checked="" type="checkbox"/> Waveshape	<b>Choose from list.</b> <input type="checkbox"/> All Instruments <input checked="" type="checkbox"/> Instrument 1 <input type="checkbox"/> Instrument 2 <input type="checkbox"/> Instrument 3	<b>Waveshape</b> STANDARD STANDARD USER1 USER2 USER3
Cancel	Cancel	Cancel	



The macro is now complete and provides the output as shown below.

Macro Editor		
Load Store Download Clear Close		
+	MACR:WAIT:CYCL:INST1	1 -
+	MACR:OPER:SYNC:INST1	SYNC -
+	MACR:OPER:WAV:INST1	USER1 -
+	MACR:WAIT:CYCL:INST1	1 -
+	MACR:OPER:WAV:INST1	STANDARD -
+		

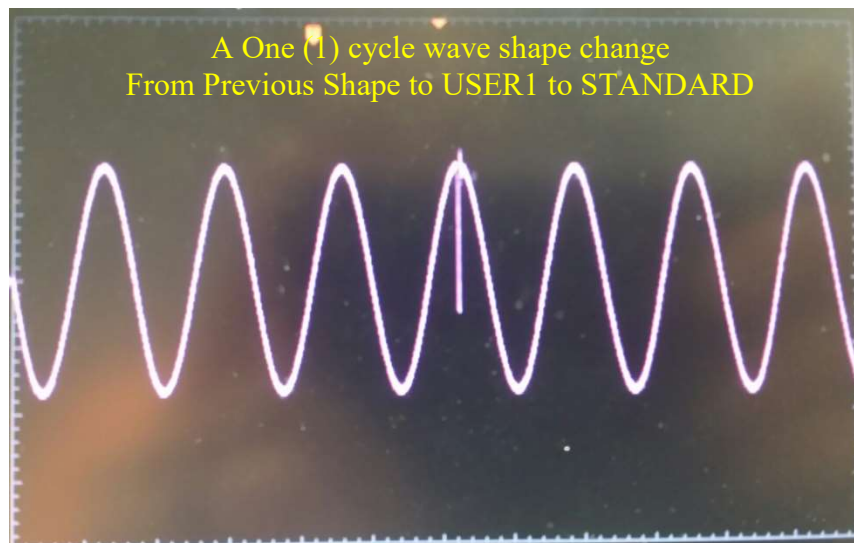

### Multi-Phase- Changing a Single Phase

The same approach may be used on any phase of a multi-phase output as shown.

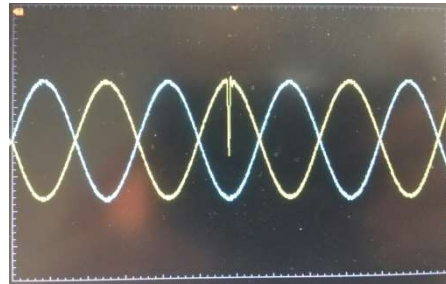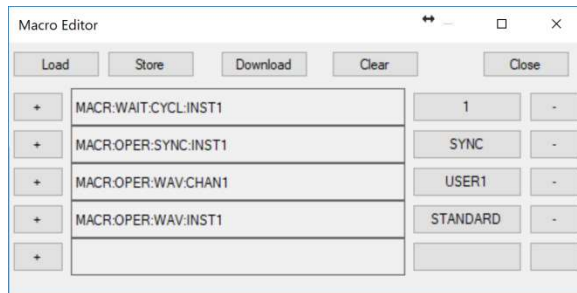



In Synchronous (SYNC) operation: Wave shapes requested for the same phase are applied on sequential cycles and do not need a cycle counter.

### Using Time Based Changes

Waiting for a specific time generally require Immediate (IMM) to be selected in step 3 resulting in an immediate change after the timer expires. By comparison, synchronous (SYNC) operation allows the timer to expire and will apply the next operation command at the next Change at (deg).

Change step 3 from the above to IMM Mode and change step 5 to WAIT-TIME as shown.

Note: For clarity, example uses "USER 3" which has been pre-loaded with a square wave.

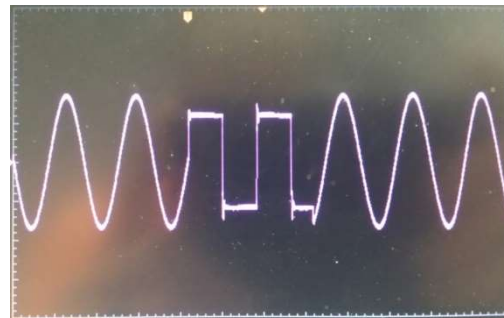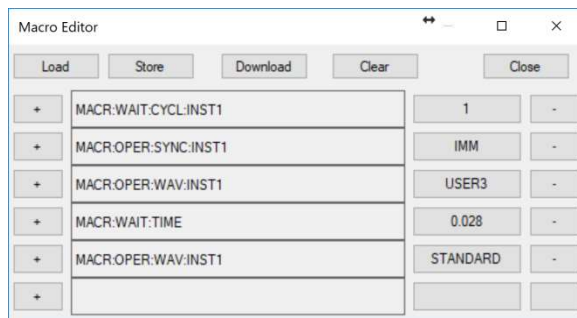

This page intentionally left blank.

## 8. APPENDIX – 9410 HARDWARE MODES

The organization of the channels is done by setting a “mode” with the “NHR 9400 Panel” PC tool (see section “Software” below) or through any programming interface (see *Programmer’s Reference Manual* 09-0335). Setting the mode will allow you to determine if it is a three output AC source, or a single output DC source, or anything in-between. There are a total of 13 hardware modes available for a three channel 9410 power module, six for a two channel 9410, and two for a one channel 9410. Once configured, the hardware operating mode persists even through all resets and power cycles.

Available hardware modes are dependent on the number of channels installed. Please refer to the appropriate section for details.

Available hardware modes are dependent on the number of channels installed. Please refer to the appropriate section for details.



**The fixture wiring must match the selected hardware operating mode. Failure to ensure may result in damage to the 9400, fixture-wiring, or the UUT.**

### 8.1 9410 (3 Channel Version) –Programmable Modes

The three channel power module has 13 unique configurations.

<b>Mode</b>	<b>Available Instruments</b>	<b>Channel 1</b>	<b>Channel 2</b>	<b>Channel 3</b>
0	One 3-Phase AC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (240° from A)	AC1 (Phase C) (120° from A)
1	One AC	AC1 (3x per channel power)		
2	One DC	DC1 (3x per channel power)		
3	Three AC	AC1	AC2	AC3
4	Three DC	DC1	DC2	DC3
5	One 2-Phase AC and One AC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (180° from A)	AC3
6	One 2-Phase AC and One DC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (180° from A)	DC3
7	Two AC	AC1 (2x per channel power)		AC3
8	One AC and One DC	AC1 (2x per channel power)		DC3
9	Two AC and One DC	AC1	AC2	DC3
10	One AC and Two DC	AC1	DC2	DC3
11	One DC and One AC	DC1 (2x per channel power)		AC3
12	Two DC	DC1 (2x per channel power)		DC3

The following sections show NH Researches recommended wiring for each mode.

### 8.1.1 9410 (3 Channel Version) - Mode 0: One 3-Phase AC

Logical Instrument Configuration and UUT Wiring

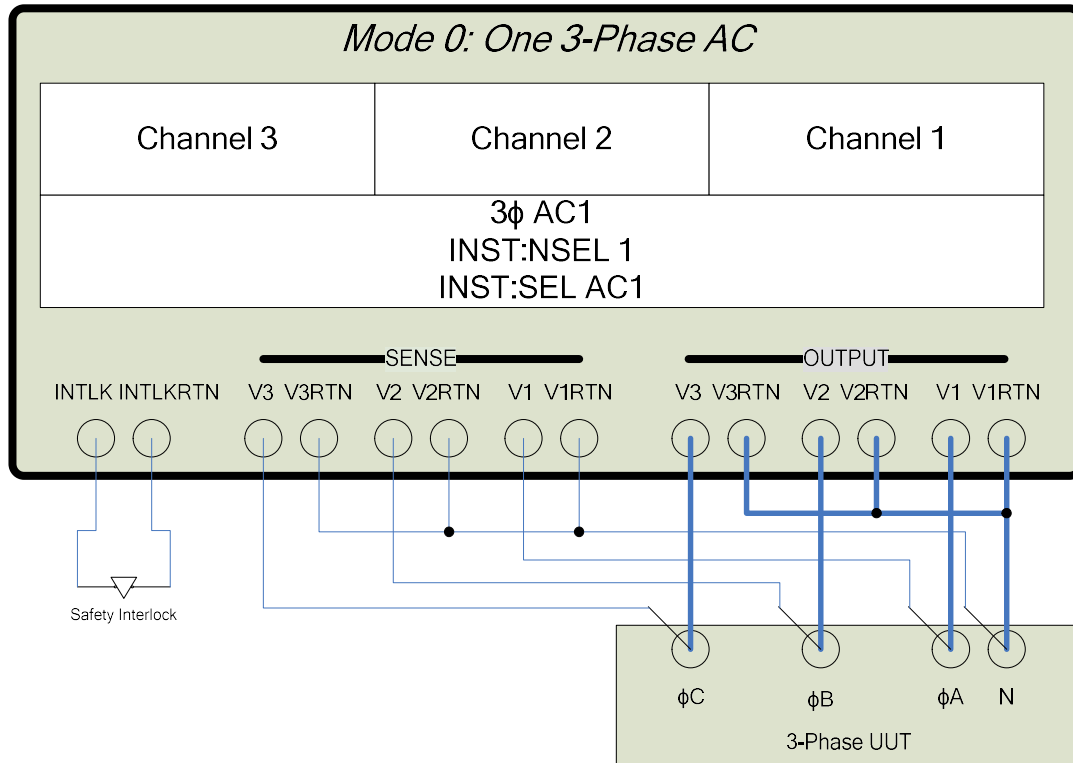


Figure 10 - Mode 0: One 3-Phase AC

Key Maximums for Each Logical Instrument

<b>AC1 (3-Phase)</b>	<b>Model</b>							
	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							

### 8.1.2 9410 (3 Channel Version) - Mode 1: One AC

Logical Instrument Configuration and UUT Wiring

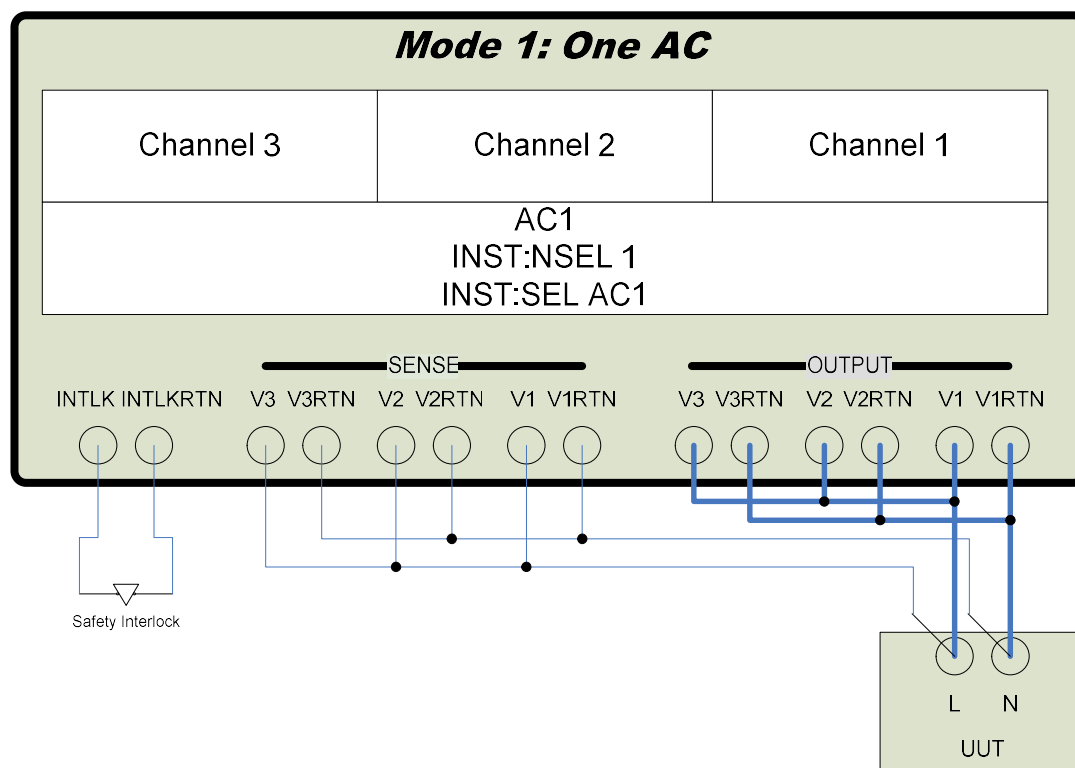


Figure 11 - Mode 1: One AC

Key Maximums for Each Logical Instrument

<b>AC1</b>	<b>Model</b>							
	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	90 Arms	180 Arms	270 Arms	360 Arms	450 Arms	540 Arms	630 Arms	720 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							



### 8.1.3 9410 (3 Channel Version) - Mode 2: One DC

Logical Instrument Configuration and UUT Wiring

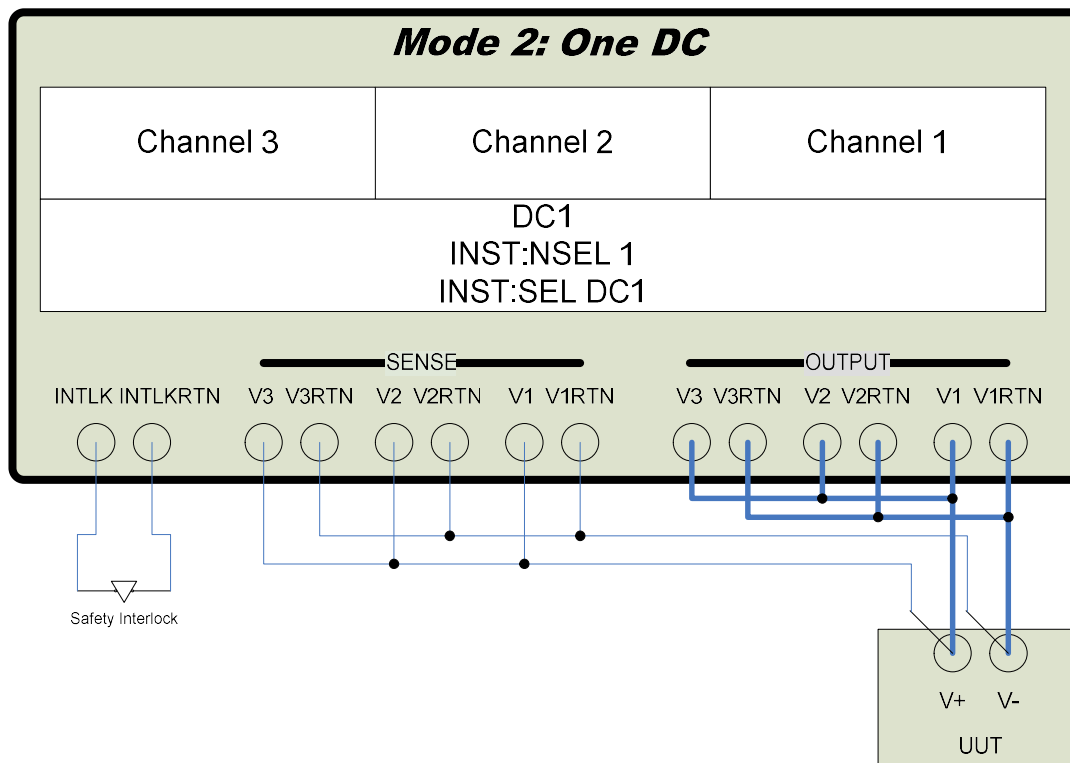


Figure 12 - Mode 2: One DC

Key Maximums for Each Logical Instrument

<b>DC1</b>	<b>Model</b>							
	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	90 A	180 A	270 A	360 A	450 A	540 A	630 A	720 A

### 8.1.4 9410 (3 Channel Version) - Mode 3: Three AC

Logical Instrument Configuration and UUT Wiring

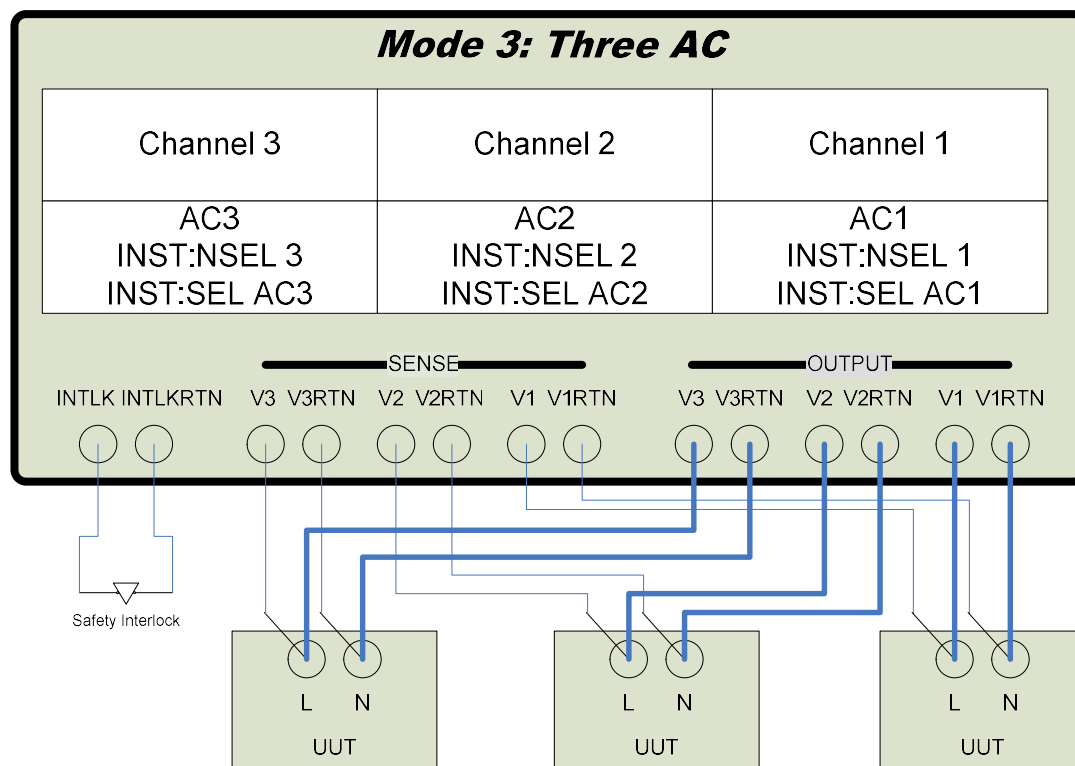


Figure 13 - Mode 3: Three AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC2</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC3</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 8.1.5 9410 (3 Channel Version) - Mode 4: Three DC

Logical Instrument Configuration and UUT Wiring

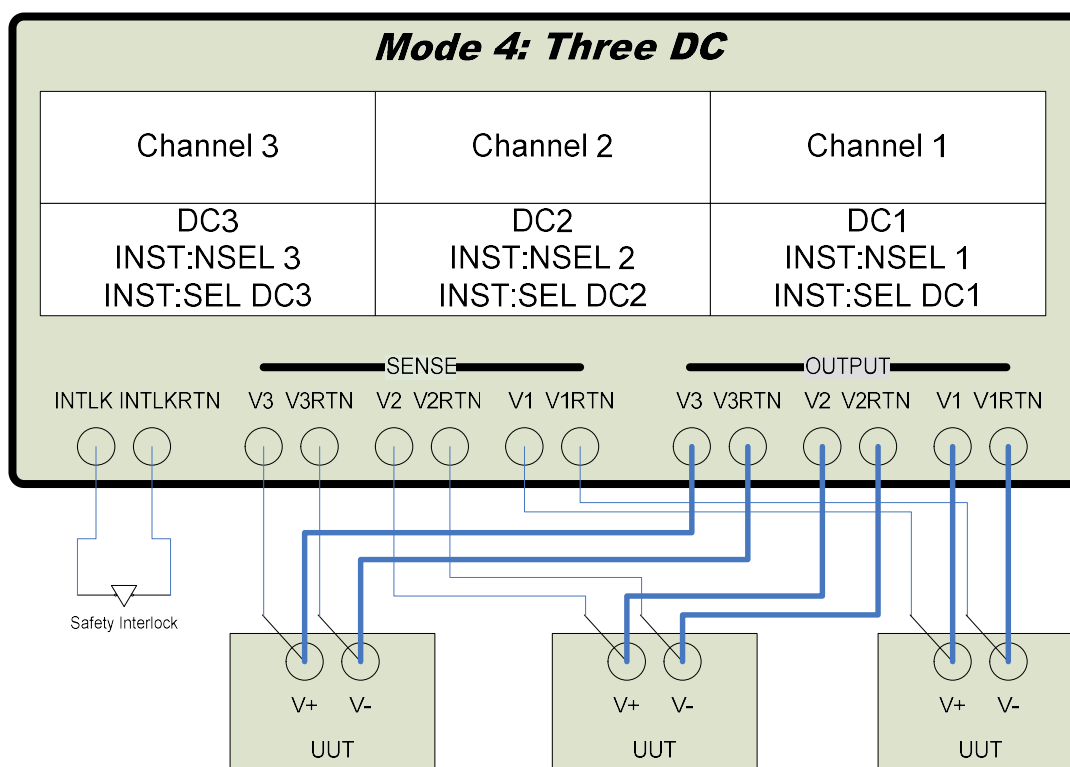


Figure 14 - Mode 4: Three DC

## Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC2</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC3</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 8.1.6 9410 (3 Channel Version) - Mode 5: One 2-Phase AC and One AC

Logical Instrument Configuration and UUT Wiring

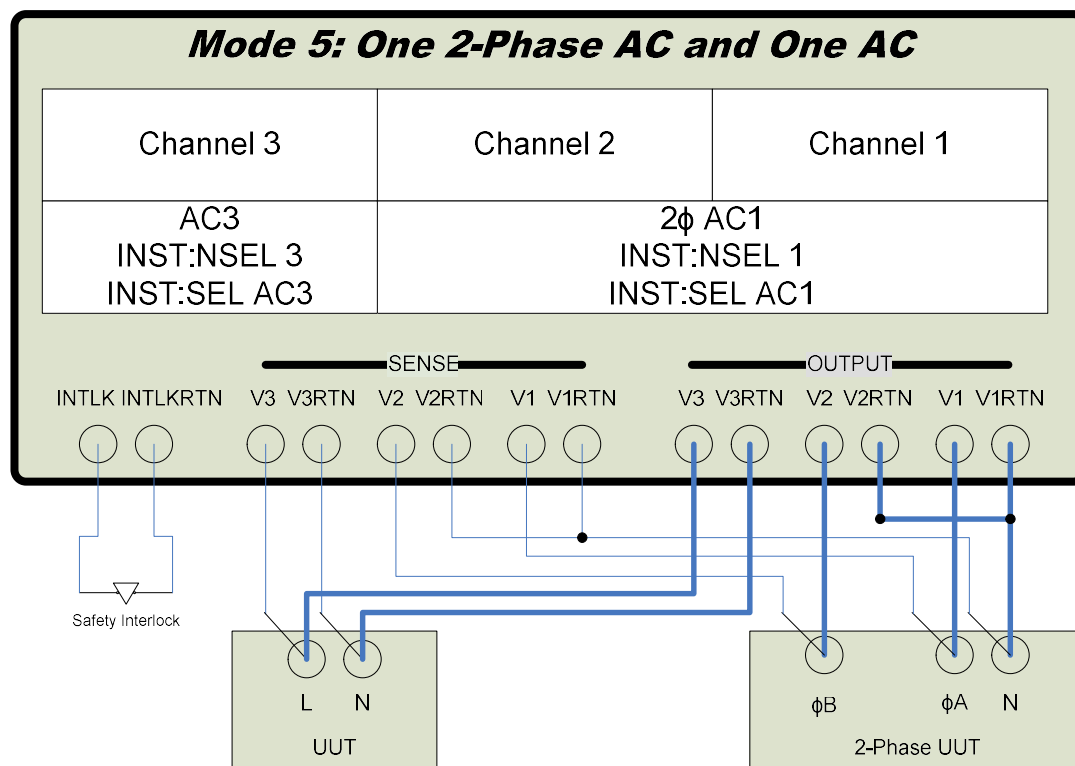


Figure 15 - Mode 5: One 2-Phase AC and One AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1 (2-Phase)</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 8.1.7 9410 (3 Channel Version) - Mode 6: One 2-Phase AC and One DC

Logical Instrument Configuration and UUT Wiring

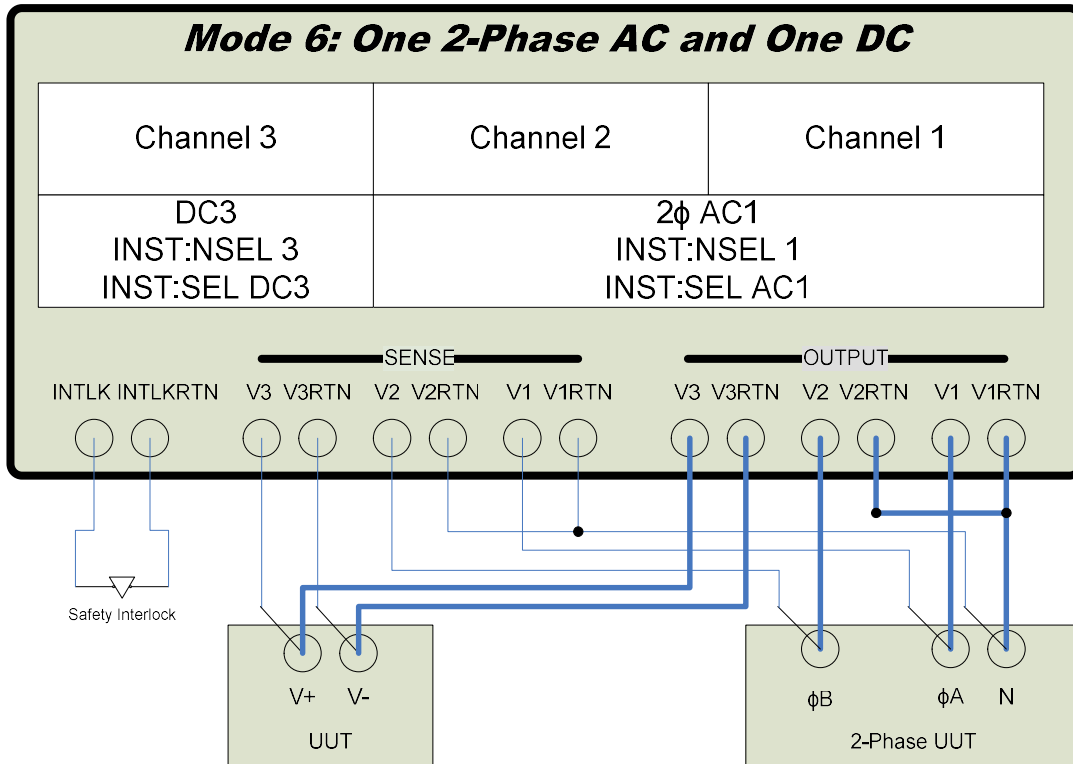


Figure 16 - Mode 6: One 2-Phase AC and One DC

#### Key Maximums for Each Logical Instrument

	Model							
<b>AC1 (2-Phase)</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 8.1.8 9410 (3 Channel Version) - Mode 7: Two AC

Logical Instrument Configuration and UUT Wiring

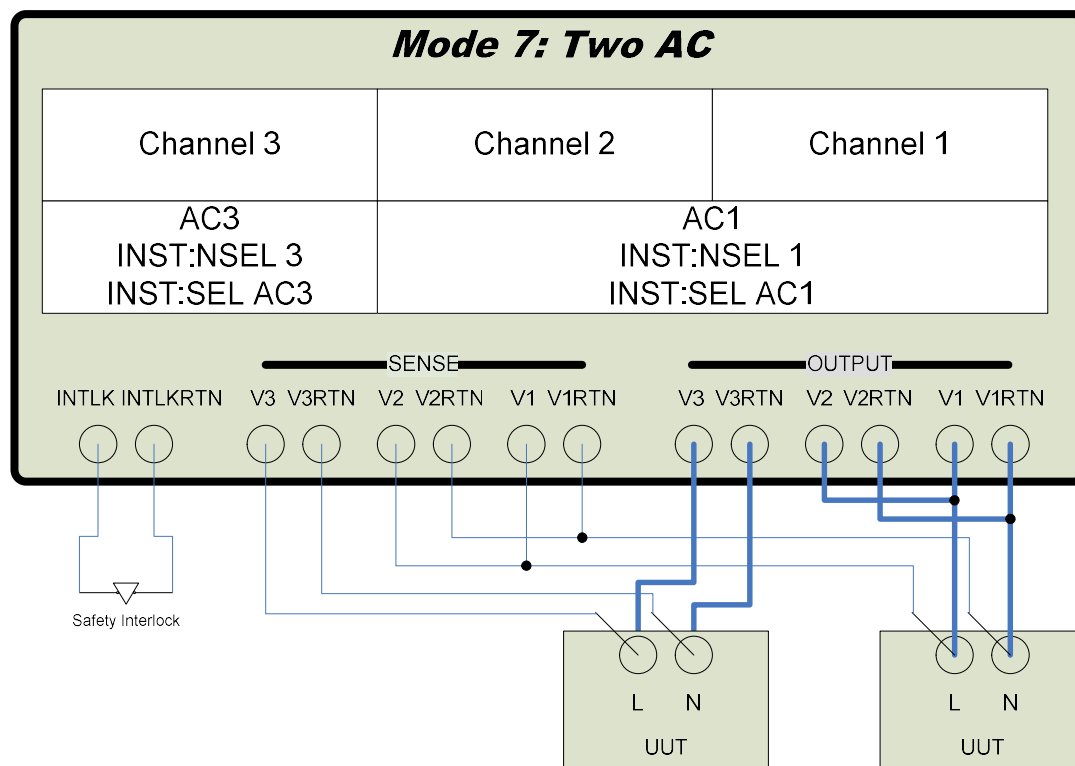


Figure 17 - Mode 7: Two AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	60 Arms	120 Arms	180 Arms	240 Arms	300 Arms	360 Arms	420 Arms	480 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 8.1.9 9410 (3 Channel Version) - Mode 8: One AC and One DC

Logical Instrument Configuration and UUT Wiring

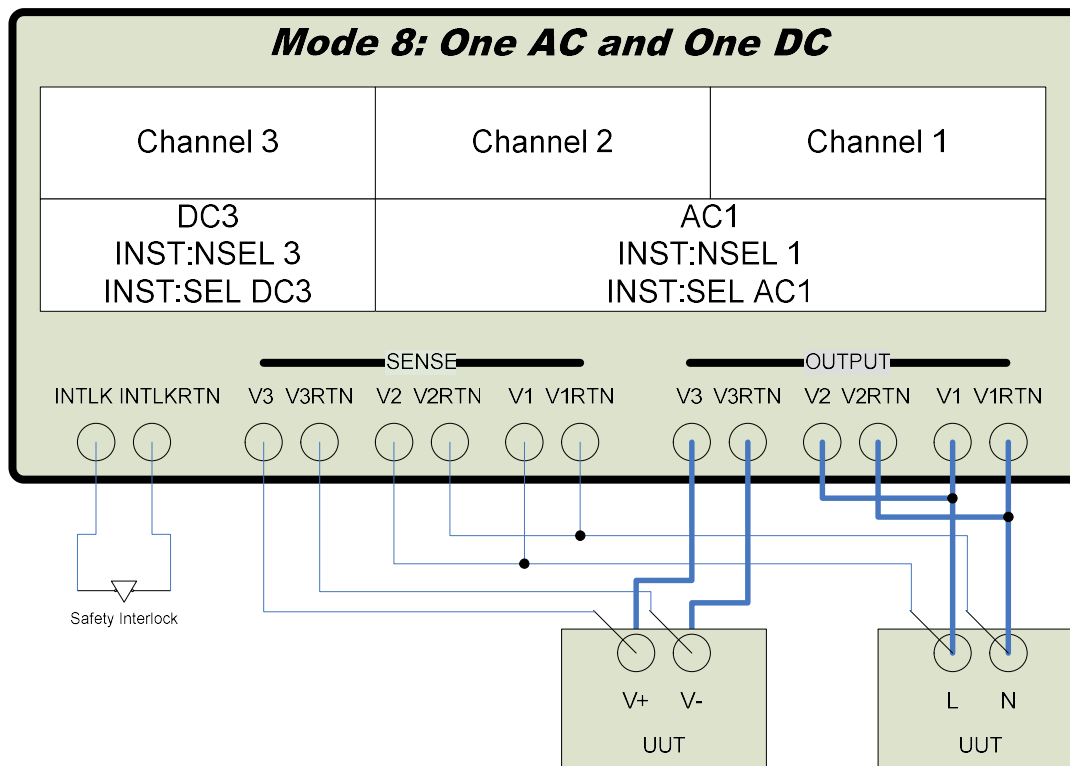


Figure 18 - Mode 8: One AC and One DC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	60 Arms	120 Arms	180 Arms	240 Arms	300 Arms	360 Arms	420 Arms	480 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 8.1.10 9410 (3 Channel Version) - Mode 9: Two AC and One DC

Logical Instrument Configuration and UUT Wiring

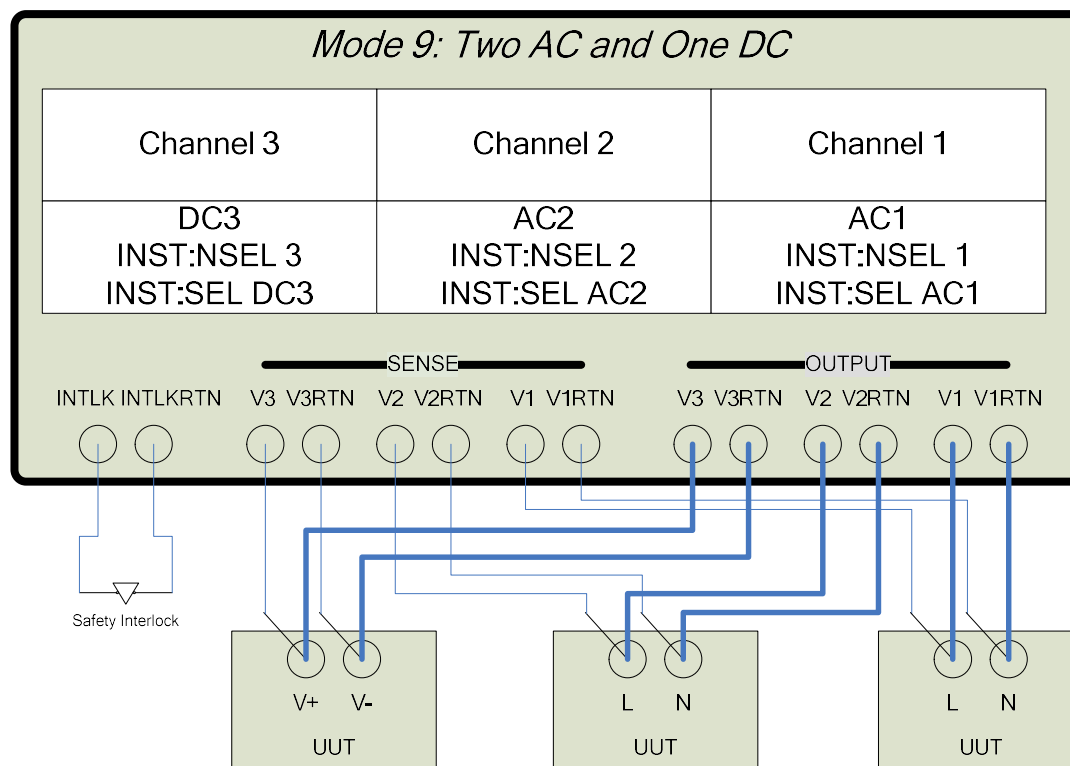


Figure 19 - Mode 9: Two AC and One DC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC2</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC3</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 8.1.11 9410 (3 Channel Version) - Mode 10: One AC and Two DC

Logical Instrument Configuration and UUT Wiring



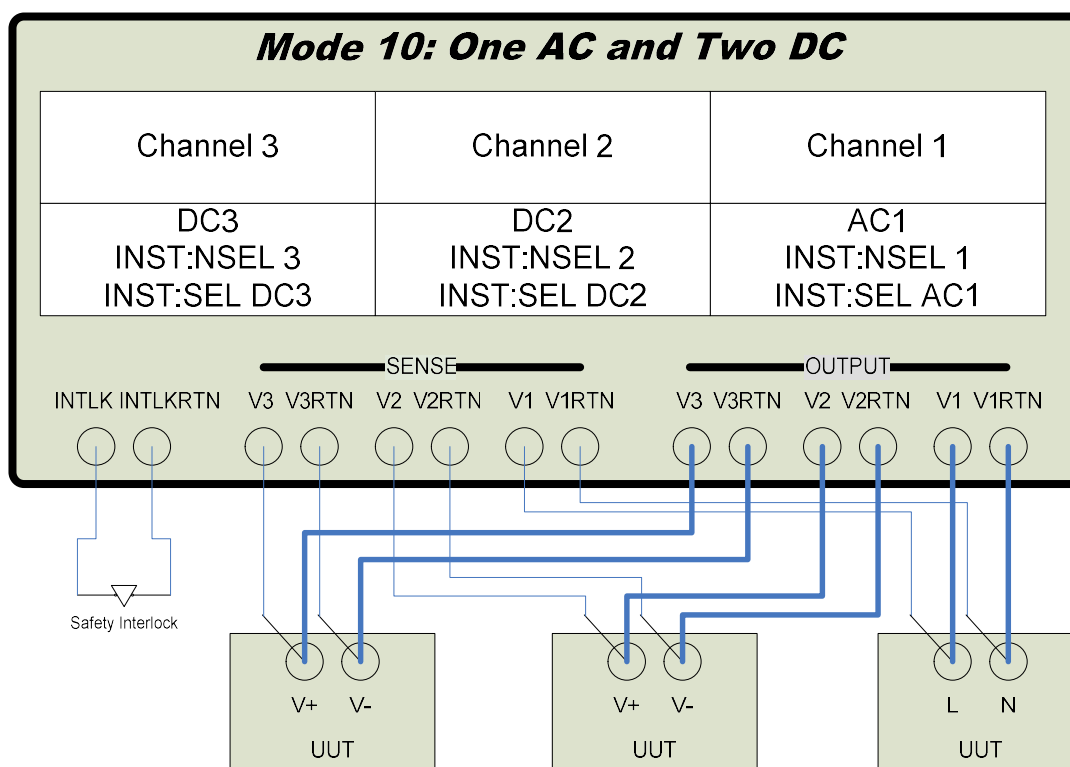


Figure 20 - Mode 10: One AC and Two DC

## Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC2</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 8.1.12 9410 (3 Channel Version) - Mode 11: One DC and One AC

Logical Instrument Configuration and UUT Wiring

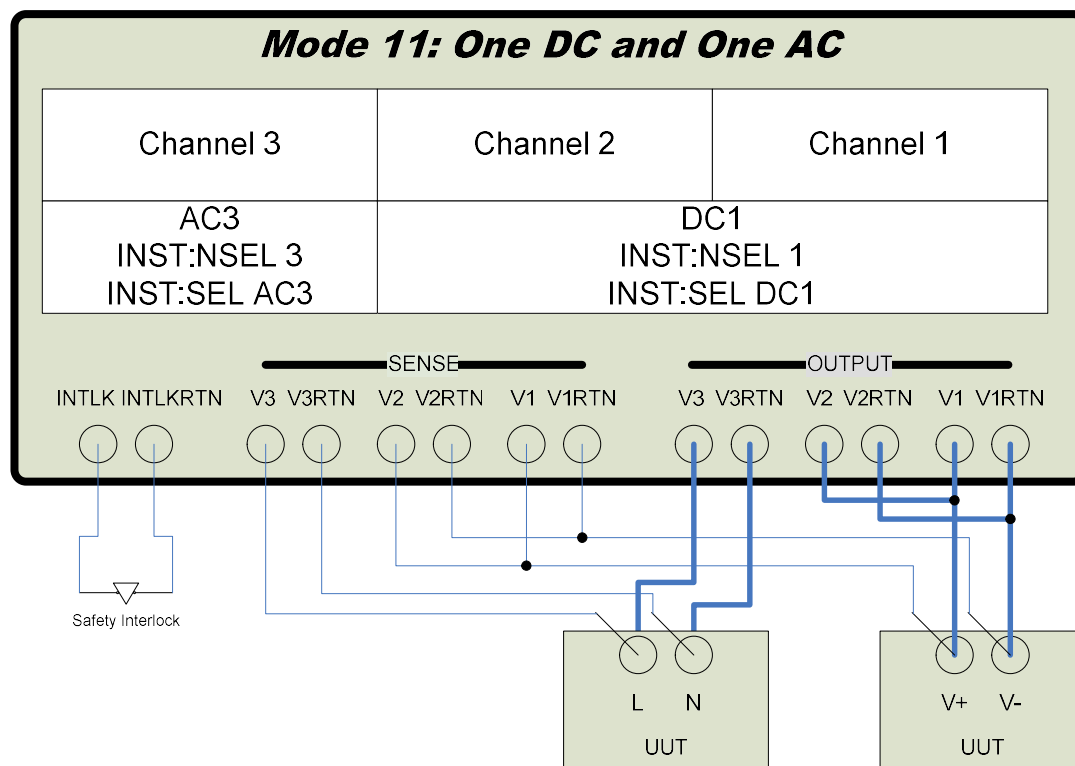


Figure 21 - Mode 11: One DC and One AC

Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	60 A	120 A	180 A	240 A	300 A	360 A	420 A	480 A
<b>AC3</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 8.1.13 9410 (3 Channel Version) - Mode 12: Two DC

Logical Instrument Configuration and UUT Wiring

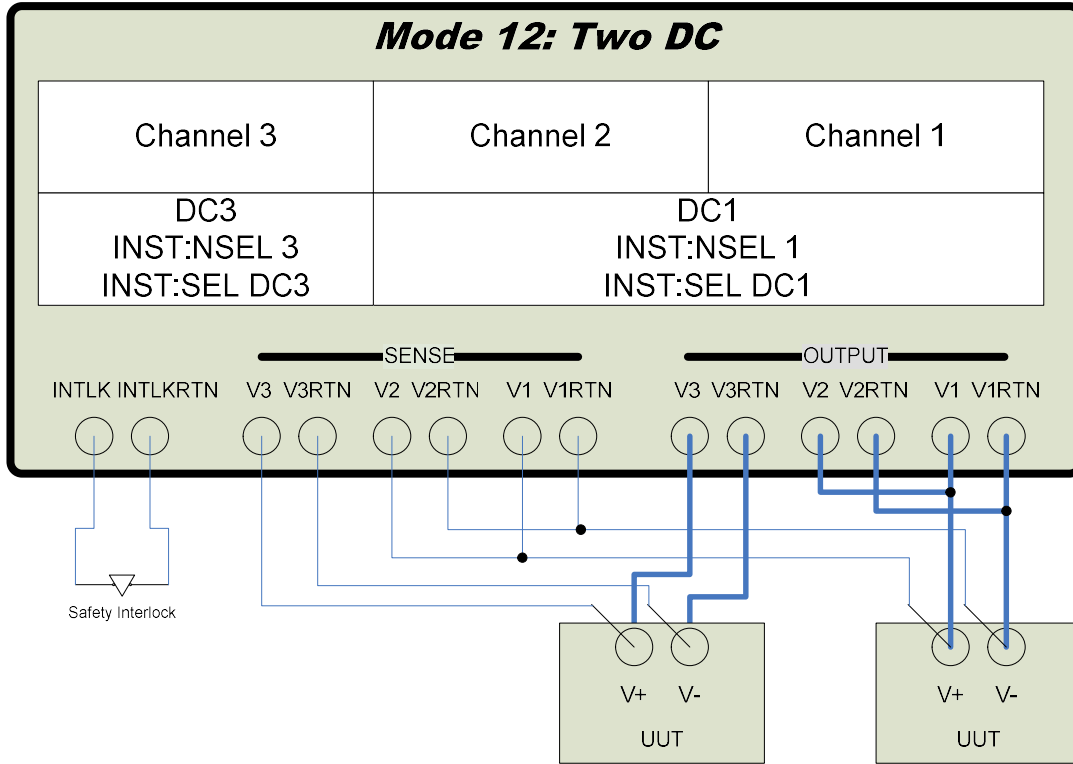


Figure 22 - Mode 12: Two DC

#### Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9410-12	9410-24	9410-36	9410-48	9410-60	9410-72	9410-84	9410-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	60 A	120 A	180 A	240 A	300 A	360 A	420 A	480 A
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

## 8.2 9410 Reduced Channel Models

NH Research manufactures two reduced channel versions of the 9410.

The 9410-8 is a 8kW Regenerative grid simulator with 6 unique configurations.

<b>Mode</b>	<b>Available Instruments</b>	<b>Channel 1</b>	<b>Channel 2</b>
0	One 2-Phase AC	AC1 (Phase A)	AC1 (Phase B) (180° from A)
1	One AC	AC1 (2x per channel power)	
2	One DC	DC1 (2x per channel power)	
3	Two AC	AC1	AC2
4	Two DC	DC1	DC2
5	One AC and One DC	AC1	DC2

The 9410-4 is a 4kW Regenerative grid simulator with 2 unique configurations.

<b>Mode</b>	<b>Available Instruments</b>	<b>Channel 1</b>
0	One AC	AC1
1	One DC	DC1

The following figures show the basic wiring for each mode.

### 8.2.1 9410-8 (2 Channel Version) - Mode 0: One 2-Phase AC

Logical Instrument Configuration and UUT Wiring

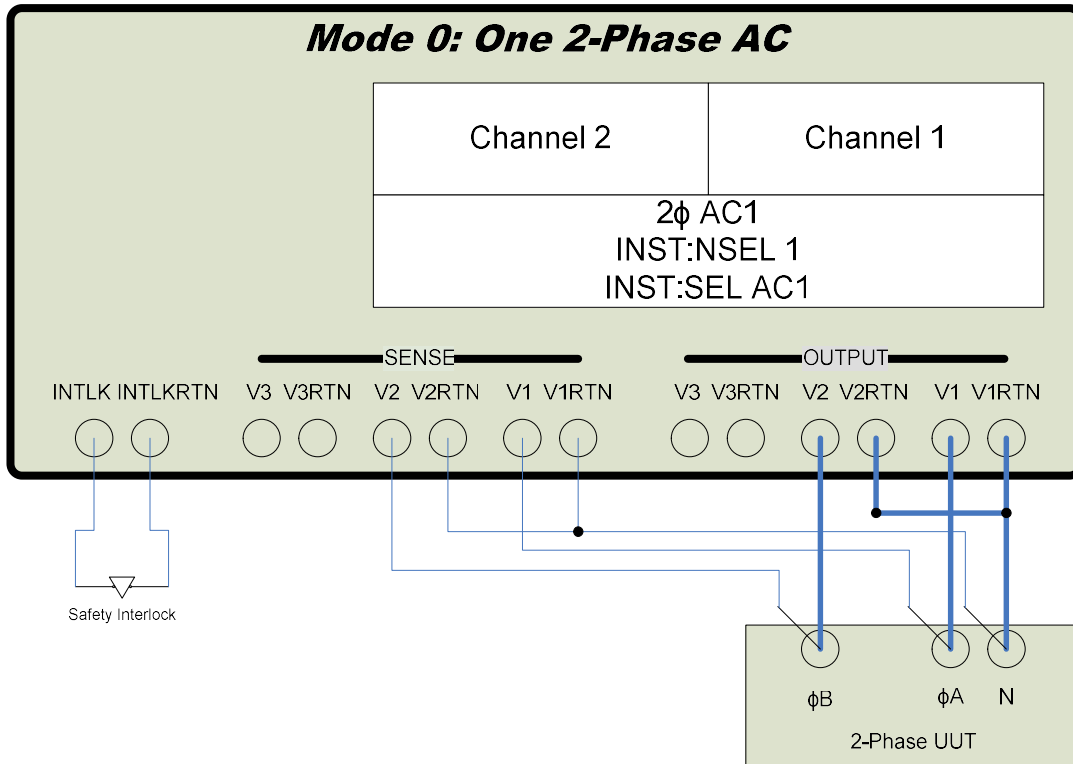


Figure 23 - Mode 0: One 2-Phase AC

#### Key Maximums for Each Logical Instrument

	Model 9410-8							
<b>AC1 (2-Phase)</b>								
<b>Max Power</b>	8 kW							
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms							
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							

8.2.2 9410-8 (2 Channel Version) - Mode 1: One AC  
Logical Instrument Configuration and UUT Wiring

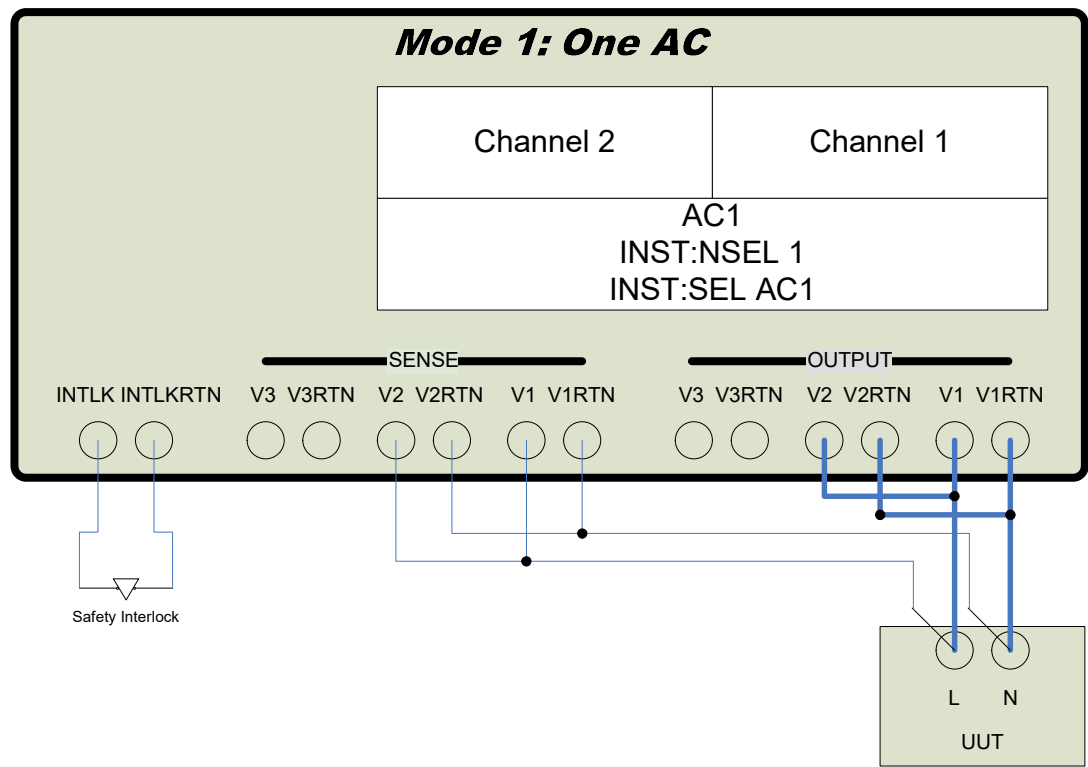


Figure 24 - Mode 1: One AC

Key Maximums for Each Logical Instrument

	Model 9410-8							
AC1								
Max Power	8 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	60 Arms							
Peak Current	3 X Maximum RMS Current							

8.2.3 9410-8 (2 Channel Version) - Mode 2: One DC  
Logical Instrument Configuration and UUT Wiring

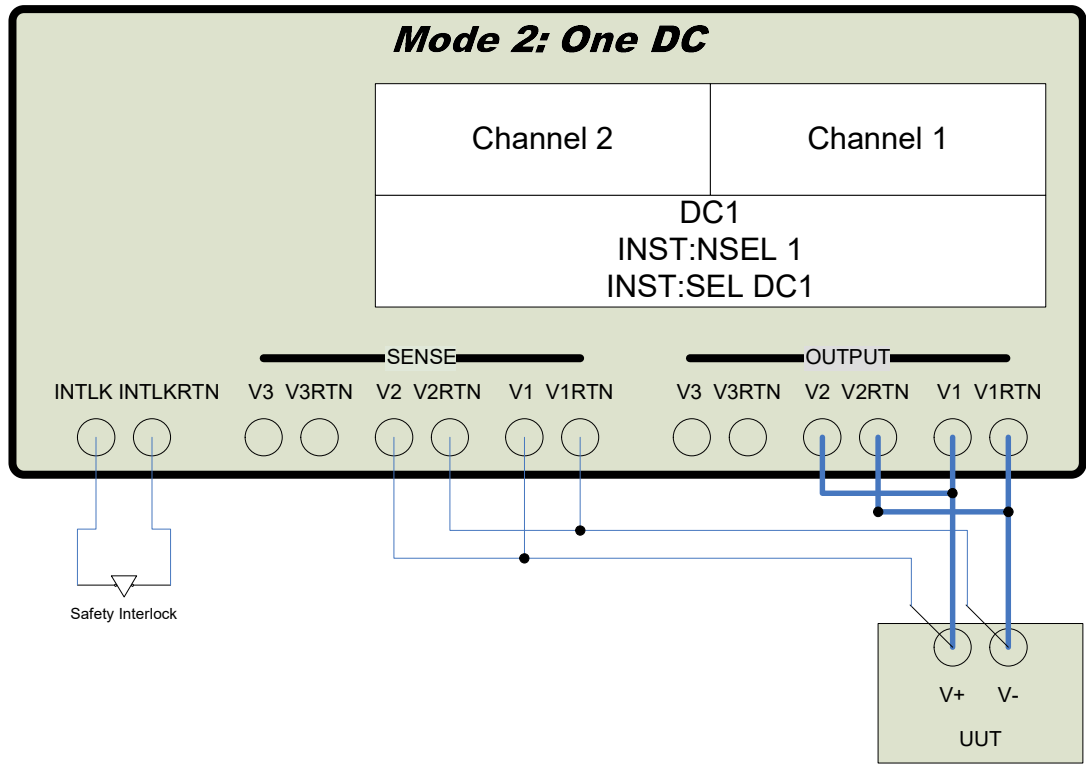


Figure 25 - Mode 2: One DC

Key Maximums for Each Logical Instrument

	Model 9410-8							
DC1								
Max Power	8 kW							
Max Voltage	400 VDC							
Max Current	60 A							

8.2.4 9410-8 (2 Channel Version) - Mode 3: Two AC  
Logical Instrument Configuration and UUT Wiring

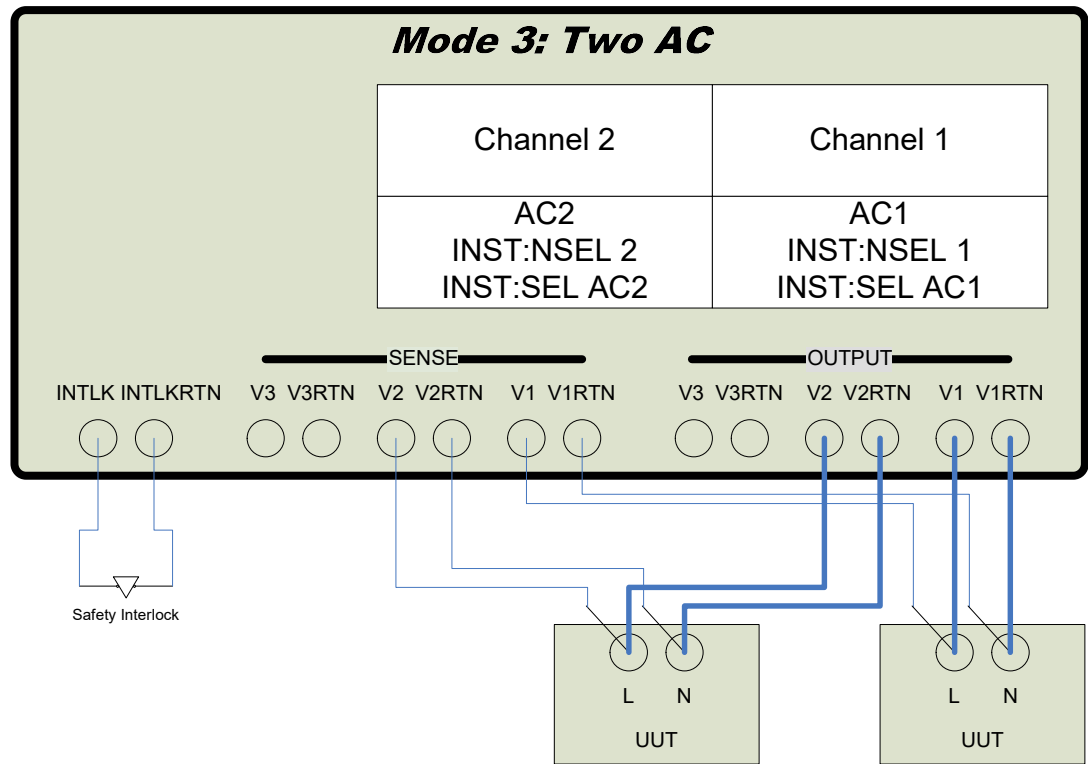


Figure 26 - Mode 3: Two AC

Key Maximums for Each Logical Instrument

	Model 9410-8							
AC1								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							
AC2								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							



### 8.2.5 9410-8 (2 Channel Version) - Mode 4: Two DC

Logical Instrument Configuration and UUT Wiring

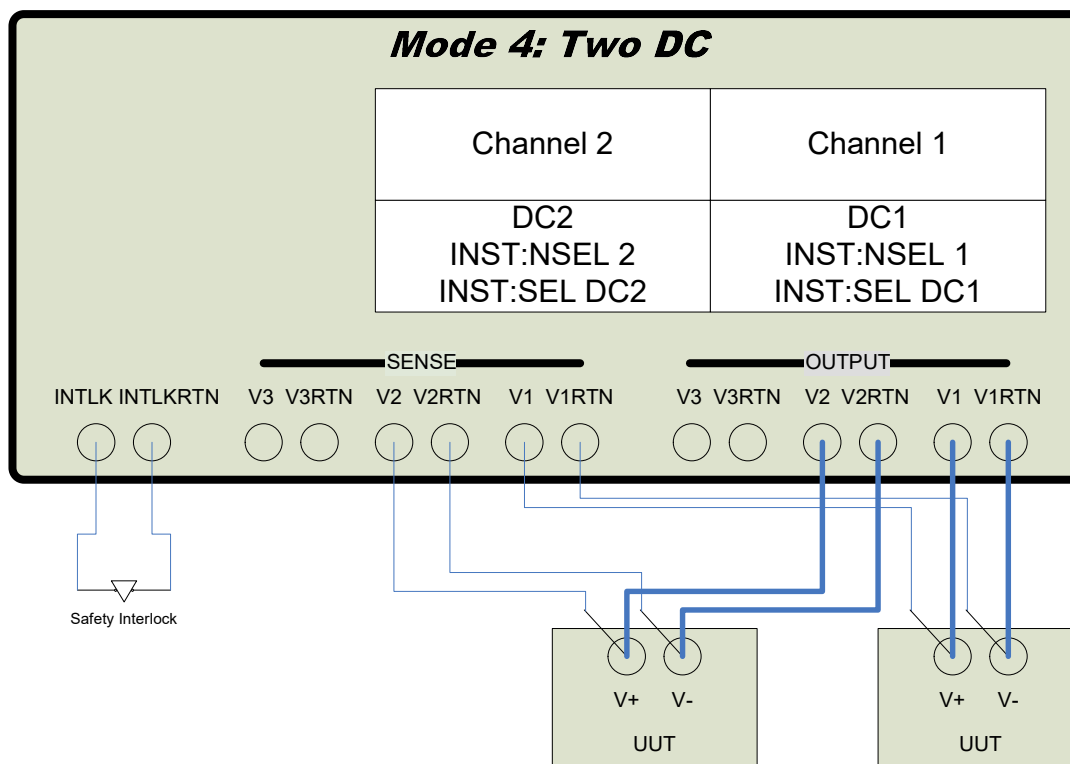


Figure 27 - Mode 4: Two DC

Key Maximums for Each Logical Instrument

	Model 9410-8							
<b>DC1</b>								
Max Power	4 kW							
Max Voltage	400 VDC							
Max Current	30 A							
<b>DC2</b>								
Max Power	4 kW							
Max Voltage	400 VDC							
Max Current	30 A							

8.2.6 9410-8 (2 Channel Version) - Mode 5: One AC and One DC  
Logical Instrument Configuration and UUT Wiring

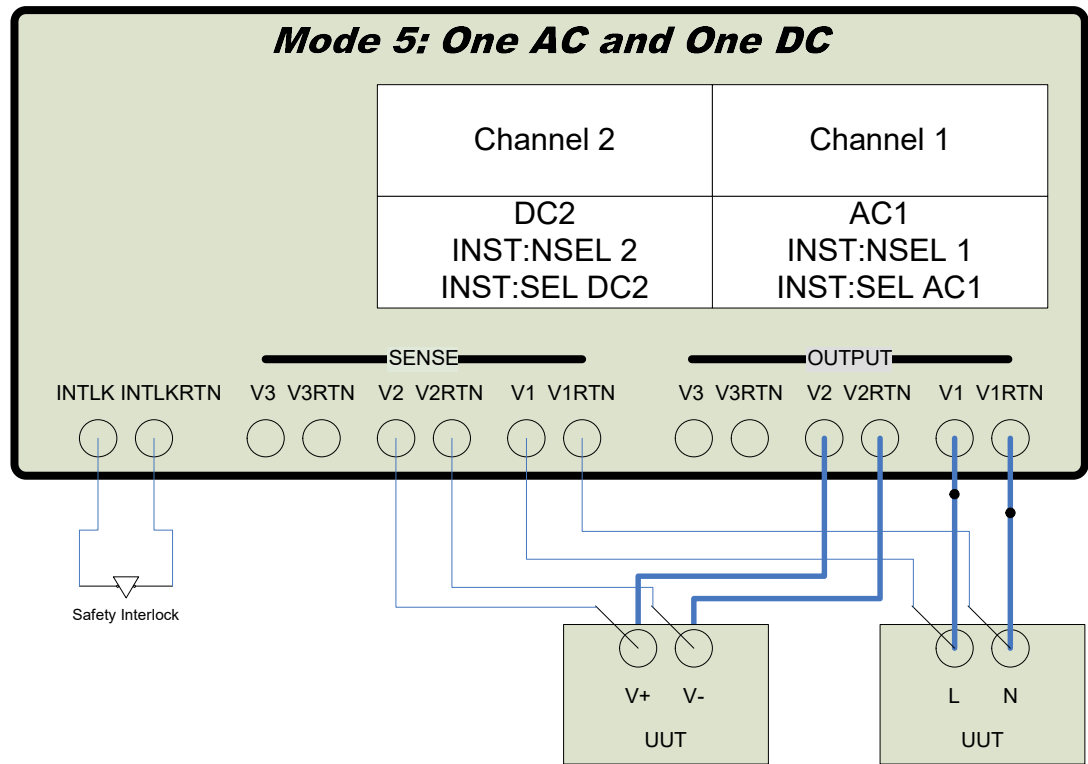
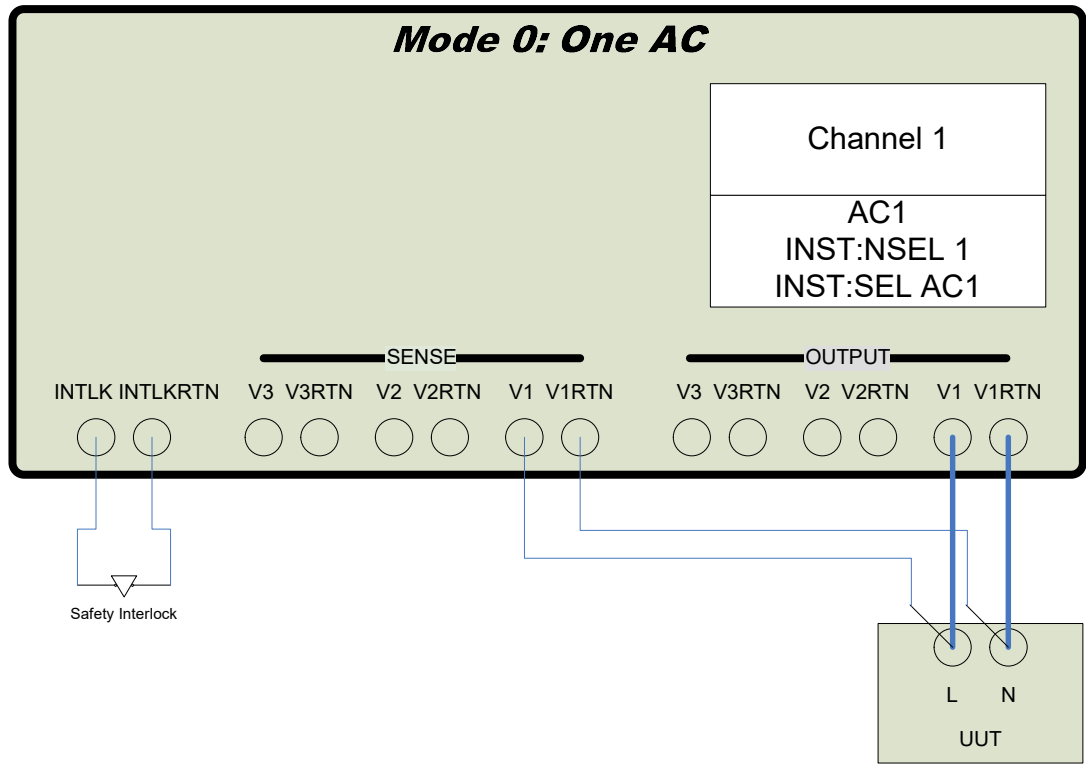


Figure 28 - Mode 5: One AC and One DC

Key Maximums for Each Logical Instrument

	Model 9410-8							
AC1								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							
DC2								
Max Power	4 kW							
Max Voltage	400 VDC							
Max Current	30 A							

**8.2.7 9410-4 (1 Channel Version) -Mode 0: One AC**  
Logical Instrument Configuration and UUT Wiring



**Figure 29 - Mode 0: One AC**

Key Maximums for Each Logical Instrument

	Model 9410-4							
<b>AC1</b>								
<b>Max Power</b>	4 kW							
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms							
<b>Peak Current</b>	3 X Maximum RMS Current							

8.2.8 9410-4 (1 Channel Version) -Mode 1: One DC  
Logical Instrument Configuration and UUT Wiring

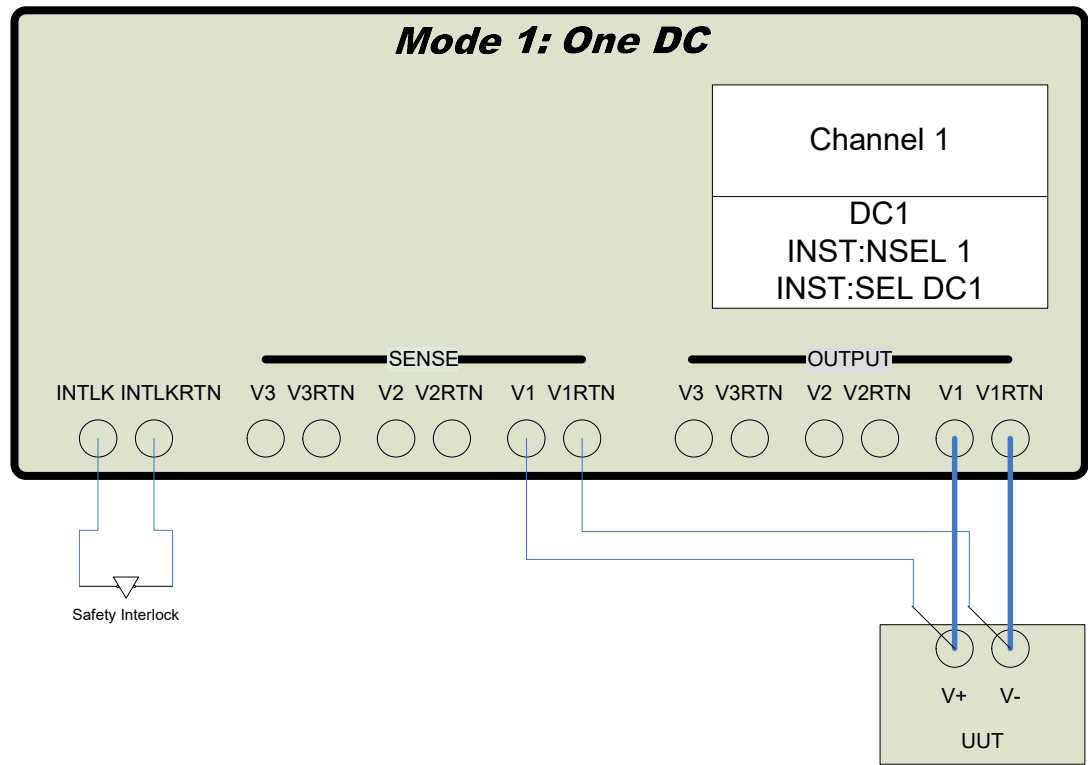


Figure 30 - Mode 1: One DC

Key Maximums for Each Logical Instrument

	Model 9410-4							
DC1								
Max Power	4 kW							
Max Voltage	400 VDC							
Max Current	30 A							

This page intentionally left blank.

## 9. APPENDIX – 9420 HARDWARE MODES

The organization of the channels is done by setting a “mode” with the “NHR 9400 Panel” PC tool (see section “Software” below) or through any programming interface (see *Programmer’s Reference Manual* 09-0335). Setting the mode will allow you to determine if it is a three output AC source, or a single output DC source, or anything in-between. There are a total of 13 hardware modes available for a three channel 9420 power module and six hardware modes for a two channel 9420. Once configured, the hardware operating mode persists even through all resets and power cycles.

Available hardware modes are dependent on the number of channels installed. Please refer to the appropriate section for details.



**The fixture wiring must match the selected hardware operating mode. Failure to ensure may result in damage to the 9420, fixture-wiring, or the UUT.**

### 9.1 9420 (3 Channel Version) –Programmable Modes

The three channel power module has 13 unique configurations.

<b>Mode</b>	<b>Available Instruments</b>	<b>Channel 1</b>	<b>Channel 2</b>	<b>Channel 3</b>
0	One 3-Phase AC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (240° from A)	AC1 (Phase C) (120° from A)
1	One AC	AC1 (3x per channel power)		
2	One DC	DC1 (3x per channel power)		
3	Three AC	AC1	AC2	AC3
4	Three DC	DC1	DC2	DC3
5	One 2-Phase AC and One AC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (180° from A)	AC3
6	One 2-Phase AC and One DC	AC1 (Phase A) (Phase Ref)	AC1 (Phase B) (180° from A)	DC3
7	Two AC	AC1 (2x per channel power)		AC3
8	One AC and One DC	AC1 (2x per channel power)		DC3
9	Two AC and One DC	AC1	AC2	DC3
10	One AC and Two DC	AC1	DC2	DC3
11	One DC and One AC	DC1 (2x per channel power)		AC3
12	Two DC	DC1 (2x per channel power)		DC3

The following sections show NH Researches recommended wiring for each mode.

### 9.1.1 9420 (3 Channel Version) - Mode 0: One 3-Phase AC

Logical Instrument Configuration and UUT Wiring

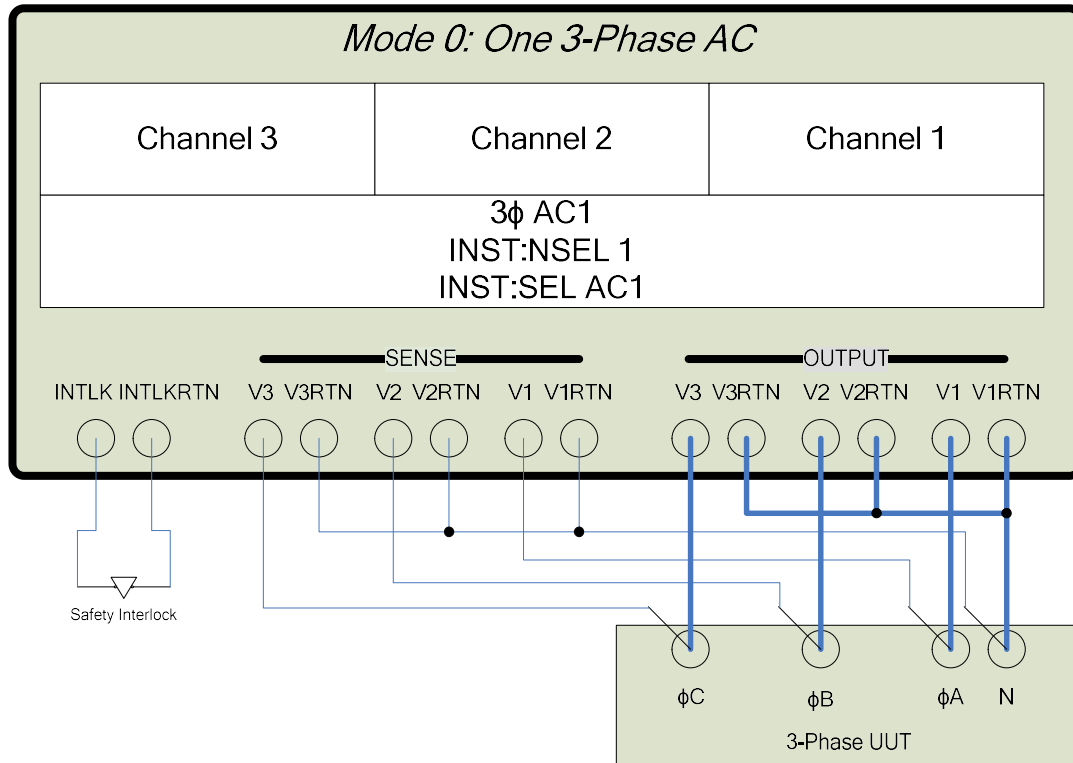


Figure 31 - Mode 0: One 3-Phase AC

Key Maximums for Each Logical Instrument

<b>AC1 (3-Phase)</b>	<b>Model</b>							
	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							

### 9.1.2 9420 (3 Channel Version) - Mode 1: One AC

Logical Instrument Configuration and UUT Wiring

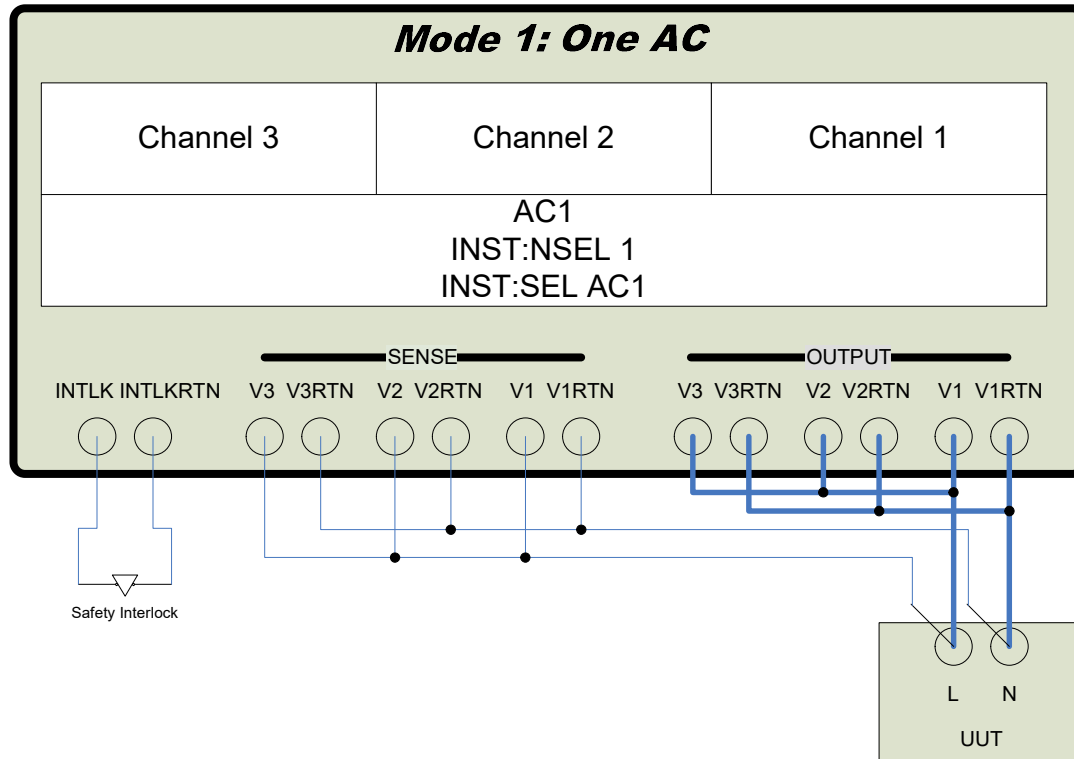


Figure 32 - Mode 1: One AC

Key Maximums for Each Logical Instrument

<b>AC1</b>	<b>Model</b>							
	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	90 Arms	180 Arms	270 Arms	360 Arms	450 Arms	540 Arms	630 Arms	720 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							



### 9.1.3 9420 (3 Channel Version) - Mode 2: One DC

Logical Instrument Configuration and UUT Wiring

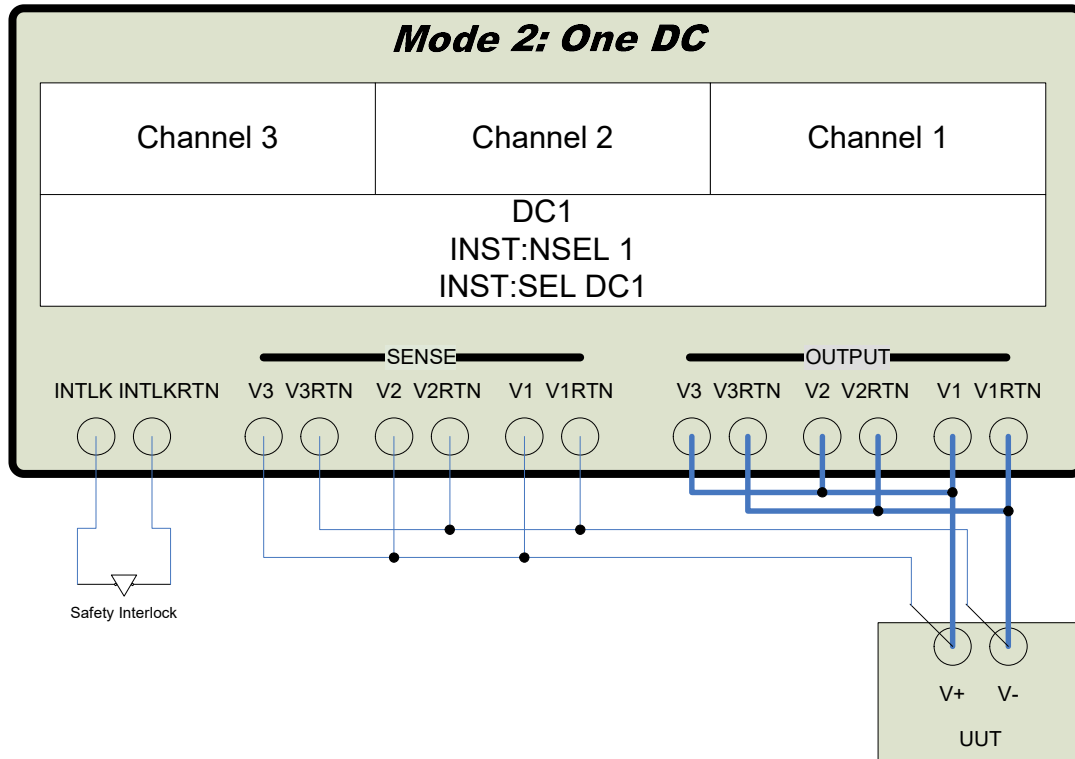


Figure 33 - Mode 2: One DC

Key Maximums for Each Logical Instrument

<b>DC1</b>	<b>Model</b>							
	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	12 kW	24 kW	36 kW	48 kW	60 kW	72 kW	84 kW	96 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	90 A	180 A	270 A	360 A	450 A	540 A	630 A	720 A

### 9.1.4 9420 (3 Channel Version) - Mode 3: Three AC

Logical Instrument Configuration and UUT Wiring

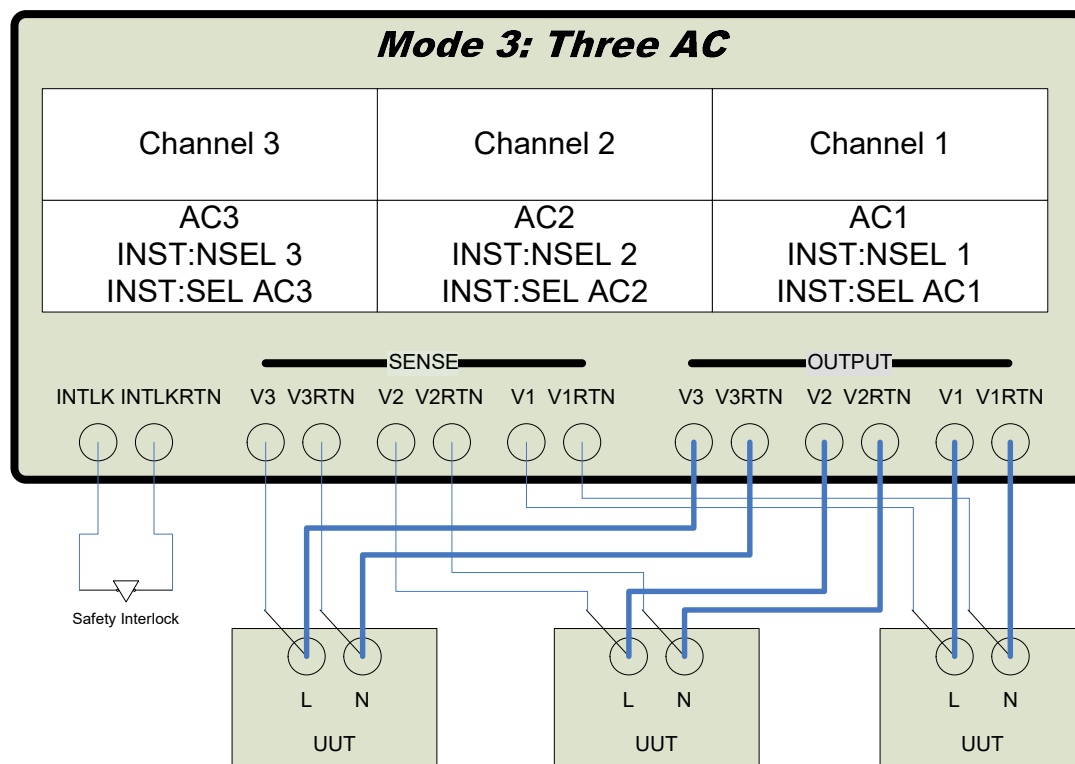


Figure 34 - Mode 3: Three AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC2</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 9.1.5 9420 (3 Channel Version) - Mode 4: Three DC

Logical Instrument Configuration and UUT Wiring

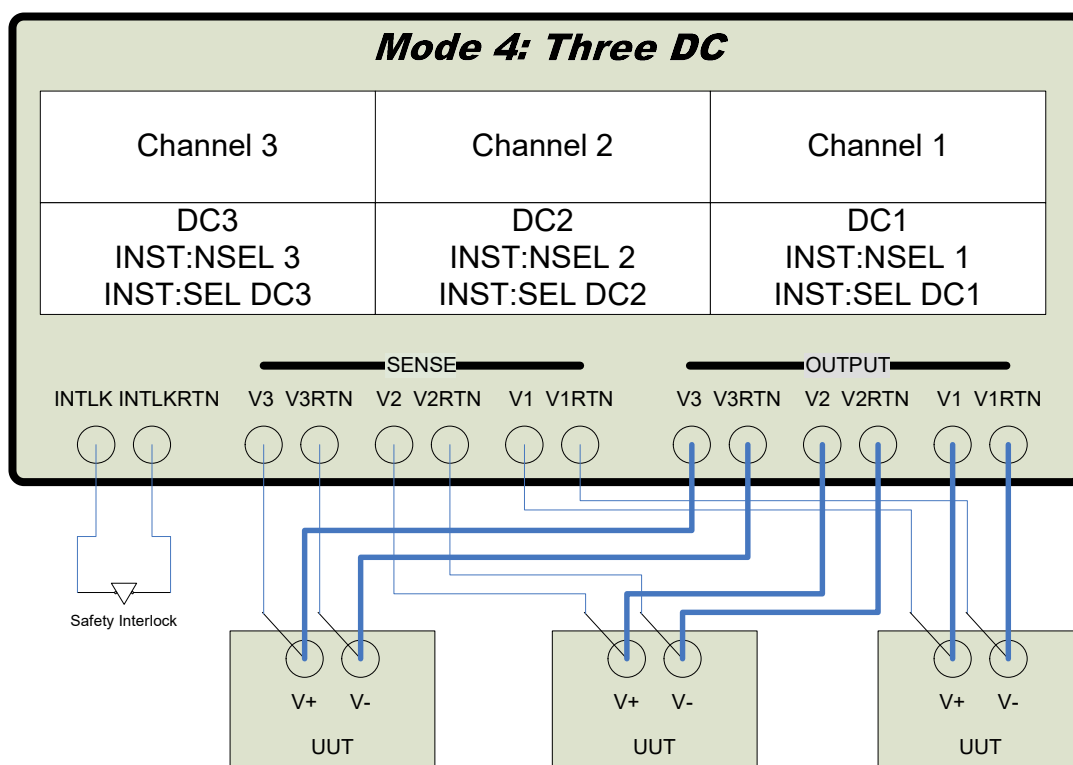


Figure 35 - Mode 4: Three DC

## Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC2</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC3</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 9.1.6 9420 (3 Channel Version) - Mode 5: One 2-Phase AC and One AC

Logical Instrument Configuration and UUT Wiring

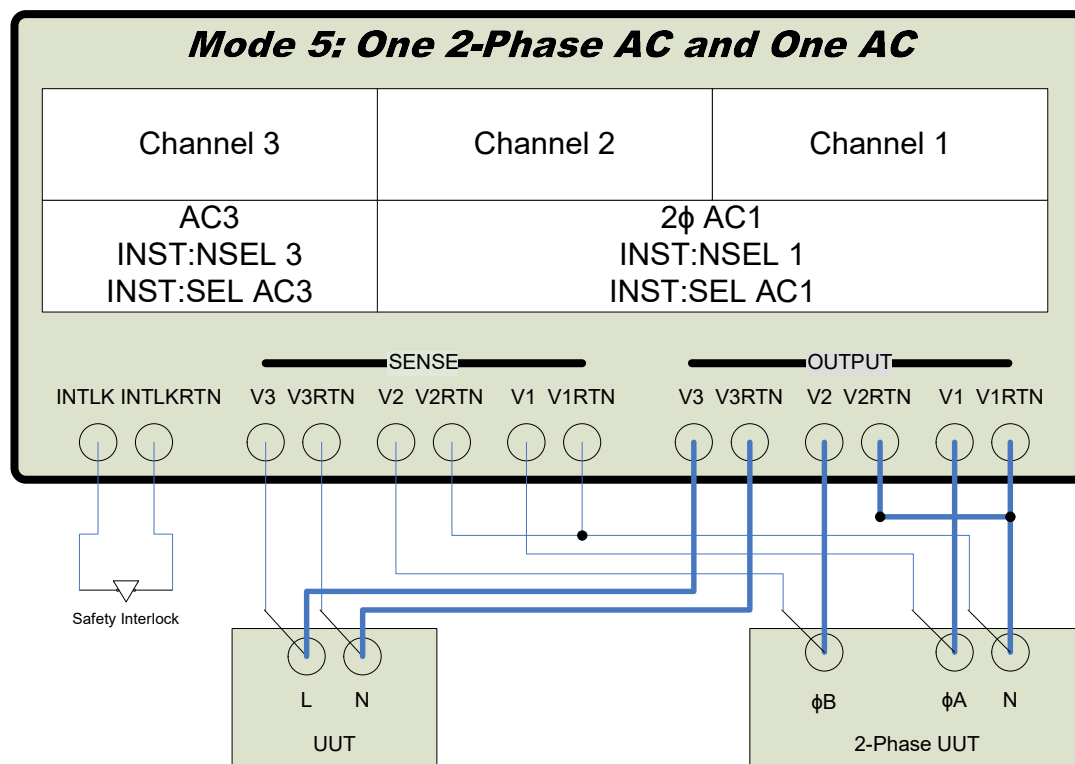


Figure 36 - Mode 5: One 2-Phase AC and One AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1 (2-Phase)</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 9.1.7 9420 (3 Channel Version) - Mode 6: One 2-Phase AC and One DC

Logical Instrument Configuration and UUT Wiring

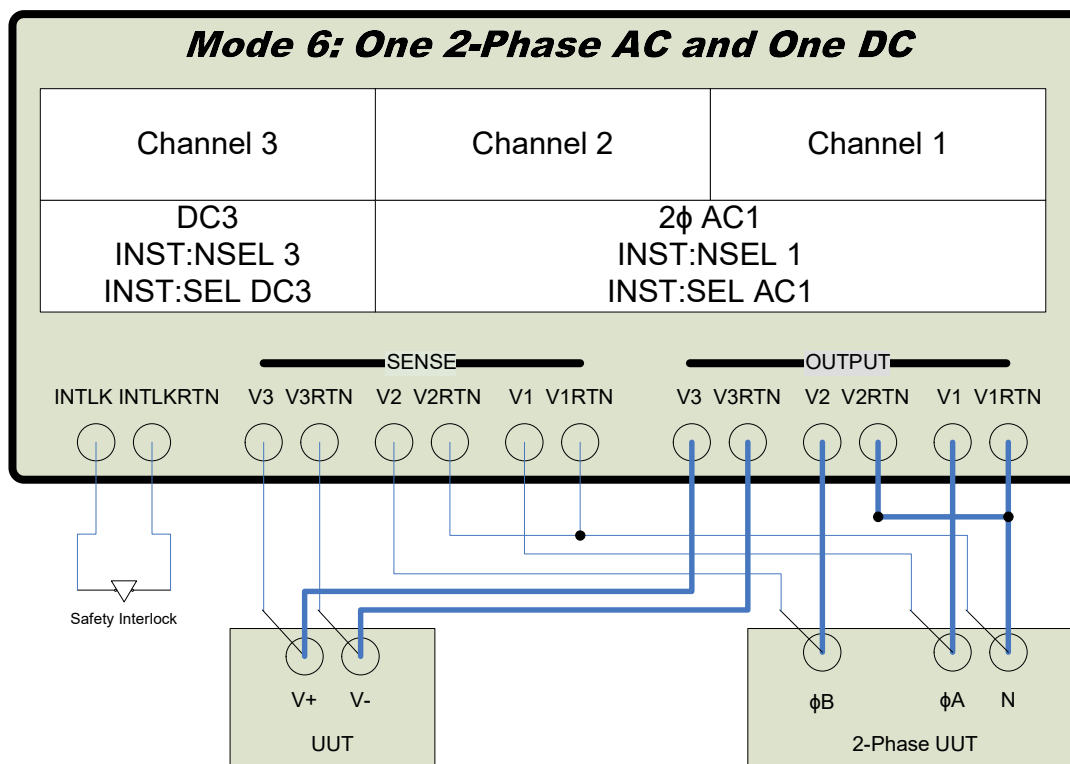


Figure 37 - Mode 6: One 2-Phase AC and One DC

#### Key Maximums for Each Logical Instrument

	Model							
<b>AC1 (2-Phase)</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 9.1.8 9420 (3 Channel Version) - Mode 7: Two AC

Logical Instrument Configuration and UUT Wiring

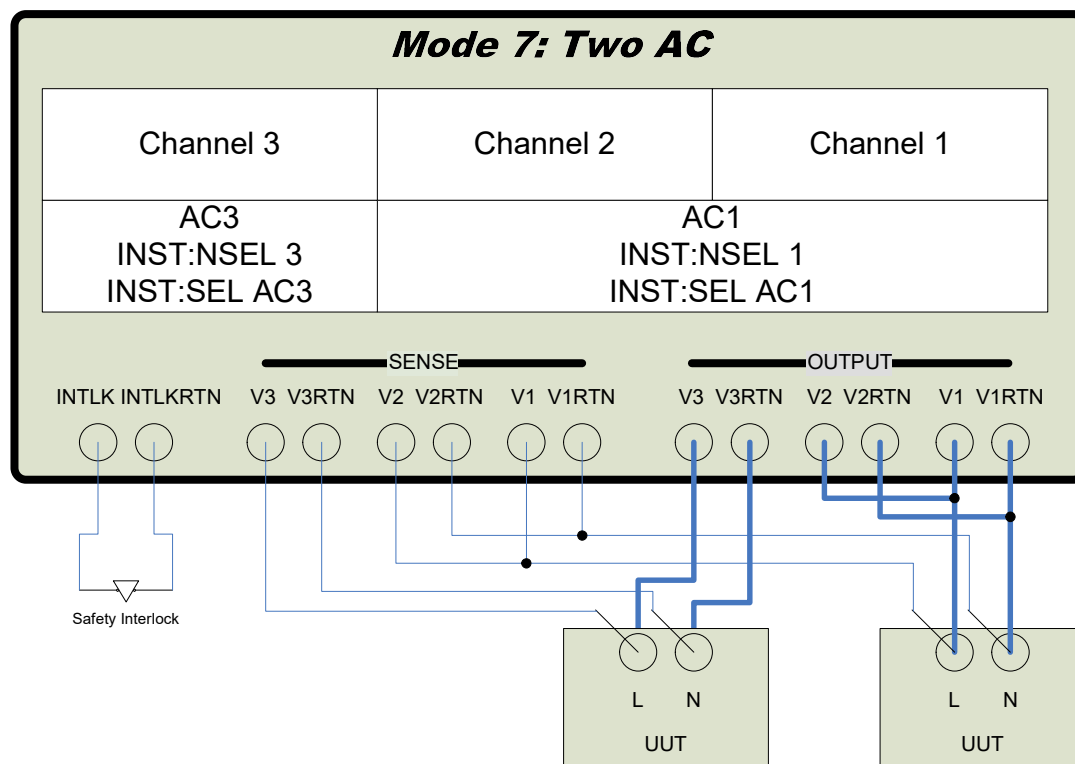


Figure 38 - Mode 7: Two AC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	60 Arms	120 Arms	180 Arms	240 Arms	300 Arms	360 Arms	420 Arms	480 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 9.1.9 9420 (3 Channel Version) - Mode 8: One AC and One DC

Logical Instrument Configuration and UUT Wiring

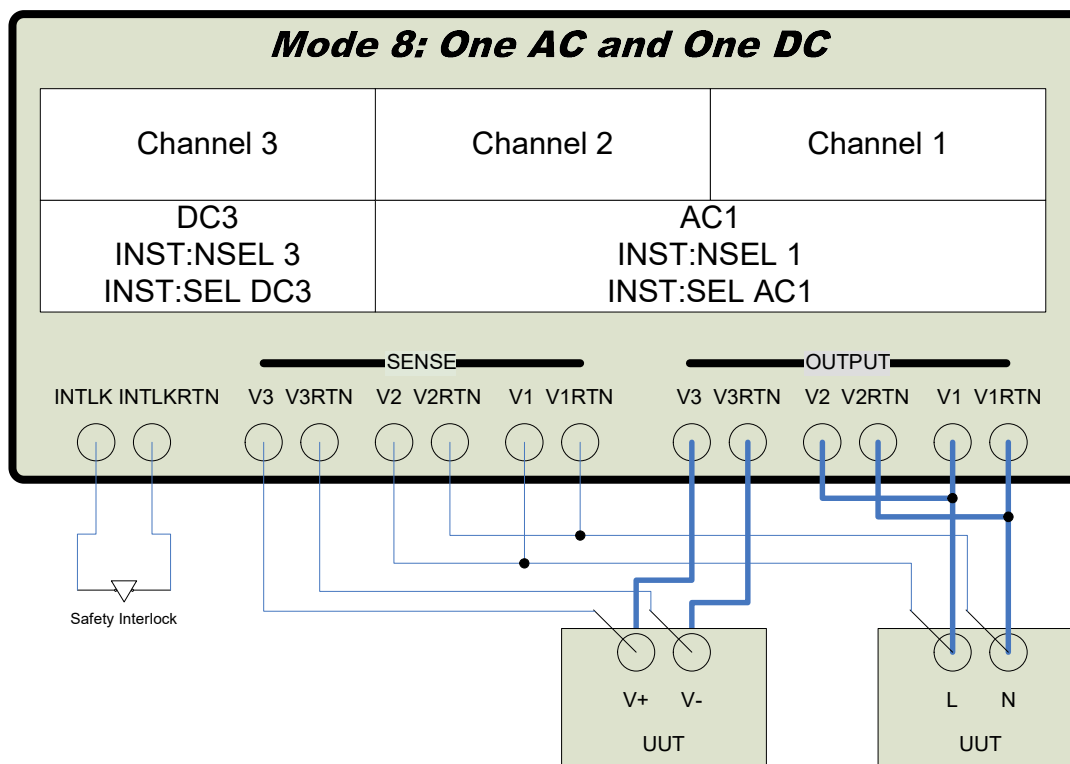


Figure 39 - Mode 8: One AC and One DC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	60 Arms	120 Arms	180 Arms	240 Arms	300 Arms	360 Arms	420 Arms	480 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 9.1.10 9420 (3 Channel Version) - Mode 9: Two AC and One DC

Logical Instrument Configuration and UUT Wiring

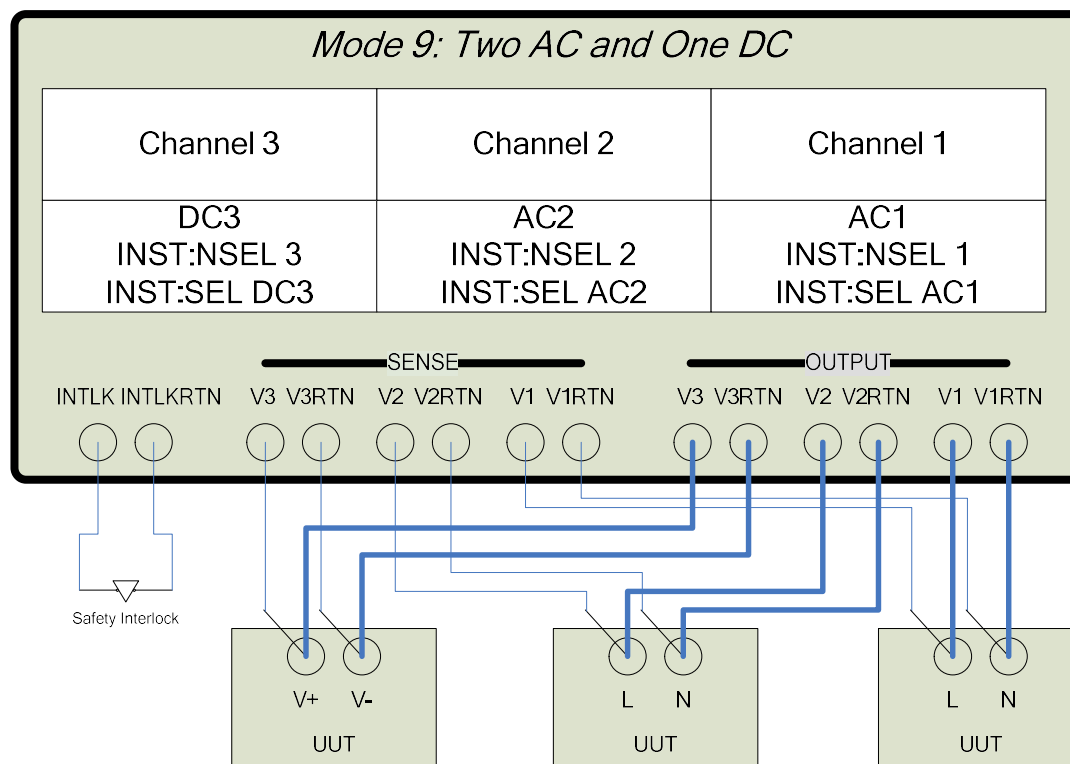


Figure 40 - Mode 9: Two AC and One DC

Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>AC2</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC3</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 9.1.11 9420 (3 Channel Version) - Mode 10: One AC and Two DC

Logical Instrument Configuration and UUT Wiring



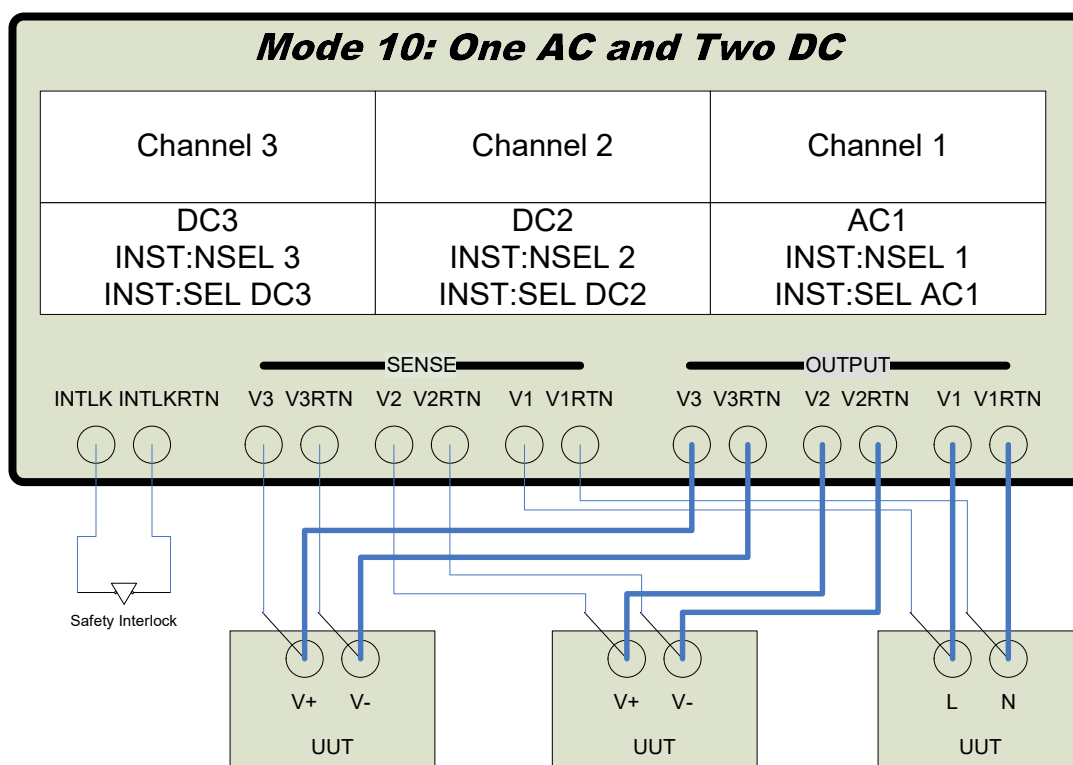


Figure 41 - Mode 10: One AC and Two DC

## Key Maximums for Each Logical Instrument

	Model							
<b>AC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							
<b>DC2</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

### 9.1.12 9420 (3 Channel Version) - Mode 11: One DC and One AC

Logical Instrument Configuration and UUT Wiring

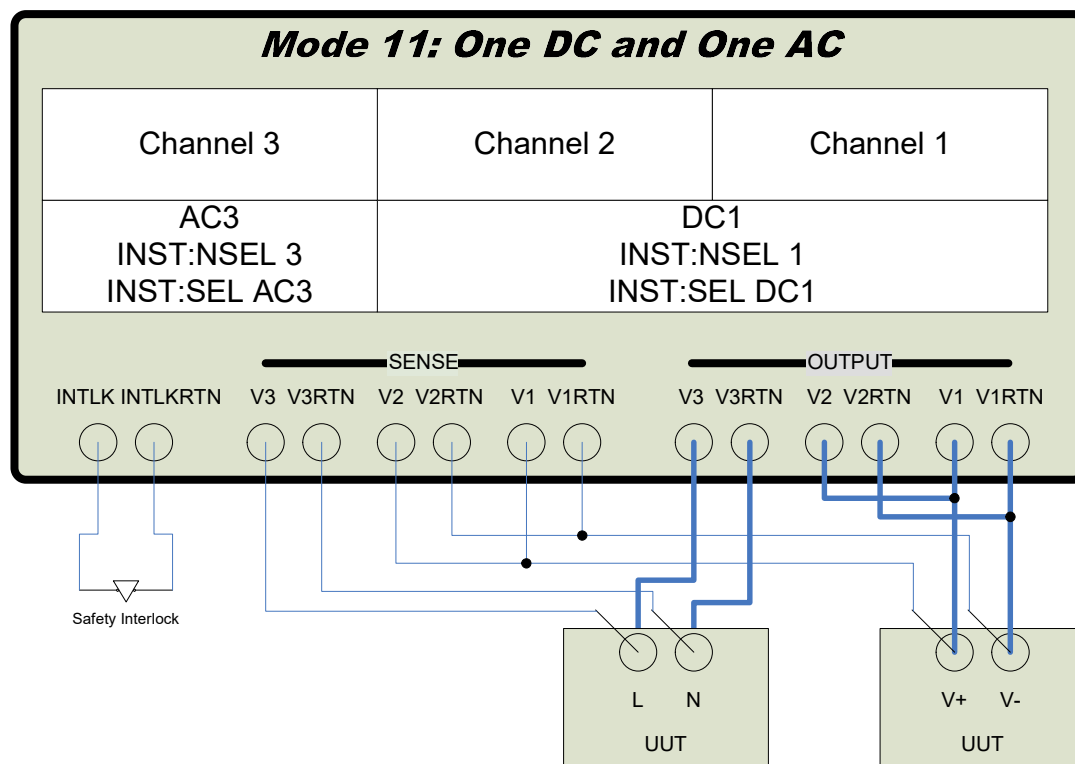


Figure 42 - Mode 11: One DC and One AC

Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	60 A	120 A	180 A	240 A	300 A	360 A	420 A	480 A
<b>AC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	30 Arms	60 Arms	90 Arms	120 Arms	150 Arms	180 Arms	210 Arms	240 Arms
<b>Peak Current</b>	3 X Maximum RMS Current							

### 9.1.13 9420 (3 Channel Version) - Mode 12: Two DC

Logical Instrument Configuration and UUT Wiring

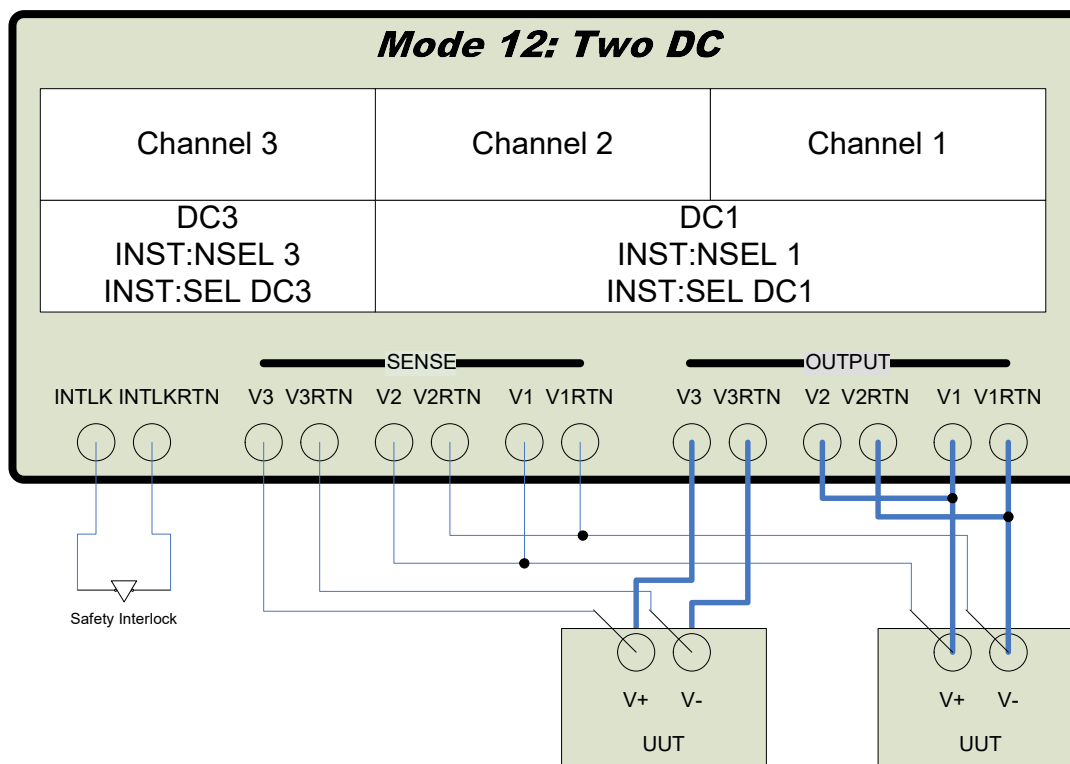


Figure 43 - Mode 12: Two DC

Key Maximums for Each Logical Instrument

	Model							
<b>DC1</b>	9420-12	9420-24	9420-36	9420-48	9420-60	9420-72	9420-84	9420-96
<b>Max Power</b>	8 kW	16 kW	24 kW	32 kW	40 kW	48 kW	56 kW	64 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	60 A	120 A	180 A	240 A	300 A	360 A	420 A	480 A
<b>DC3</b>								
<b>Max Power</b>	4 kW	8 kW	12 kW	16 kW	20 kW	24 kW	28 kW	32 kW
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A	60 A	90 A	120 A	150 A	180 A	210 A	240 A

## 9.2 9420 Reduced Channel Model

The 9420-8 is a 8kW AC Source which has 6 unique configurations.

<b>Mode</b>	<b>Available Instruments</b>	<b>Channel 1</b>	<b>Channel 2</b>
0	One 2-Phase AC	AC1 (Phase A)	AC1 (Phase B) (180° from A)
1	One AC	AC1 (2x per channel power)	
2	One DC	DC1 (2x per channel power)	
3	Two AC	AC1	AC2
4	Two DC	DC1	DC2
5	One AC and One DC	AC1	DC2

The following figures show the basic wiring for each mode.

### 9.2.1 9420 (2 Channel Version) - Mode 0: One 2-Phase AC

Logical Instrument Configuration and UUT Wiring

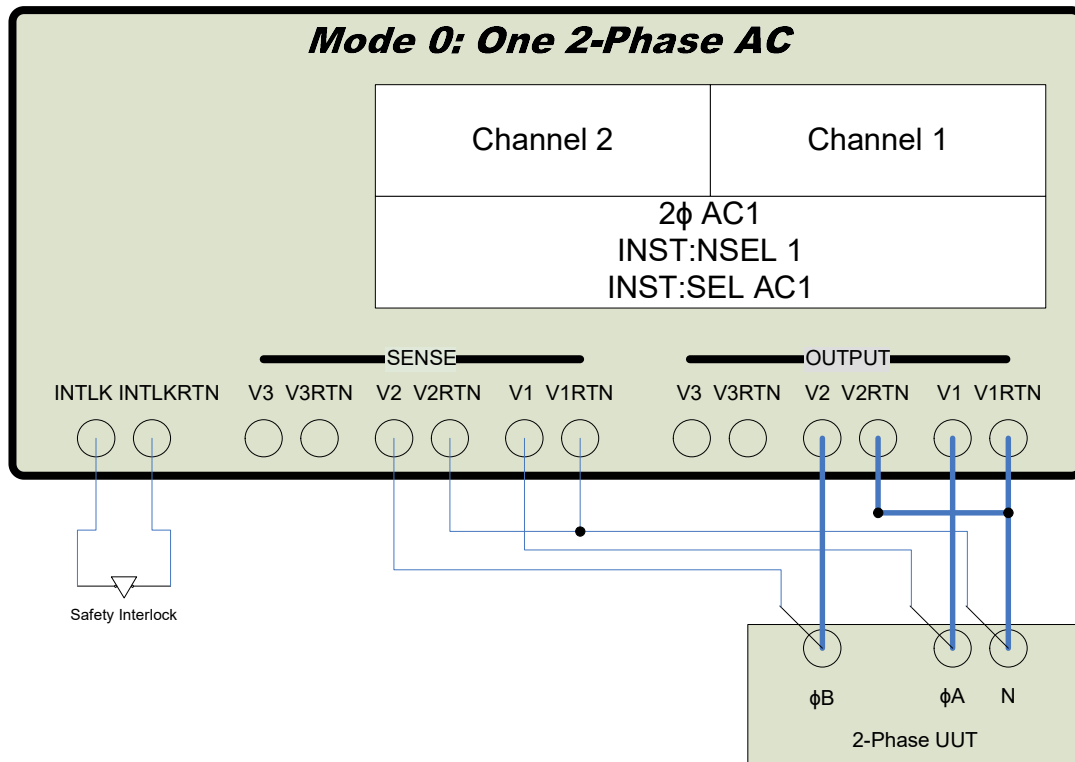


Figure 44 - Mode 0: One 2-Phase AC

#### Key Maximums for Each Logical Instrument

	Model 9420-8							
<b>AC1 (2-Phase)</b>								
<b>Max Power</b>	8 kW							
<b>Max Voltage</b>	250 Vrms Line-Neutral / 500 Vrms Line-Line							
<b>Max Current / Phase</b>	30 Arms							
<b>Peak Current / Phase</b>	3 X Maximum RMS Current							

### 9.2.2 9420-8 (2 Channel Version) - Mode 1: One AC

Logical Instrument Configuration and UUT Wiring

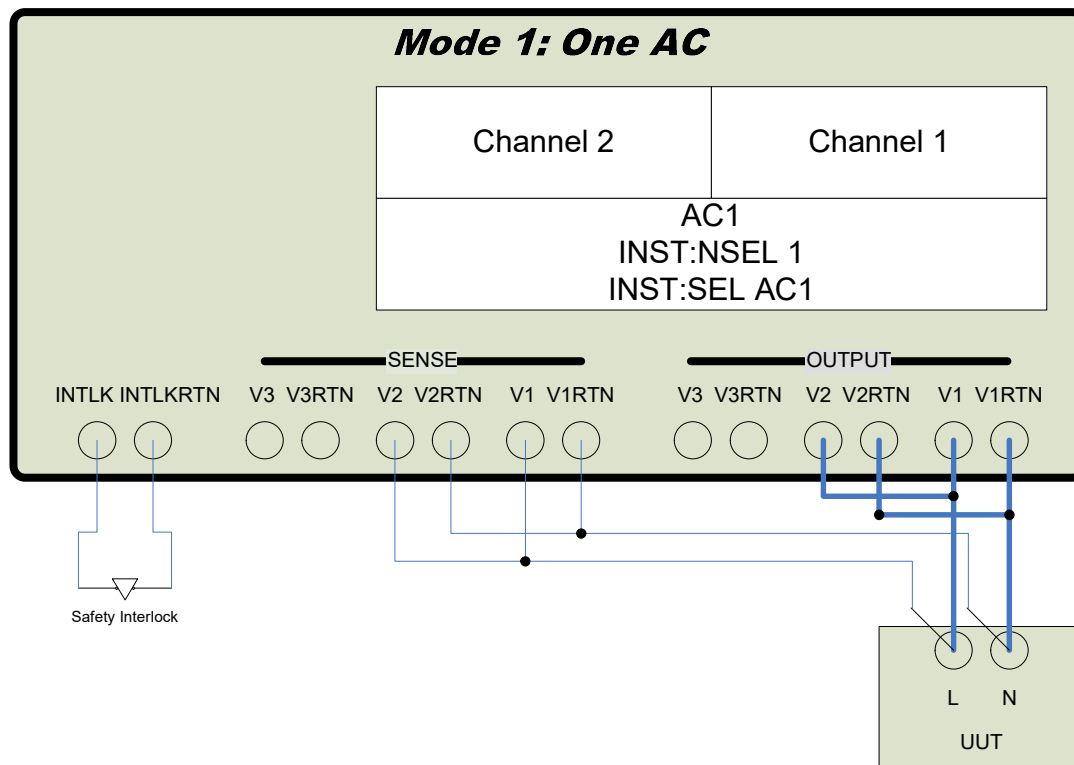


Figure 45 - Mode 1: One AC

Key Maximums for Each Logical Instrument

	Model 9420-8							
<b>AC1</b>								
<b>Max Power</b>	8 kW							
<b>Max Voltage</b>	350 Vrms Line-Neutral							
<b>Max Current</b>	60 Arms							
<b>Peak Current</b>	3 X Maximum RMS Current							

9.2.3 9420-8 (2 Channel Version) - Mode 2: One DC  
Logical Instrument Configuration and UUT Wiring

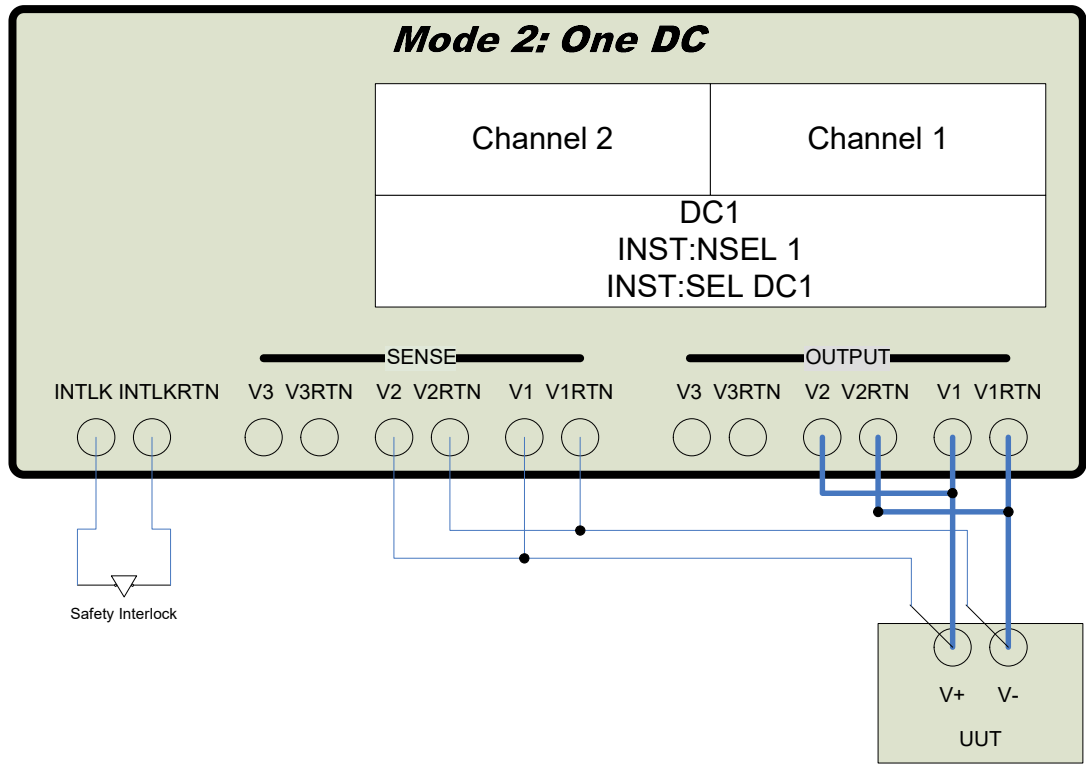


Figure 46 - Mode 2: One DC

Key Maximums for Each Logical Instrument

	Model 9420-8							
<b>DC1</b>								
<b>Max Power</b>	8 kW							
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	60 A							

9.2.4 9420-8 (2 Channel Version) - Mode 3: Two AC  
Logical Instrument Configuration and UUT Wiring

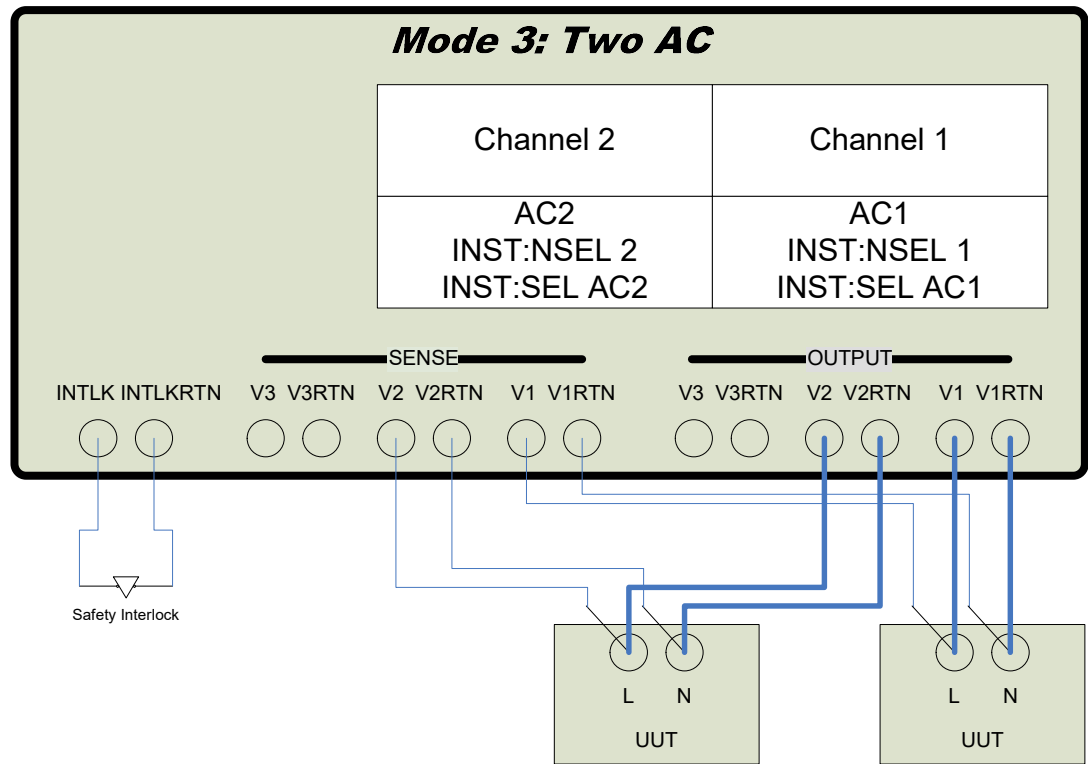


Figure 47 - Mode 3: Two AC

Key Maximums for Each Logical Instrument

	Model 9420-8							
AC1								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							
AC2								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							



**9.2.5 9420-8 (2 Channel Version) - Mode 4: Two DC**  
Logical Instrument Configuration and UUT Wiring

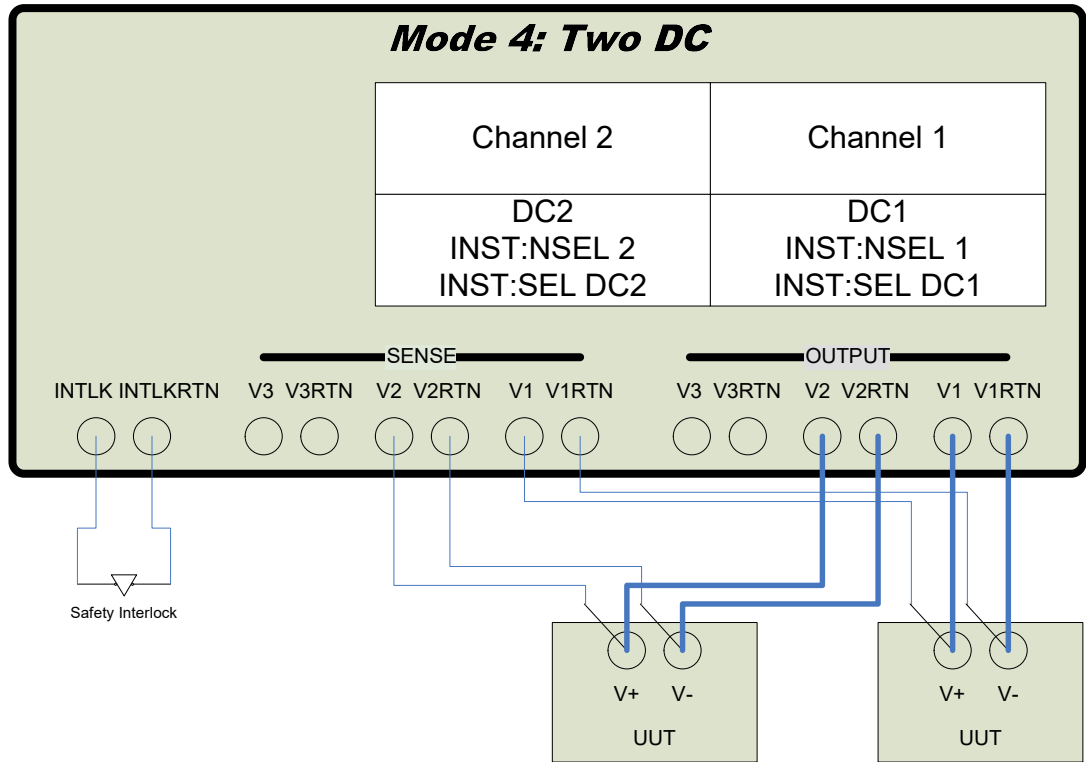


Figure 48 - Mode 4: Two DC

Key Maximums for Each Logical Instrument

	Model 9420-8							
<b>DC1</b>								
<b>Max Power</b>	4 kW							
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A							
<b>DC2</b>								
<b>Max Power</b>	4 kW							
<b>Max Voltage</b>	400 VDC							
<b>Max Current</b>	30 A							

9.2.6 9420-8 (2 Channel Version) - Mode 5: One AC and One DC  
Logical Instrument Configuration and UUT Wiring

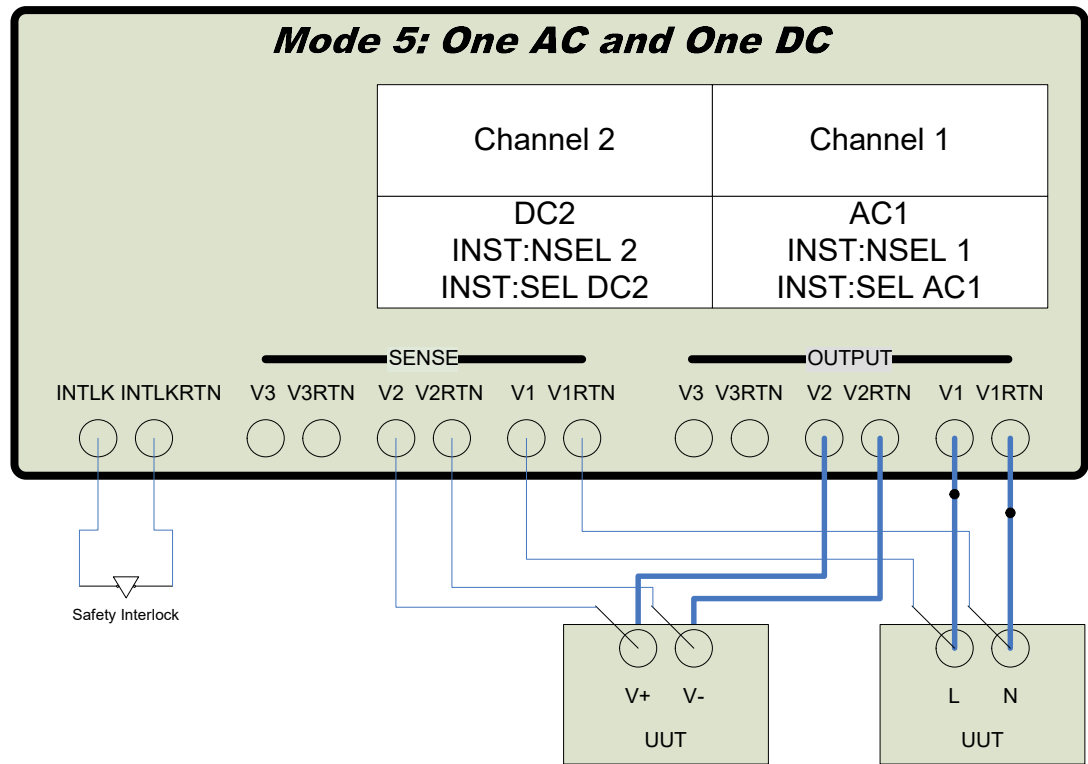


Figure 49 - Mode 5: One AC and One DC

Key Maximums for Each Logical Instrument

	Model 9420-8							
AC1								
Max Power	4 kW							
Max Voltage	350 Vrms Line-Neutral							
Max Current	30 Arms							
Peak Current	3 X Maximum RMS Current							
DC2								
Max Power	4 kW							
Max Voltage	400 VDC							
Max Current	30 A							

This page intentionally left blank.

## 10. SERVICE

---

### 10.1 Firmware Updates

There are three (3) separate processors and firmware levels which may periodically require NH Research to issue a firmware update. As such, it is important to understand what firmware is currently loaded on the system and which utility is needed to update the firmware. The following section is only a high level guide intended for NH Research support personnel or customers which have already performed a firmware update.



**Discuss the firmware update process with NH Research customer support before attempting to perform an update.**


#### 10.1.1 Updating the Network Processor

The network processor (also known as a netburner) provides the communication between the LAN interface and the internal processors. This processor is responsible for decoding the SCPI commands and converting them to the command interface used within the 9400.


This processor is updated using AutoUpdate.exe which is generally found on the local PC which the 9400 Tools were installed.

Contact NH Research customer support if needed.


Step 1: Close all external applications and launch AutoUpdate.exe. When launched, AutoUpdate.exe will provide the following window:

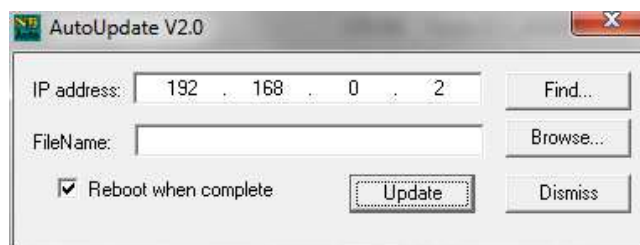

Either provide the correct IP address or select “Find” to locate net-burner processors. The 9400 will show it is currently running Nhr9400LxiNb SCPI Server.


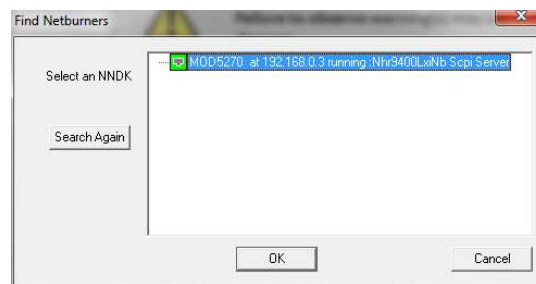


Step 2: Click Browse and locate the firmware file provided by customer support.

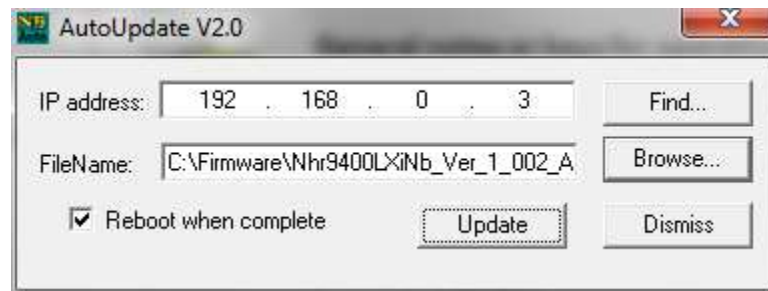

Step 3: Press Update

The utility will now show a progress bar and a programming complete message.

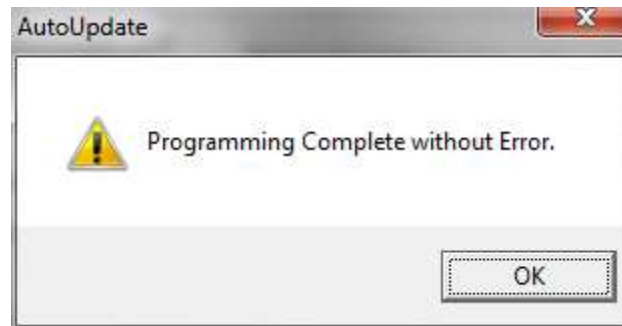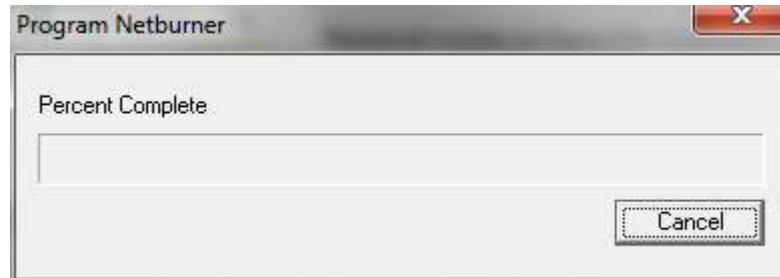

Step 4: Close the update utility and cycle power on the 9400.

### 10.1.2 Updating the Internal Processors

The following section is only a high level guide intended for NH Research support personnel or customers which have already performed a firmware update.

Before updating the firmware make sure:

- All external control programs are closed (including NHR 9400 Panel)
- The system is powered off

The firmware update utility can be found under:


Start → All Programs → NH Research → 9400 Series →  
NHR 9400 Firmware Update

Or on the local hard drive under:


"C:\Program Files (x86)\NH Research\NHR 9400\Utilities\Nhr9400FwUpdate.exe"

When opened the program will instruct the user to take the following actions:

1. Power off the unit.
2. On the master set OPTIONS switch 8 to ON.
3. On the master and all auxiliaries set ADDRESS switch 8 to ON.  
(Do not change any of the other switches on the auxiliary modules.)
4. Make sure the LAN cable is connected.
5. Power on the unit and start the firmware update utility.

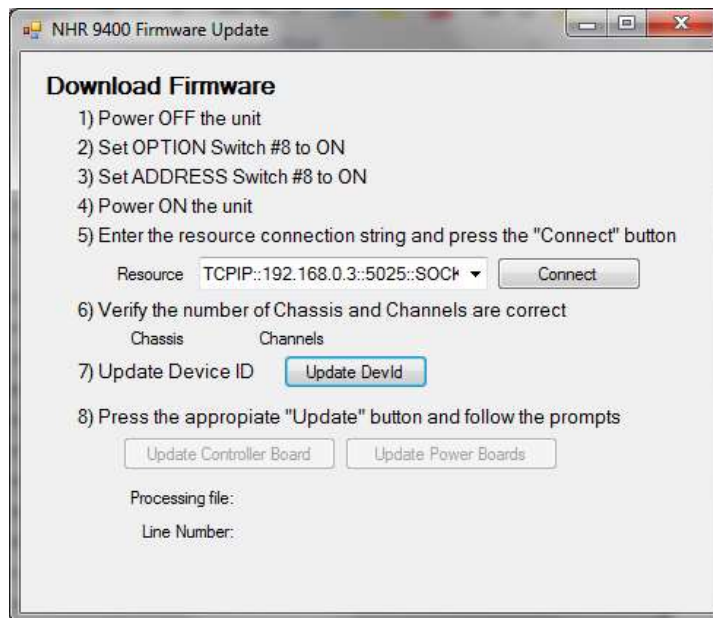


Next, enter the resource connection string in the form of "TCPIP::(ipaddress)::SOCKET" As shown below. The TCPIP address is of the master module which is specified on the back label or was changed using the "Configuring the master modules IP address" section as above.

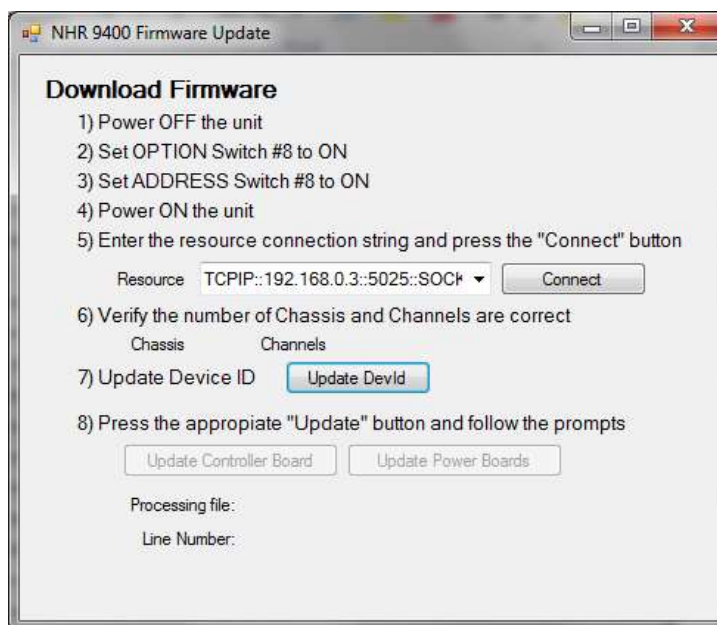

IP ADDRESS 192.168.0.3 used in example.


Be sure to use double colons in the resource ID string as shown.

Next, Press the connect button. The system will connect or display an error message: If error occurs, close the firmware update utility, correct the error and try again.

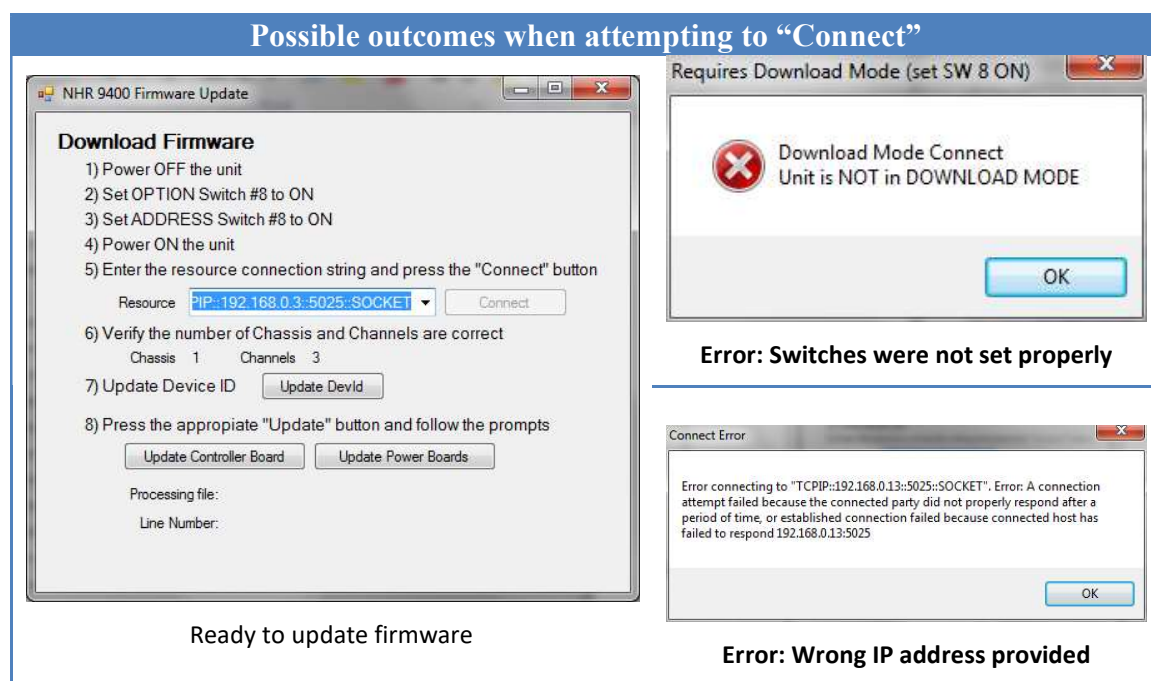


The Device ID should not be modified. This is used for Factory identification only.

To update the controller board firmware, click the “Update Controller Board” button, the following Download File window will show up:

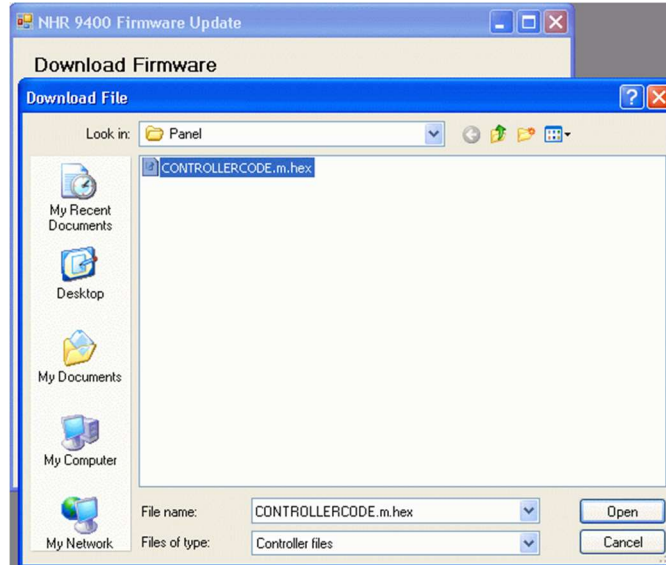


Browse to locate the firmware file provided by NH Research customer support (filename.m.hex) then select “Open”. The entire process generally takes 1-2 minutes to download the controller board firmware. When complete, and if it is successful, a pop up window will say “Controller download completed successfully” as shown:

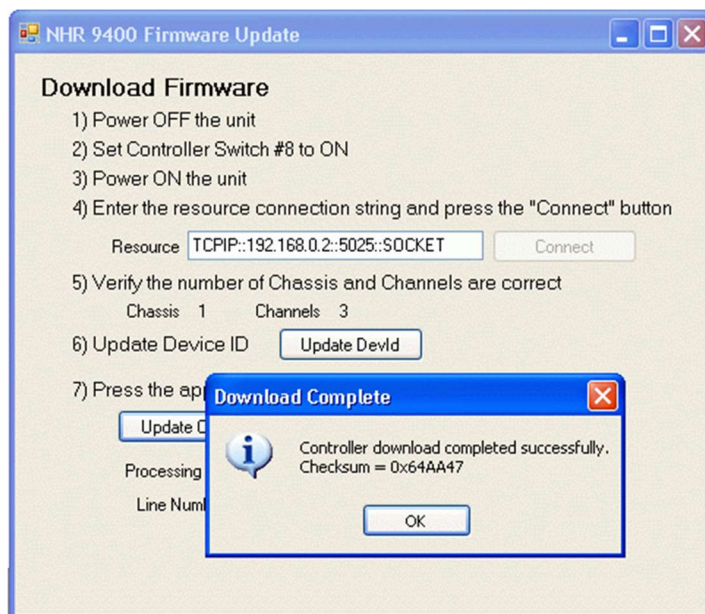




To update the controller board firmware, click the “Update Power Board” button, the following Download File window will show up:

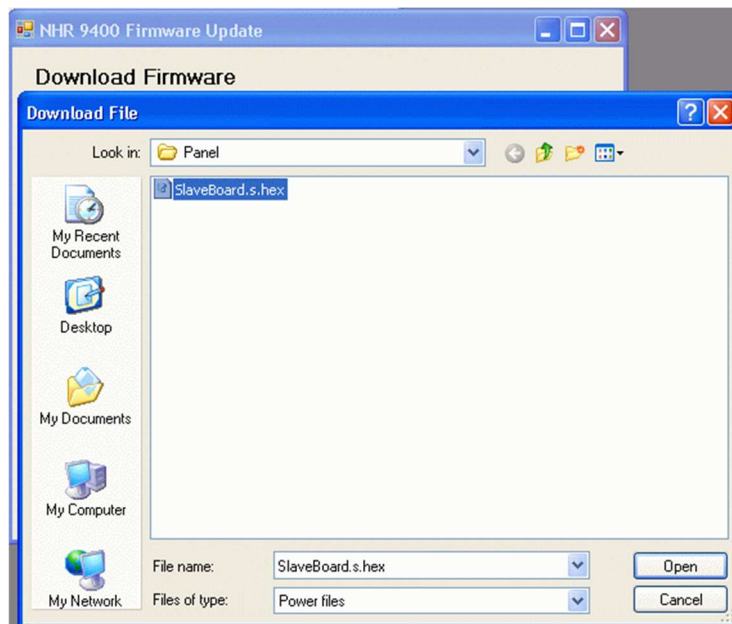

Browse to locate the power board firmware file provided by NH Research customer support (filename.m.hex) then select “Open”. The entire process generally takes 1-2 minutes to download the controller board firmware. When complete, and if it is successful, a pop up window will say “Power download completed successfully” as shown:

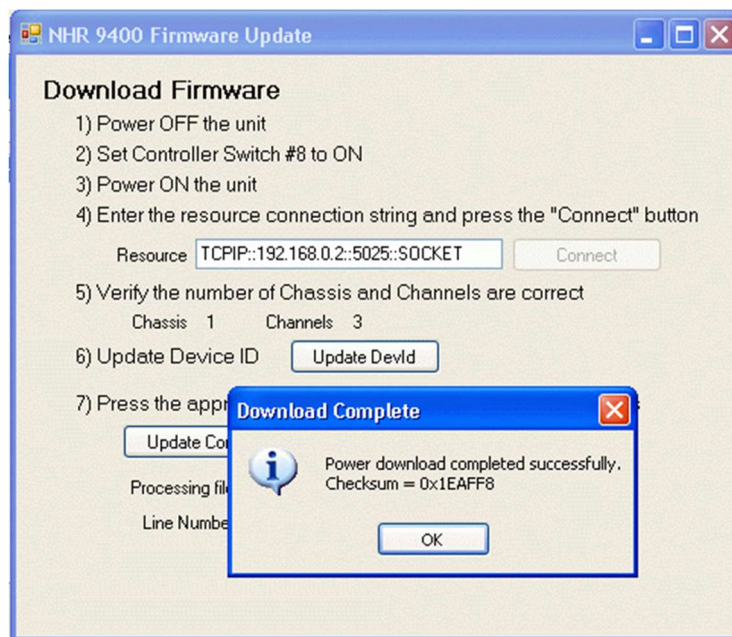

Close the update utility, return all OPTION and ADDRESS switches #8 back to the OFF state and cycle power on the 9410 or 9420 system. Do not change any other switches.

## 10.2 Periodic Maintenance

The following periodic maintenance schedule is recommended by NH Research and may need to be modified based on the environment or specific customer needs.

Cleaning: Semi-Annual (every 6 Months)

Calibration: Annually

### 10.2.1 Periodic Cleaning



**Always turn off facility power to the 9410 or 9420 before attempting to inspect or clean the system.**

**Failure to do so may result in a hazardous condition.**

The 9410 or 9420 should be inspected (externally) for dust buildup in the air intakes (front) and the exhaust fans (rear). Cleaning of the system should only be performed with facility power turned off. The exterior of the system may be cleaned with a cloth dampened with a mild detergent. Ensure the cloth is wrung out to prevent excess moisture from being left inside the unit.



**Ensure any residual moisture is completely dry before reconnecting facility power or attempting to use the system.**

Compressed air may be used to remove dust from the front and rear of the unit. Do not allow the rear fans to spin at high speed when using compressed air.

The touch panel should only be cleaned with laptop or LCD cleaning wipes. Do not attempt to use detergent on the screen as it will damage the touch interface.



**Do not open the system to clean internal components.**

### 10.2.2 Periodic Calibration

NH Research recommends an annual calibration cycle. A utility is provided allowing a customer or external calibration laboratory to perform the calibration. Otherwise, contact NH Research customer support to discuss options for NHR personnel to perform the calibration on-site.

The calibration utility can be found under:

Start → All Programs → NH Research → 9400 Series → NHR 9400 Calibration

Or on the local hard drive under:

"C:\Program Files (x86)\NH Research\NHR 9400\Utilities\Nhr9400Cal.exe"

Refer to NHR 9400 Calibration Manual (NHR P/N: 09-0347) for more information.

### 10.2.3 SCPI Programmers Reference

Refer to NHR 9400 Programmers Reference (NHR P/N: 09-0335) for more information.

## 11. ERROR CODES

---

### 11.1 Command Errors (-100 to -199)

Index #	Error Phrases	Description, Possible Reasons
-100	Command error	This indicates a syntax error, or a semantic error, or a GET command was entered, see IEEE 488.2, 11.5.1.1.4.
-102	Syntax error	Indicates that an unrecognized command or data type was encountered. For example, a string was received when the device does not accept strings.
-108	Parameter not allowed	Indicates that more parameters were received than expected for the header. For example, *ESE common command only accepts one parameter, so *ESE 0, 1 is not allowed.
-109	Missing parameters	Indicates that less than required parameters were received for the header. For example, *ESE requires one parameter, *ESE is not allowed.
-114	Header suffix out of range	Indicates the value of a header suffix attached to a program mnemonic makes the header invalid.
-151	Invalid string data	Indicates that a string data element was expected, but was invalid, see IEEE 488.2, 7.7.5.2. For example, an END message was received before the terminal quote character.
-171	Invalid expression	Indicates the expression data element was invalid, see IEEE 488.2, 7.7.7.2. For example, unmatched parentheses or an illegal character.
-180	Macro error	This error, as well as error -181 through -189, is generated when defining a macro or execution of a macro. This particular error message is used if the device cannot detect a more specific error.
-181	Invalid outside macro	Indicates that a macro parameter place holder was encountered outside of a macro definition.

**11.2 NHR Common Device Errors (-1200 to -1299)**

Index #	Error Phrases	Description, Possible Reasons and fixes
-1291	Grid over temperature	The Grid Board is over temperature. This is very rare unless the cooling fan stops working.
-1292	Hardware reset error	There is an unexpected restart of the DSP controller. This is very rare, normally caused by internal housekeeping problem or AC line fluctuation.
-1293	Macro Queue Full	Macro command buffer is full when there are more macro commands waiting to be learned. User needs to limit the total number of macro commands to less than 79 commands.
-1294	Range error	A command is received with its parameter out of the setting [min, max] range.
-1295	Mode error	A command is received without its prerequisite (Mode) set. For example, A Macro command is received without setting the Macro Mode to <i>Macro Learn</i> ; A write calibration to flash command is received without setting the Write Cal Mode to <i>Write Cal Start</i> .
-1296	Command Error	The command is not recognized.
-1297	Interlock	The interlock connector (supposed to be shorted) is open when the user tries to turn on any channels. User should double check the wiring on the interlock connector.
-1298	Calibration Checksum Error	The calibration data saved in Flash has been corrupted. The system will not use the stored data, and instead, will use the default data. This will not affect the function of the system. However, this will affect the accuracy of the measurement.

Note: This group of errors does not require a \*RESET command to clear error, a \*CLS command (clear error command) will clear the error.

### 11.3 NHR Channel Device Errors (-1300 to -1399)

Index #	Error Phrases	Description, Possible Reasons and fixes
-1385	Energy star range error	This error will only apply to 9420. When the user tries to make an energy star measurement, if the actual current is higher than the energy star measurement circuit capacity, this error will flag. For example, if there is a 3A output current, the user didn't realize and wants to use the 0.1A range energy star measurement circuitry to measure the current, in order to protect the circuit, the system will disallow the command and will raise an Energy star range error.
-1386	DC bus out of spec	This error will only apply to 9410DC and 9420DC configuration. If the 9410DC/9420DC system is connected to high-voltage equipment (Source, battery, capacitor or etc.) and its voltage is 10% over the current voltage range setting, this error will flag. In some cases this error indicates that the selected mode does not match the wiring, refer to section "94xx Hardware Modes" in the user's manual and verify the selected mode and wiring.
-1387	Sink over power trip	When the Safety trip - OP Sinking is set and enabled (trip time $\geq 0$ ), and when the output power is greater than the setting for a certain time, this error will flag. Or, if the output RMS is greater than the absolute hardware limit for a short amount of time, this error will flag. Here, Sinking means power flow direction
-1388	Sink over current trip	When the Safety trip - OC RMS Sinking is set and enabled (trip time $\geq 0$ ), and when the output current RMS is greater than the setting for a certain time, this error will flag. Or, if the output RMS is greater than the absolute hardware limit for a short amount of time, this error will flag. Here, Sinking means power flow direction.

-1389	Under voltage trip	When the Safety trip - Under Voltage (RMS) is set and enabled (trip time $\geq 0$ ), the output voltage RMS is monitored, when the channel is on and output voltage is less than the setting for a certain time, this error will flag.
-1390	Sense error	This error is normally caused by mis-wiring of the sense lead. The user could forget to connect the sense wire or reversed the sense leads.
-1391	Load High-Z error	This error only applies to 9430 Load. If the 9430 load is connected to a soft source, the control loop conflict could cause the source to oscillate. This is undesirable and could cause further damage to the system or UUT. The High-Z means the source has high impedance (or too soft). This error shows up more often in controller board firmware version 6.370 and previous. After version 6.372, it allows more ringing on the source. Recommend to upgrade firmware to 6.372 or later if user sees this problem.
-1392	Source over Power trip	When the Safety trip - OP Sourcing is set and enabled (trip time $\geq 0$ ), and when the output power is greater than setting for a certain time, this error will flag. Or, if the output RMS is greater than the absolute hardware limit for a short amount of time, this error will flag. Here, Sourcing means power flow direction.
-1393	Source over current trip	When the Safety trip - OC RMS Sourcing is set and enabled (trip time $\geq 0$ ), and when the output current RMS is greater than setting for a certain time, this error will flag. Or, if the output RMS is greater than the absolute hardware limit for a short amount of time, this error will flag. Here, Sourcing means power flow direction.

-1394	Over Voltage Trip	When the Safety trip - Over Voltage (RMS) is set and enabled (trip time $\geq 0$ ), the output voltage RMS is monitored, when over the setting for a certain time, this error will flag.
-1395	Internal Over temperature error	System internal over temperature error is very rare unless the cooling fan stops working or the ambient temperature is too high.
-1396	Out of regulation	N/A in 9400 series.
-1397	Range error	A command for a channel is received with its parameter out of the setting [min, max] range.
-1398	Mode pre-requisite not set	A command for a channel is received without its prerequisite (Mode) set. For example, try to select a user waveform when the channel is configured to be DC output; Try to re-configure the channel when it is still on.

Note: This group of errors does not require a \*RESET command to clear error, a \*CLS command (clear error command) will clear the error.



This page intentionally left blank.

## 12. DEVICE ERRORS REQUIRE RESET TO CLEAR (100 TO 199)

Index #	Error Phrases	Description, Possible Reasons and fixes
101	Watch dog error	<p>This error is normally caused by several reasons:</p> <p>1 - Drop of the Ethernet cable. Check the Ethernet cable to the front monitor or from back of the Ethernet plug to computer or other systems.</p> <p>2 - The internal DSPs or Micro controllers hang for some reason. Recycle power to clear error.</p>
102	Emergency Off	<p>Each 9400 Chassis, either the master or aux, has an E_OFF terminal block at the back panel under the fan. Pin1-2 of the terminal block needs to be shorted. Otherwise, system will not turn on and will show an "Emergency off error". In 9400-12, check the jumper wire at E-OFF terminal to see if it is loose. In 9400-24 and up, check if the E-OFF button has been pushed, or if the wire in the E-OFF terminal block is loose.</p>
103	Can bus error	<p>The 9400 system uses CAN BUS internally for inter-boards communication. This error shows the DSP controller has a problem talking to one or more of the power boards due to bus congestion or noise. This is very rare and normally only happens at 9400 Calibration stage.</p>
104	Input AC OV	<p>This error implies that the 9400 system sees a high input grid AC voltage. To protect itself, it will turn off the system and wait for a RESET command. This is normally cause by grid voltage fluctuation.</p>
105	Input AC DUV	

		<p>This error implies that the 9400 system sees the input grid AC voltage drop below its required minimum. To protect itself, it will turn off the system and wait for a RESET command. This is normally caused by two reasons:</p> <p>1 - Other error in this table happened first that causes the system to turn off and open grid relays, the AC voltage sense will lose its input and raise an error. In this case, this error is just a by-product of other errors.</p> <p>2 - Grid voltage fluctuation.</p>
106	Grid turn on error	<p>This error normally is caused by the user turning on-off the system too often, thus the soft start resistors (with is PTC resistor) is too hot and needs to wait 5-10 minutes until the resistors cool down. If the user did not recycle power too often and still sees this error, there might be not enough grid voltage (need at least 360VL-L to turn it on).</p>
107	Grid over voltage	<p>The 9400 system has an 800V DC bus internal, the DC Bus has capacitor bank store energy to handle power transient. This error typically shows that there is a high power transient than the capacitor bank can handle, so the voltage on the cap bank rise above a certain safety threshold.</p> <p>For example, a user connects 9410-12kW to an inverter and a load. Initially the load draws 12kW power from the 9410, and instantly, the load stops drawing power and the inverter starts to source 12kW power back to the 9410. This will cause a 24kW instant power change. Before the control loop can react to it, the cap bank has to absorb the energy. If it can't, the voltage on the cap bank will rise and trip the error.</p>

108	Grid voltage drop out	<p>The 9400 system has an 800V DC bus internal, the DC Bus has capacitor bank store energy to handle power transient. This error shows that the 800Vdc has dropped below 700V. This could be caused by a couple reasons:</p> <p>1 - Other error in this table happened first that causes the system to turn off, the 800VDC will slowly drop under 700V and raise an error. In this case, this error is just a by-product of other errors.</p> <p>2 - There might be a high power transient similar to error code 107, that the cap bank can't handle and internal voltage dropped.</p>
109	Grid over current	<p>This error implies that the 9400 input AC side sees an over current. This error is very rare, and may be caused by several reasons:</p> <p>1 - A noise caused the measurement circuitry to have a false trip.</p> <p>2 - A line voltage fluctuation.</p> <p>3 - If the error consistently shows up even at system power up, shows there might be a hardware issue with the grid board current sense circuitry. For example, a capacitor is shorted. The board needs to be sent back for repair or field service.</p>
110	Grid frequency error	<p>The 9400 series system monitors the input grid frequency and makes sure it follows the IEEE 1547 standard. If it sees the frequency outside the standard, it will raise this error and wait for a RESET. This error is rare and is normally caused by an unstable or fluctuation of grid.</p>

111	Configuration Error	<p>This error normally shows up in multi-chassis system when the Address DIP-Switch did not set right. At each 9400 chassis (either master or aux), there is an Address DIP Switch at the back panel under the fan. Each chassis needs to set to the right address. Master address is 0; Aux address starts from 1 then 2.... For example, if a customer has a 9410-96kW. The Master address should be 0; Aux Address should be 1-7. However, if a customer took out Aux5 and sent it back for repair without adjusting the Address DIP Switch, the controller will see Aux6 and Aux7, but it will not see Aux5 thus it will report a configuration error. In this case, adjust the Address DIP Switch Aux7 to Aux5 so the controller will see Aux1-6. System will be reconfigured as 9400-84kW.</p>
112	Grid hardware inhibit	<p>This error could be a by-product of Emergency-OFF error. If there is no E-OFF error, it could imply the 9400 grid board has a housekeeping voltage drop out issue. This is rare, probably caused by noise. If this keeps happening and RESET doesn't fix the issue, it needs to be sent back for repair.</p>
113	Internal voltage drop out	<p>Each channel of the 9400 system has 540V DC bus internal, the DC Bus has capacitor bank to store energy to handle power transient. This error shows the internal voltage has dropped under 450V. Possible reasons are:</p> <p>1 - Other error in this table happened first that causes the system to turn off. The 540VDC will slowly drop under 450V and raise an error. In this case, this error is a by-product of other errors.</p> <p>2 - There might be a high power transient in this channel that the cap bank can't handle and dropped internal voltage.</p>

114	Internal voltage over voltage	<p>Each channel of the 9400 system has 540V DC bus internal, the DC Bus has capacitor bank store energy to handle power transient. This error shows this internal voltage has risen over 600V. This error typically shows that there is a higher power transient than the capacitor bank can handle, so the voltage on the cap bank will rise above a certain safety threshold.</p> <p>For example, a user connects 9410-12kW to an inverter and a load. Initially the load draws 12kW power from the 9410, and instantly, the load stops drawing power and the inverter starts to source 12kW power back to the 9410. This will cause a 24kW instant power change. Before the control loop can react to it, the cap bank has to absorb the energy. If it can't, the voltage on the cap bank will rise and trip the error.</p>
115	Internal DC-DC error	<p>This error shows one of the UUT board cannot be properly turned on. If there are no other errors, this normally shows the board has a problem and it needs to be sent back and repaired.</p>
116	Peak over voltage trip	<p>This error implies that one of the channels sees a Peak over Voltage (540V).</p> <p>There might be several reasons:</p> <p>1 - If the UUT has fair amount of inductance and a sudden open of UUT relay might cause a back-kick of the voltage. The 9400 systems see the voltage and will open relay to protect itself.</p> <p>2 - There might be a control loop conflict between 9400 systems and the UUT, which may cause the output voltage to oscillate (ring). When this happens, the peak voltage might trigger this protection.</p>

117	Peak over current trip	<p>This error implies that one of the channels sees a Peak over current. The over current can be set at safety trip or if not, is 100A per channel per chassis by default.</p> <p>For example, a 9410-24 is configured 3-phase AC. It has a default PK current trip of 200A per phase by default. If it is configured single phase, it has a 600A PK current trip by default.</p> <p>This is probably one of the most frequently shown errors. Reasons for this error includes:</p> <p>1 - The UUT has a high inrush current that triggered the protection. The high inrush current is normally caused by some internal caps that have to be charged up. Possible solution: an external soft start circuit (normally involves resistor and relay) is required.</p> <p>2 - There might be a short circuit somewhere the user isn't aware in the UUT or somewhere along the cable. Or the UUT is actually trying to draw a high current under certain conditions. 9400 system is trying to protect itself in this case.</p> <p>3 - There might be a false trip due to the protection circuit false alarm caused by noise or failure of circuitry. If it keeps happening and *RESET command cannot clear the issue, it needs to send back for repair.</p>
-----	------------------------	--

118	Internal PK over current trip	<p>This error shows that the 9400 system internal DC/DC circuitry current protection tripped. This error is rare and there are several reasons:</p> <p>1 - Sometimes a noise could cause trigger a false error; the *RESET command should clear it.</p> <p>2 - Sometimes a high power transient could cause the internal voltage to fluctuate very fast, and the fluctuation could cause the internal current to trip. This is the circuitry trying to protect itself.</p> <p>3 - There might be some hardware failure in the circuitry.</p>
119	Hardware Inhibit error	<p>This error could be a by-product of Emergency-OFF error; Or, if there isn't an E-OFF error, it could imply the 9400 UUT boards have a housekeeping voltage drop out issue. This is rare, probably caused by noise. If it keeps happening and the RESET doesn't fix the issue, it needs to be sent back for repair.</p>

Note: All errors in this group need a \*RESET command to clear.



**This page intentionally left blank.**

---

**13. FATAL ERRORS THAT REQUIRE SERVICE (200 TO 299)**

---

Index #	Error Phrases	Description, Possible Reasons and fixes
201	Firmware error	These error shows the firmware stored in flash is either corrupt or does not match the firmware version for each other. Need to re-download the firmware.
203	Slave firmware do not match	
204	Slave firmware error	
207	Controller Device number error	
208	Power board (slave) device number error	
209	No chassis error	One or more boards are not detected or the address of the chassis is set wrong. Need to use the statusmonitor.exe for further details.
210	No channel error	
211	Bad configuration error	

**This page intentionally left blank.**