

GETTING STARTED GUIDE

NI PXIe-4463

DSA Analog Output

Français Deutsch 日本語 한국어 简体中文

ni.com/manuals

This document explains how to install, configure, and set up the NI PXIe-4463 Dynamic Signal Acquisition (DSA) analog output module. Driver support for the NI PXIe-4463 was first available in NI-DAQmx 14.5. For the list of devices supported by a specific release, refer to the NI-DAQmx Readme, available on the version-specific download page or installation media. To download the latest version of NI-DAQmx, visit ni.com/info and enter the Info Code `daqmx`. The NI PXIe-4463 is available with BNC connectors or Mini-XLR connectors.

Contents

Electromagnetic Compatibility Guidelines	1
Unpack the Kit	2
Prepare the Environment	2
Verify the Kit Contents	3
Other Equipment	3
Install the Software	3
Install the Hardware	4
Configure the Hardware in MAX	5
Connect the NI PXIe-4463 Output	6
NI PXIe-4463 Output Connections	7
NI PXIe-4463 Front Panel LEDs	8
Environmental Management	9
Worldwide Support and Services	9

Electromagnetic Compatibility Guidelines

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) stated in the product specifications. These requirements and limits provide reasonable protection against harmful interference when the product is operated in the intended operational electromagnetic environment.

This product is intended for use in industrial locations. However, harmful interference may occur in some installations, when the product is connected to a peripheral device or test object, or if the product is used in residential or commercial areas. To minimize interference with radio

and television reception and prevent unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Furthermore, any modifications to the product not expressly approved by National Instruments could void your authority to operate it under your local regulatory rules.



Caution To ensure the specified EMC performance, operate this product only with shielded cables and accessories.



Caution To ensure the specified EMC performance, the length of all I/O cables must be no longer than 3 m (10 ft).

Unpack the Kit

The NI PXIe-4463 module ships in an antistatic package to prevent electrostatic discharge from damaging module components. To prevent such damage when handling the module, ground yourself using a grounding strap or by holding a grounded object, and complete the following steps:

1. Touch the antistatic package to a metal part of the grounded object before removing the module from package.
2. Remove the module from the package and inspect the module for loose components or any other sign of damage.



Caution Never touch the exposed pins of connectors.

3. Unpack any other items and documentation from the kit.

Notify NI if the module appears damaged in any way. Do not install a damaged module into your system. Store the module in the antistatic package when not in use.

Prepare the Environment

Ensure that the environment in which you are using the NI PXIe-4463 meets the following specifications.

Operating ambient temperature 0 °C to 55 °C
(IEC 60068-2-1, IEC 60068-2-2)

Operating relative humidity 10% to 90%, noncondensing
(IEC 60068-2-56)

Altitude 2,000 m (800 mbar)
(at 25 °C ambient temperature)

Pollution Degree 2

Indoor use only.



Caution Clean the hardware with a soft, nonmetallic brush. Make sure that the hardware is completely dry and free from contaminants before returning it to service.



Note Refer to the *NI PXIe-4463 Specifications* at ni.com/manuals for complete specifications.

Verify the Kit Contents

The following items are necessary to set up and use the NI PXIe-4463:

- NI PXIe-4463 analog output module
- NI-DAQmx installation media
- *NI PXIe-4463 Getting Started Guide*



Note You can download any needed documents from ni.com/manuals.

Other Equipment

The following additional items, not included in the module kit, are necessary to operate the NI PXIe-4463:

- PXI Express chassis with
 - controller, or
 - MXI-Express (card or built-in)
- (optional) NI LabVIEW



Note For a list of LabVIEW versions supported by a specific version of NI-DAQmx, refer to the NI-DAQmx Readme, available on the version-specific download page at ni.com/downloads or on the installation media.

Install the Software

Software support for the NI PXIe-4463 is provided by NI-DAQmx. The *DAQ Getting Started Guide*, which you can download at ni.com/manuals, describes how to install NI-DAQmx software, how to install and configure your NI-DAQmx supported hardware, and how to confirm that your device is operating properly. For detailed NI software version support, refer to the NI-DAQmx Readme.

You must install the software before using the hardware.

1. Optional: If you are developing an NI-DAQmx application, install an ADE, such as LabVIEW or LabWindowsTM/CVITM.
2. Install the latest service packs for your operating system.
3. Install a compatible version of NI-DAQmx. To download the NI-DAQmx driver, visit ni.com/info and enter the Info Code `daqmx`.
4. Follow the instructions in the installation prompts.



Note Windows users may see access and security messages during installation. Accept the prompts to complete the installation. For troubleshooting information, refer to the *Worldwide Support and Services* section.

5. When installation completes, select **Restart** in the dialog box that asks if you want to restart, shut down, or restart later.
6. Optional: Download the NI Dynamic Signal Analyzer (DSA) and NI Dynamic Signal Generator (DSG) soft front panels (SFP) to aid with signal generation and spectral measurements. For more information about the SFPs, visit ni.com/info and enter the Info Code `excpwb`.

Install the Hardware



Note To maintain forced air cooling in the PXIe system, refer to the *Maintain Forced-Air Cooling* document.

1. Plug in your chassis before installing the NI PXIe-4463 module. The power cord grounds the chassis and protects it from electrical damage while you install the module.
2. Make sure the chassis is powered off.



Caution To protect yourself, the chassis, and the module from electrical hazards, leave the chassis powered off until you finish installing the module.


3. Touch a metal part on the chassis to discharge any accumulated static electricity.
4. Remove the protective plastic covers from the two front panel mounting screws on the module.
5. Remove the filler panels covering the selected slots.
6. Make sure the NI PXIe-4463 injector/ejector handle is in its downward position as shown in Figure 1.



Caution When installing the module, make sure both edges are positioned inside the guides and that the module components do not come into contact with adjacent modules.

7. Align the NI PXIe-4463 with the card guides on the top and bottom of the selected slots.
8. Hold the injector/ejector handle down as you slowly slide the module into the chassis until the handle catches on the injector/ejector rail, as shown in Figure 1.

Figure 1. Sliding the NI PXIe-4463 into the Chassis

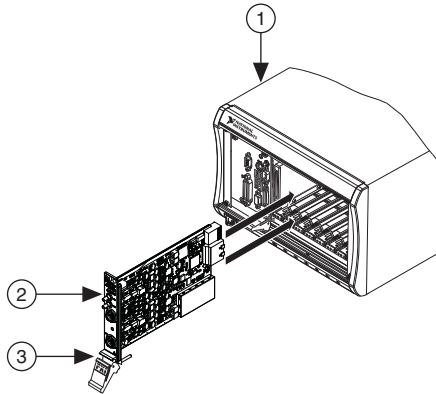

- 1 Chassis
- 2 Hardware Module (Mini-XLR model shown)
- 3 Injector/Ejector Handle in Down (Unlatched) Position

9. Raise the injector/ejector handle to latch the module into the chassis. The front panel of the NI PXIe-4463 should be even with the front panel of the chassis.
10. Tighten the top and bottom module mounting screws, shown in Figure 2, to $0.31 \text{ N} \cdot \text{m}$ ($2.7 \text{ lb} \cdot \text{in.}$) on the top and bottom of the module front panel to secure the NI PXIe-4463 to the chassis.



Note Tightening the top and bottom mounting screws increases mechanical stability and also serves to electrically connect the front panel to the chassis, which can improve the signal quality and electromagnetic performance.

11. Power on the chassis.

Configure the Hardware in MAX

Use Measurement & Automation Explorer (MAX) to configure your National Instruments hardware. MAX informs other programs about which devices reside in the system and how they are configured. MAX is automatically installed with NI-DAQmx.

1. Launch MAX.
2. In the Configuration pane, expand **Devices and Interfaces** to see a list of installed devices. Installed devices appear under the name of their associated chassis.
3. Expand your **Chassis** tree item.



Note MAX lists all devices installed in the chassis. Your default device names may vary.

4. Record the device identifier MAX uses to identify the hardware. Use this identifier when programming the NI PXIe-4463.


Connect the NI PXIe-4463 Output

Figure 2 shows the front panel connections of the NI PXIe-4463 with BNC connectors and the NI PXIe-4463 with Mini-XLR connectors.



Note Refer to the *NI PXIe-4463 Specifications* for information about the operating output range and overvoltage protection.

Figure 2. NI PXIe-4463 BNC and Mini-XLR Connector Front Panel

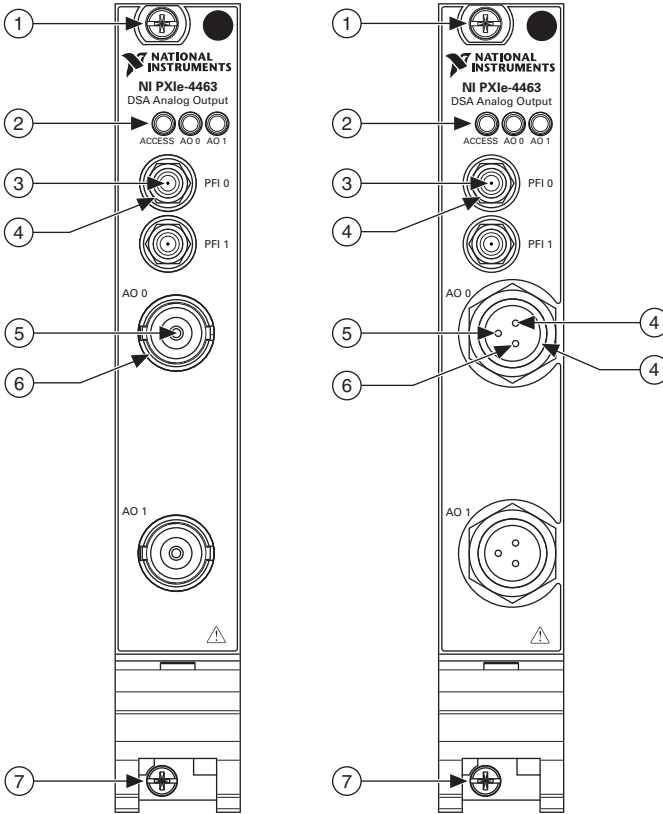


1	Top Module Mounting Screw	3	PFI	5	AO+	7	Bottom Module Mounting Screw
2	LEDs	4	Chassis Ground	6	AO-		

NI PXIe-4463 Output Connections

Figure 3 shows the NI PXIe-4463 analog output block diagram. Depending on the connector type, connect the signals as shown on the inset.

Figure 3. NI PXIe-4463 Analog Output Block Diagram

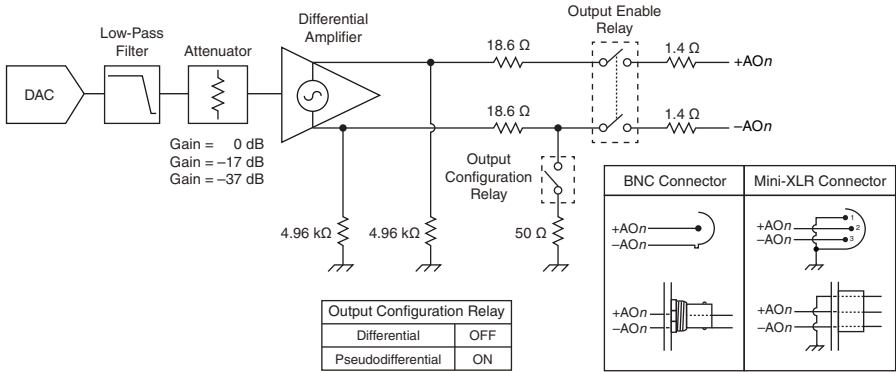

The NI PXIe-4463 output stage is a differential amplifier. The output stage can be configured to pseudodifferential mode in software, where the -AOn terminal is internally connected to chassis ground through a 50 Ω resistor. This connection introduces a gain difference in the output stage of -31.8 mdB, for which the software corrects automatically. Refer to the *NI-DAQmx Help* for more information about terminal configuration.

The NI PXIe-4463 output stage can also be configured to pseudodifferential mode by making an external connection between +AOn or -AOn to chassis ground. This connection introduces a gain change in the output stage of -34.8 mdB, for which the software does not correct.

For most applications, configuring the NI PXIe-4463 output stage in differential mode will yield the best performance. For improved common-mode noise rejection, it is highly recommended to make a connection between the chassis ground of the NI PXIe-4463 and the input device ground. This connection is critical when the input device is isolated; if this connection is not available, it may be better to configure the NI PXIe-4463 output stage in pseudodifferential mode.

Figures 4 and 5 show the recommended output connections for both connector types.

Figure 4. NI PXIe-4463 Mini-XLR Recommended Output Connection


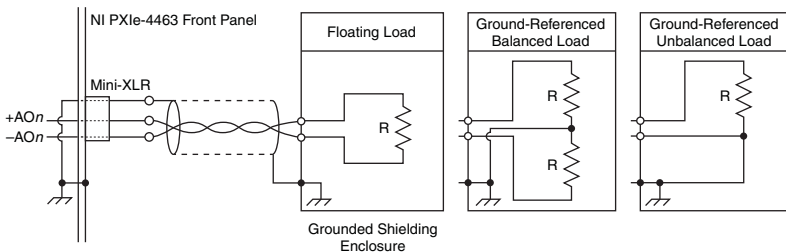


Figure 5. NI PXIe-4463 BNC Recommended Output Connection

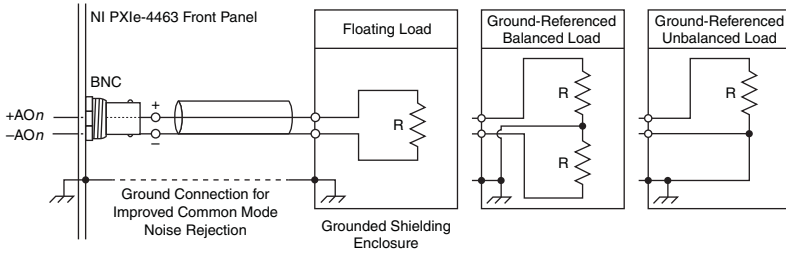

NI PXIe-4463 Front Panel LEDs

LEDs on the front panel of the NI PXIe-4463 provide information about basic hardware status and status of the analog output channels. Table 1 describes the function of the front panel LEDs.

Table 1. NI PXIe-4463 Front Panel LED Indicators

LED	Indications
ACCESS	<p>Indicates the basic hardware status of the analog output module.</p> <p>OFF—The module is not yet functional, or has detected a problem with a PXI power rail.</p> <p>AMBER—The module is being accessed.</p> <p>GREEN—The module is ready to be programmed.</p>
AO0, AO1	<p>Indicates the status of the AO0 or AO1 analog output channel.</p> <p>AMBER/GREEN (alternating)—The reference clock source is changing to onboard or PXIeClk100.</p> <p>AMBER (solid)—The channel is waiting for a trigger to start generating.</p> <p>GREEN (solid)—The channel is actively generating a signal.</p> <p>RED (solid)—An error has been detected on the channel or board. Possible errors include the following:</p> <ul style="list-style-type: none"> The board is overheated The power supply is not at the proper voltage A clocking error occurred (PLL fell out of lock or PXIeClk100 was not present when using the external timebase) An external overvoltage or overcurrent was detected* An overload was detected* A streaming underflow was detected on the channel Internal hardware failed (either due to software or hardware failure)
<p>* An external overvoltage, overcurrent, or overload error can be read through DAQmx property nodes.</p>	

Environmental Management

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *Minimize Our Environmental Impact* web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

Waste Electrical and Electronic Equipment (WEEE)



EU Customers At the end of the product life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste and Electronic Equipment, visit ni.com/environment/weee.

电子信息产品污染控制管理办法（中国 RoHS）



中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。关于 National Instruments 中国 RoHS 合规性信息，请登录 ni.com/environment/rohs_china。(For information about China RoHS compliance, go to ni.com/environment/rohs_china.)

Worldwide Support and Services

The National Instruments website is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

Visit ni.com/services for NI Factory Installation Services, repairs, extended warranty, and other services.

Visit ni.com/register to register your National Instruments product. Product registration facilitates technical support and ensures that you receive important information updates from NI.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world. For telephone support in the United States, create your service request at ni.com/support or dial 1 866 ASK MYNI (275 6964). For telephone support outside the United States, visit the Worldwide Offices section of ni.com/niglobal to access the branch office websites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

Refer to the *NI Trademarks and Logo Guidelines* at ni.com/trademarks for more information on National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products/technology, refer to the appropriate location: **Help>Patents** in your software, the `patents.txt` file on your media, or the *National Instruments Patents Notice* at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the *Export Compliance Information* at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private expense and is subject to the applicable limited rights and restricted data rights as set forth in FAR 52.227-14, DFAR 252.227-7014, and DFAR 252.227-7015.

© 2015 National Instruments. All rights reserved.